



CARVER[®]
YACHTS



38 SUPER SPORT OWNER'S GUIDE

HIN: CVRU2099D010

2010 Version 1

<https://www.boat-manuals.com/>



Marquis Yachts, L.L.C.
790 Markham Drive
P.O. Box 1010
Pulaski, WI 54162-1010
USA
Phone (920) 822-3214
Fax (920) 822-3213
www.carveryachts.com

Robert VanGrunsven
President

Congratulations and Welcome Aboard!

This Owner's Guide was designed to acquaint you with the safe, proper operation and maintenance of your new boat and its systems. Your first duty as Captain of your new Carver should be to read your Owner's Guide and all manufacturer-supplied operating and maintenance instructions found within your Owner's Information kit.

Be sure to mail in all manufacturer registrations and warranty cards to validate your Carver and OEM warranties. These warranty cards have been assembled and are contained in the OEM information packets within your Owner's Information kit.

If you're new to boating, learn the proper rules of seamanship to ensure the safety of your passengers. Refer to *Chapman's Piloting, Seamanship and Small Boat Handling* and attend a safe boating class offered by the U.S. Coast Guard Auxiliary, United States Power Squadron, or any enterprise experienced in conducting safe boating courses.

Thank you for choosing Carver. We're confident your new boat will provide you and your family with years of enjoyable cruising.

A handwritten signature in dark ink, appearing to read 'Robert VanGrunsven', followed by a horizontal line.

TABLE OF CONTENTS

Preface

| | |
|--|----|
| Using Your Owner's Information Kit | i |
| Owner's Guide | i |
| OEM Information | ii |
| Pre-Delivery Service Record | ii |
| Warranty Registration | ii |

Section 1 - Boating Safety

| | |
|---|----|
| Safe Operation | 1 |
| Emergency Procedures | 3 |
| Safety Equipment | 7 |
| Owner's Responsibilities | 9 |
| Carbon Monoxide (CO) Warnings | 12 |
| Preventing CO Exposure | 12 |
| Identifying CO Exposure | 14 |
| Treating CO Exposure | 15 |
| Other Health and Safety Information | 15 |
| Warning Labels | 15 |

Section 2 - DC Electrical System

| | |
|--|----|
| Batteries | 1 |
| Battery Maintenance | 4 |
| Operating the 12-Volt Equipment | 5 |
| DC Control Center | 6 |
| Bridge Breaker Panel | 7 |
| Safety Breaker Panel | 8 |
| Troubleshooting the DC Electrical System | 11 |
| DC Schematic | 12 |

Section 3 - AC Electrical System

| | |
|--|----|
| System Organization | 1 |
| AC Power Sources | 1 |
| Shore Power | 1 |
| Generator Power | 4 |
| Operating AC Equipment | 7 |
| AC Main Circuit Breaker Groups | 7 |
| AC Control Center | 8 |
| Ground Fault Circuit Interrupters | 11 |
| GFCI Receptacle Locations | 11 |
| Testing GFCI Receptacles | 12 |
| Electrical Loads | 13 |
| Bonding System | 13 |
| Troubleshooting the AC Electrical System | 14 |
| AC Schematic | 15 |

Section 4 - Internal Systems

| | |
|-----------------------------------|----|
| Air Conditioning System | 1 |
| Fresh Water System | 3 |
| Bilge System | 8 |
| Sanitation System | 11 |

Section 5 - Propulsion

| | |
|-----------------------------------|---|
| Fuel Systems | 1 |
| Fire Suppression System | 3 |
| Engine Room Ventilation | 4 |
| Cooling System | 4 |
| Exhaust System | 5 |
| Engine Gauges | 5 |
| Helm Controls | 7 |
| Preparing for Cruising | 8 |

TABLE OF CONTENTS

Section 6 - Operating and Maneuvering

| | |
|--------------------------------|---|
| Launching the Boat | 1 |
| Navigation | 1 |
| Controlling the Boat | 2 |
| Anchoring | 6 |
| Getting Underway | 8 |

Section 7 - Maintenance

| | |
|--------------------------------|----|
| Maintenance Schedule | 1 |
| Exterior Maintenance | 5 |
| Interior Maintenance | 9 |
| Mechanical Systems | 11 |


Section 8 - Winterization and Storage

| | |
|--|---|
| Winterization - Storage | 1 |
| Winterization - Systems | 2 |
| Spring Recommissioning Checklist | 8 |

Section 9 - Warranty and Parts

| | |
|--|-----|
| Warranty Information | 1 |
| Obtaining Warranty Service | 2 |
| Second and Third Owner Registration | 2 |
| OEMs | 3 |
| Specifications | 3 |
| Component Locations | 3 |
| Deck Plates | 4 |
| Thru-Hull Fittings | 5,6 |
| Hatches | 7 |
| Bill of Material | 8 |
| Carver Limited Warranty | 9 |

38 Super Sport Helm Controls

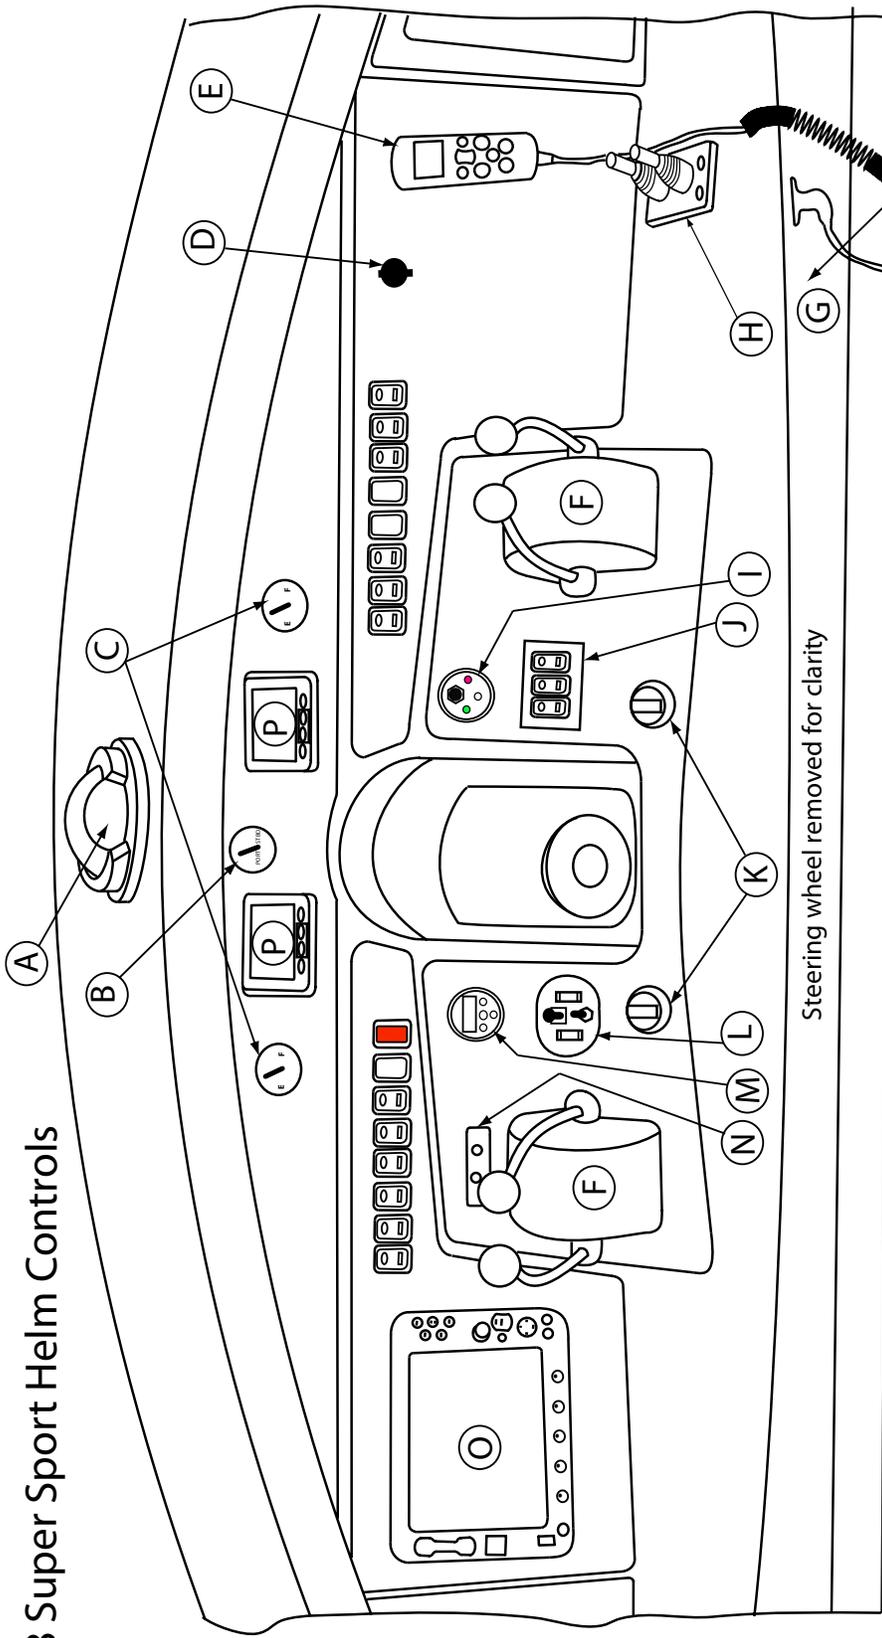

Steering wheel removed for clarity



- (A) Compass
- (B) Rudder Position
- (C) Fuel Gauges
- (D) DC Accessory
- (E) Raymarine Display Control
- (F) Shift/Throttle Controls
- (G) Fireboy Control
- (H) Joystick Docking Control
- (I) Fireboy Display
- (J) Engine Sync Controls
- (K) Ignition Switches
- (L) Search Light Control
- (M) Radio Controls
- (N) Engine Warning Lights
- (O) Raymarine Display
- (P) Engine Display Panels



Switch Panels

Using Your Owner's Information Kit

Your Owner's Information kit contains this Owner's Guide and a set of manuals referred to as "OEM information." Please read the Owner's Guide and OEM information carefully and familiarize yourself with your boat before operating the boat or any of its components or systems.

IMPORTANT: *The Owner's Information kit must be onboard whenever your boat is operated. If you sell your boat, make sure the new owner receives the entire kit.*

Owner's Guide

This guide explains how to safely operate and maintain your boat and its various systems. The guide also contains safety precautions and operational tips, as described below.



DANGER

Describes a hazard that can cause death or severe injury if the instructions are ignored.



WARNING

Describes a hazard that can cause serious injury and/or property damage if the instructions are ignored.



CAUTION

Describes a hazard that can cause damage to your boat or its components if the instructions are ignored.

NOTE: *Provides important information that can help you avoid problems.*

If this is your first boat, or if you are changing to a type of boat you are not familiar with, for your own comfort and safety, please obtain handling and operation experience before operating the boat. Your dealer, national sailing federation or yacht club can advise you of local sea schools or competent instructors.

NOTE: *Drawings and illustrations contained within this guide are included as graphic aids to assist in the general operation and maintenance of your boat. These drawings and graphics do not include all details of each system and are not drawn to scale. Do not reference these drawings to order parts or to service your boat. Contact your authorized Carver Dealer for any parts or service required for your boat.*

The information contained in this Owner's Guide was complete and accurate at the time the guide was printed. Carver reserves the right to change materials, part numbers, specifications, or system designs at any time without notice.

OEM Information

The OEM (Original Equipment Manufacturer) information is supplied by companies from whom Carver has purchased components to install in your boat. These components include, but are not limited to, standard items like the engines, sanitation system, various pumps, and 12-volt batteries, as well as optional items. The OEM information explains how to operate and maintain the components.

If you install an aftermarket accessory on your boat, add the OEM information that accompanies the accessory to the Owner's Information kit.

NOTE: If the OEM information conflicts with this Owner's Guide, follow the instructions in the OEM information.

Pre-Delivery Service Record

The Pre-Delivery Service Record that follows this page must be completed and signed by your Carver Dealer before you take delivery of your new Carver yacht. Your Carver Dealer will prepare your boat for delivery in accordance with the procedures detailed within this document.

Be certain that the boat's Pre-Delivery Service Record and all OEM warranty cards have been completed and mailed to their respective companies. Be sure you retain a copy of the Pre-Delivery Service Record for your own reference.

Warranty Registration

Carver warrants every boat we manufacture as explained in the Carver Limited Warranty. Your copy of the warranty is located in Section 9. Please review the warranty carefully.

The Warranty Registration that follows this page is the first step in activating your Carver limited warranty. This document must be completed and signed by you and your Carver Dealer before you take delivery of your new Carver yacht. Failure to complete and register this Warranty Registration could void your Carver limited warranty.

Your Carver Dealer will review the terms of the Carver warranty and make certain the warranty is registered with Carver.

To ensure that the warranty remains in effect during its lifetime, Carver Boat Corporation, your Carver Dealer, and you must each uphold specific responsibilities. These responsibilities are described in Section 9.

At time of delivery, make a complete inspection of the boat and its systems. Document any work that needs to be completed by the Dealer in order to meet the terms of your agreement.

There are two cards located at the end of this Preface. These are Second and Third Owner Registration Cards. We strongly recommend that the purchaser of a previously-owned Carver register ownership with Carver.

A TIP FROM CARVER!

There are many people within the Carver organization who are avid boaters. Some of the experience gained during our years of boating are presented in this Owner's Guide. This information is presented in box like this.



THIRD OWNER REGISTRATION

Owner's Name: _____

Street Address: _____

City: _____ State: _____ Zip Code: _____

Telephone: (____) _____ Date of Purchase: _____

Purchased From: _____

Boat Hull Identification Number: CDR _____

Third Owner Registration does not extend, alter, or transfer the Carver Limited Warranty. Refer to the Carver Limited Warranty for details.



SECOND OWNER REGISTRATION

Owner's Name: _____

Street Address: _____

City: _____ State: _____ Zip Code: _____

Telephone: (____) _____ Date of Purchase: _____

Purchased From: _____

Boat Hull Identification Number: CDR _____

Second Owner Registration does not extend, alter, or transfer the Carver Limited Warranty. Refer to the Carver Limited Warranty for details.

MARQUIS YACHTS, L.L.C.
PO BOX 1010
PULASKI WI 54162-1010

MARQUIS YACHTS, L.L.C
PO BOX 1010
PULASKI WI 54162-1010

Boating Safety

Boating safety is your responsibility. You must fully understand the operating procedures and safety precautions in the Owner's Information kit and this owner's guide before you operate your new boat. Safe boating is no accident.

Safe Operation

Safe operation includes, but is not limited to, the following.

- Keep your boat and equipment in safe operating condition. Inspect the hull, engines, safety equipment, and all boating gear regularly.

Note: Federal law requires you to provide and maintain safety equipment on your boat. Consult U.S. Coast Guard, state, and local regulations to ensure your boat has all required safety equipment onboard. Additional equipment may be recommended for your safety and that of your passengers. Make yourself aware of its availability and use.



- Be very careful when fueling your boat. Be sure you know the capacity of your boat's fuel tank and the amount of fuel used when operating at frequently used engine speeds (RPMs).
- Make sure you have enough fuel onboard for anticipated cruising requirements. In general, use 1/3 of your supply to reach your destination and use 1/3 to return. Keep 1/3 in reserve for changes in your plans due to weather or other circumstances.
- Be sure fire extinguishing and lifesaving equipment is onboard. This equipment must meet regulatory standards, and it should be noticeable, accessible and in proper operating condition. Your passengers should know where this equipment is and how to use it.
- Keep an eye on the weather. Be aware of possible changing conditions by checking local weather reports before your departure. Monitor strong winds and electrical storms.
- Always keep accurate, updated charts of the area you are cruising and back up charts if you use a chart plotter.
- Before you leave the port or harbor, file a Float Plan with a family member, relative, friend, or other responsible person ashore.
- Always operate your boat with care, courtesy and common sense.
- Instruct at least one passenger onboard in the basic operation of your boat. This person can take over if you unexpectedly become unable to do so.
- Do not allow passengers to ride on parts of your boat other than designated seating areas.
- Ask all passengers to remain seated while the boat is in motion.
- Do not use the boarding platform or boarding ladder while either or both of the engines are running.
- Understand and obey the "Rules of the Road." Always maintain complete control of your boat.
- Do not overload or improperly load your boat.
- Do not travel faster than conditions warrant or beyond your abilities.
- Do not operate your boat in weather or sea conditions beyond your skill and experience.
- Do not operate your boat while under the influence of drugs and/or alcohol.
- Do not operate your boat if your visibility is impaired.

Adverse Conditions

Weather

At all times, the boat operator should be aware of present weather conditions and the weather forecast. Check the forecast before you begin a day of boating. Be aware, however, that weather conditions can change rapidly. If you have a marine radio, listen to the weather reports issued by the U.S. Coast Guard and others. If you have a portable radio, keep it tuned to a station broadcasting frequent weather reports. Many boating clubs fly weather signals; learn to recognize these signals.

WEATHER SIGNALS
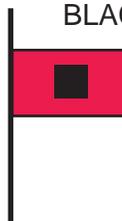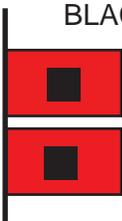
| | | | | | |
|-----------|--|--|-----------|---|---|
| Day Flags | Small Craft Adv Winds to 33 knots RED  | Gale Warning Winds 34 to 47 knots RED  | Day Flags | Storm Warning Winds 48 to 63 knots BLACK on RED  | Hurricane Winds of 64 + knots BLACK on RED  |
| | Night Lights |  RED WHITE | | Night Lights |  RED RED |

Storms rarely appear without advance notice. If storms are a possibility, keep a watch on the horizon, especially to the West, for their approach. Watch for changes in wind direction or cloud formations. There is no substitute for a good understanding of weather conditions and what to do when the weather takes a turn for the worse.

If a storm is approaching, the best course of action is to return to port. If you are unable to do so, then prepare to weather the storm:

- Close portlights, exterior doors and hatches and secure them. Stow all loose gear below deck and tie down any gear on deck.
- Reduce speed as the seas build. Make sure all persons onboard have put on their personal flotation devices.
- Drop a sea anchor over the stern to maintain the bow into the seas. If you do not have a sea anchor onboard, use a canvas bucket, tackle box, or other object that will work like an anchor.

Fog

Fog is a result of either warm-surface or cold-surface conditions. You can judge the likelihood of fog formation by periodically measuring the air temperature and dew point temperature. If the difference between these two temperatures is small, fog is likely to develop.

Remember the following guidelines:

- Unless your boat is well equipped with charts and navigational equipment, head for shore at the first sign of fog and wait until conditions improve. If you have charts on board, take bearings as fog sets in, mark your position, and continue to log your course and speed.
- Make sure all persons onboard put on their personal flotation devices.
- If your boat has sounding equipment, take soundings regularly and match them with depths shown on your charts.
- Station a person forward in the boat as a lookout.
- Reduce your speed. From time to time, stop engines and listen for other fog signals.
- Sound the horn or fog bell intermittently to warn others.
- If there is any doubt in continuing your excursion, anchor. Listen for other fog signals while continuing to sound your fog horn or bell.

Emergency Procedures

The following is not an exhaustive list of situations which may be encountered while boating. You should obtain training to handle any emergencies which may arise.

Fire

To help prevent a fire onboard your boat, keep your bilges clean and check for fuel vapors at regular intervals. Also, DO NOT fit free-hanging curtains or other fabrics in the vicinity of or above the stove top or other high-heat devices. Do not store any materials or equipment of any kind in the engine room.



DANGER

***Any fire onboard your boat is serious. Explosion is possible.
Develop a fire response plan. Respond immediately.***

Every boater should develop a fire response plan to determine what kind of fire (fuel, electrical, etc.) might break out, where it might break out, and the best way to react. Have a plan and, if possible, assign responsibilities to others to allow quicker decisions and reactions.

 **WARNING****Never:**

- **Obstruct passage ways to exits and hatches.**
- **Obstruct safety controls, such as fuel valves and electrical system switches.**
- **Obstruct portable fire extinguishers in lockers.**
- **Leave the boat unattended when cooking or heating appliances are in use.**
- **Use gas lights in the boat.**
- **Modify any of the boat's systems (especially electrical or fuel).**
- **Fill the fuel tanks when machinery is running or when cooking or heating appliances are in use.**
- **Smoke while handling fuel.**

Note: Everyone onboard should know where fire extinguishers are and how to operate them.

In case of fire:

- Stop the engines immediately.
- If the fire is in the engine room, shut off the bilge blowers immediately. Do not open the hatch to the engine room. The fire will flare up if the fresh air supply increases suddenly.
- Keep the fire downwind if possible. If the fire is aft, head into the wind.
- Have all persons onboard put on their personal flotation devices.
- If you can get at the fire, aim the fire extinguisher at the base of the flames and use a sweeping motion to put out the fire.
- If the fire gets out of control, make a distress signal and call for help on the radio.

Deciding whether to stay with the boat or abandon ship will be difficult. If the decision is to abandon ship, all persons onboard should jump overboard and swim a safe distance away from the burning boat.

Flooding

If your boat is taking on water from a leak in the hull, turn on your bilge pumps. Assign someone to bail out the bilge and investigate the cause of the flooding. When the source of the leak is found, attempt to repair it.

Almost anything can be stuffed into a hole to stop the leaking temporarily. Material used to stop a leak will work better if it is applied from the outside where water pressure can help hold it in. Station a crew member to hold the plug in place if the plug is applied from the inside. In all cases, assign a crew member or passenger to watch the plugged area and alert others if it fails.

Swamped or Capsized Boat

If your boat becomes swamped or capsizes, put on a personal flotation device immediately and set off a distress signal. Chances are good a capsized boat will stay afloat. For this reason, stay with the boat. Do not leave the boat or try to swim to shore except under extreme conditions. A capsized boat is easier to see than a swimmer, and the shore may be further away than it appears.

If water is coming over the bow, reduce headway and turn the boat slightly so that the bow is slightly off from meeting the waves head on. Drop a sea anchor over the stern of the boat and adjust the length of the line to hold the bow at the most favorable angle.

Collision

If a serious collision occurs, check everyone onboard for injuries, then inspect the boat to determine the extent of the damage.

- Prepare to help the other craft unless your boat or its passengers are in danger.
- If the bow of the other craft penetrated your boat's hull, prepare to plug the fracture once the boats are separated.
- Shore up the hole inside your boat with a spare life jacket or bunk cushion.
- While plugging the hole, trim weight to get the hole above the water level during repairs, if possible.
- If your boat is in danger of sinking, have everyone onboard put on their personal flotation devices.
- If your boat has a radio, contact the U.S. Coast Guard or other rescue authorities immediately on VHF channel 16 or CB radio channel 22. (You may also be able to use VHF channels 9 or 13 or your cellular phone in some states).

Running Aground

Excessive weight in the fore or aft sections of the boat will cause a trim change and may yield greater draft than expected. Equip your boat with a good quality depth-measuring instrument and allow ample water below the hull while operating.

If your boat runs aground, check everyone onboard for injuries, then inspect the boat for damage. If lightly grounded, shift the weight of the passengers or gear to heel the boat while reversing engines. If towing becomes necessary, use a commercial towing service.

WARNING

Never attach a tow line to a single deck cleat or anchor windlass. The cleats and windlass are not designed to take the full load of the boat and may pull free from the deck, causing serious injury or property damage.

Man Overboard

You should know what to do in case someone falls overboard. Emergency procedures are published in *Chapman's* and instruction is offered by the U.S. Coast Guard.

If a person falls overboard, hypothermia may be an immediate concern. Hypothermia occurs when a person's body loses heat faster than the body can replace it. If not rescued, the person will become exhausted or likely drown. In general, the colder the water, the faster body heat is lost. Personal flotation devices increase survival time because they provide insulation.

WATER SURVIVAL CHART

| Water Temp. (°F) | Exhaustion Unconsciousness | Expected Time of Survival |
|------------------|----------------------------|---------------------------|
| 32.5 | Under 15 min. | Under 45 min. |
| 32.5-40 | 15-30 min. | 30-90 min. |
| 40-50 | 30-60 min. | 1-3 hr. |
| 50-60 | 1-2 hr. | 1-6 hr. |
| 60-70 | 2-7 hr. | 2-40 hr. |
| 70-80 | 3-12 hr. | 3 hr.- Indefinite |
| Over 80 | Indefinite | Indefinite |

Medical Emergency

No one should act as a doctor if they are not properly trained and educated. Someone onboard your boat should know first aid. First aid training is available through your local Red Cross. Keep a fully stocked first aid kit onboard your boat at all times.

Equipment Failure

Steering, propulsion or control failure can be prevented by having your boat maintained correctly and checked periodically. If systems onboard your boat do fail, radio for help or signal with flags and wait until help arrives.

Radio Communication (U.S. only)

You are responsible for obtaining a radio operator's permit and knowing and following proper rules and procedures. Private boats are not required to have their radio on at all times; however, if your radio is on, it should be tuned to channel 16 unless it is being actively used. Channel 16 is the frequency for emergency calls or initial calls between boats. After establishing contact on channel 16, change your frequency to channel 22.

More information on radio communications can be found in *Chapman's Piloting*.

Distress Signals

The operator is required to lend assistance to a craft in distress as long as your life or boat is not put in harm's way in the process. In the United States, Good Samaritan laws protect you from any liability incurred while giving aid.

Safety Equipment (this next section to page 11 applies for U.S. ownership only)

Note: *Federal law requires you to provide and maintain safety equipment onboard your boat. Consult U.S. Coast Guard, state and local regulations to ensure your boat has all required safety equipment onboard. You must learn about any additional recommended equipment before operating the boat.*

Personal Flotation Devices (PFDs)

There must be one U.S. Coast Guard-approved wearable personal flotation device of Type I, II, or III for each person onboard your boat. The PFDs must be readily accessible and in serviceable condition. They must also be of a suitable size for each person onboard. Three PFDs (two wearable and one throwable) are required regardless of the number of persons onboard.

PFD Type I, Wearable: This offshore life jacket is most effective for all waters when rescue may be delayed. In the water, its design turns most unconscious people from a facedown position to a vertical or face-up position.

PFD Type II, Wearable: This near-shore buoyant vest is intended for calm inland waters where there is a chance of quick rescue. It turns its wearer to a face-up position, but the turning action is not as pronounced as the Type I, and it will not turn as many people under the same conditions as a Type I.

PFD Type III, Wearable: Classified as a flotation aid, this PFD will not turn a victim to a face-up position. This type of PFD is frequently used in water sports.

PFD Type IV, Throwable: You must also have onboard at least one throwable PFD Type IV device. The design of the Type IV device does not allow it to be worn. It must be thrown to a person in the water and held by the user until rescued. The most common Type IV PFDs are buoyant cushions or ring buoys. This PFD must be in serviceable condition and immediately available for use.

visual Distress Signals

The U.S. Coast Guard requires that all boats operating on U.S. coastal waters have visual distress signal equipment. Boats owned in the United States and operating on the high seas must also carry this equipment.

Visual distress equipment must be readily accessible and in serviceable condition. Both pyrotechnic and non-pyrotechnic equipment must be U.S. Coast Guard approved. This equipment can become ineffective with age. If your equipment's usage date has expired, replace the equipment before taking your boat out.

Approved pyrotechnic equipment includes:

- Hand held or aerial red flares
- Hand held or floating orange smoke
- Launchers for aerial red meteors or parachute flares.

Approved non-pyrotechnic equipment includes:

- Orange distress flag
- Dye markers
- Electric distress light.

No one signaling device is ideal under all conditions. Consider carrying of visual distress equipment are very important. Select devices with packaging that children, but not adults, will find difficult to open, especially if young children are onboard.

Sound Signaling Device

Your boat must have an operable device that can produce a sound signal if conditions require. A horn is standard equipment on all Carver models.

Boats longer than 39' 4", must have a bell and a whistle. These devices must meet the requirements of the Inland Navigational Rules Act of 1980. Refer to the U.S. Coast Guard's publication *Navigational Rules, International-Inland* for details on the appropriate signals.

Running and Navigation Lights

Your boat must have running and navigation lights for safe operation after dark. Observe all navigation rules for meeting and passing. Do not run at high speeds during night operation. Always use common sense and good judgment when operating your boat at night.

Radar Reflectors

Radar reflectors (if installed on your boat) should be 18", measured diagonally. They should be placed 12' above the waterline, otherwise, a boat with radar may have trouble "seeing" your boat.

Fire Extinguishers

Fire extinguishers must be approved by the U.S. Coast Guard. The U.S. Coast Guard classifies fire extinguishers by the type of fire they can extinguish. These classifications include foam, carbon dioxide, chemical, and Halon-type fire extinguishers. Below are the prepared.

Boats longer than 40' and shorter than 65': Because your boat has a fixed fire extinguishing system approved by the U.S. Coast Guard, Two Type B-I or one Type B-II extinguisher is required.

All fire extinguishers should be mounted in a readily accessible location away from the engine room. Everyone onboard should know where the fire extinguishers are and how to operate them.

If your fire extinguisher has a charge indicator gauge, cold or hot weather may affect the gauge reading. Consult the instruction manual supplied with the fire extinguisher to determine the accuracy of the gauge.

Check and maintain fire extinguishing equipment in accordance with its manufacturer's recommendations. Be sure to replace fire fighting equipment, if expired or discharged, by devices of identical or greater fire fighting capacity.

Recommended Equipment

In addition to required equipment, you may want to carry the following:

- Spare anchor
- Heaving line
- Fenders
- Flashlight
- Mirror
- Suntan lotion
- Spare propeller(s)
- Tool kit
- Ring buoy
- Navigational charts
- Mooring lines
- Binoculars
- Spare parts
- Spare pump

Owner's Responsibilities

There are several areas you must have knowledge of to operate your boat in a safe, responsible manner.

Safe Boating Courses

Your local U.S. Coast Guard Auxiliary and the U.S. Power Squadrons offer comprehensive safe boating classes several times a year. You may contact the Boat/U.S. Foundation at 1-800-336-BOAT (2628) or, in Virginia, at 1-800-245-BOAT (2628). For a course schedule in your area you may also contact your local U.S. Coast Guard Auxiliary or Power Squadron Flotilla or the time and place of their next scheduled class.

Carver also recommends that you read *Chapman's Piloting, Seamanship and Small Boat Handling* for further information on how to handle your boat in various situations.

Rules of the Road

Navigating a boat responsibly requires you to comply with a set of rules intended to prevent accidents. Just as you assume other car drivers know what they are doing, other boaters assume you know what you are doing.

As a responsible boater, you must comply with the marine traffic rules enforced by the U.S. Coast Guard. There are two sets of rules: the United States Inland Navigational Rules and the International Rules. The United States Inland Rules apply to all vessels inside the demarcation lines separating inland and international waters. The U.S. Coast Guard lists the traffic regulations in its publication *Navigational Rules, International-Inland*. You can get a copy from your local U.S. Coast Guard Unit or the United States Coast Guard Headquarters, 1300 E. Street NW, Washington, D.C. 20226.

Other helpful publications available from the U.S. Coast Guard include *Aids to Navigation* (U.S. Coast Guard pamphlet #123), which explains the significance of various lights and buoys; the *Boating Safety Training Manual* and *Federal Requirements For Recreational Boats*. Check with your local U.S. Coast Guard station, your Carver Dealer, or a local marina about navigational aids unique to your area.

Documentation

The owner of a boat registered with the U.S. Coast Guard is issued a Certificate of Number. This certificate must be onboard whenever the boat is in use. State registration is also required. Check with the U.S. Coast Guard or your state regulatory agency to determine what other records are required on your boat.

In addition to required documents, it is strongly recommended that you maintain the following logs. Log books are available from maritime supply stores.

- A navigation log containing engine speeds, compass courses and time records, which are essential for both cruising and maintenance purposes.
- A radio log, which is mandatory on vessels required to have a radio. A radio log can be useful to record unusual events, especially for future litigation.
- A maintenance log to track the type and frequency of maintenance procedures performed on your boat and its systems. Refer to Section 7 for more information on maintaining your boat.
- An engine/fuel log, which is essential for calculating range and fuel requirements.
- A GPS/Loran log if your boat contains this equipment.

Drugs and Alcohol

Drugs and alcohol adversely affect a person's ability to make sound judgments, react quickly and, in general, safely operate a boat. As a responsible boater, you must refrain from using drugs or alcohol while operating your boat. Operating a motorized boat while under the influence of drugs or alcohol carries a significant penalty.

Distress Calls

If you have a ship-to-shore radio telephone, heed storm warnings and answer any distress calls from other boats. The word "**MAYDAY**" spoken three times is the international signal of distress. Monitor marine radio channel 16 which is reserved for emergency and safety messages. You can also use this channel to contact the U.S. Coast Guard or other boaters if you have trouble. **Never send a "MAYDAY" message unless there is a serious emergency and you are in need of immediate assistance.**

voluntary Inspections

The U.S. Coast Guard Auxiliaries or state boating officials in many states offer courtesy inspections to check your boat for compliance with safety standards and required safety equipment. You may voluntarily consent to one of these inspections, after which you are allowed time to make corrections without prosecution. Check with the appropriate state agency or the U.S. Coast Guard Auxiliary for details.

Boating Accidents

The operator of a vessel used for recreational purposes is required to file a report whenever an accident results in loss of life or disappearance from a vessel, an injury requiring medical treatment beyond first aid, property damage in excess of \$200 or complete loss of the vessel.

In cases of death and injury, reports must be submitted within 48 hours. In other cases, reports must be submitted within 10 days. Reports must be submitted in the state where the accident occurred.

Boating Regulations

It is your responsibility to make sure that your boat is in compliance with all federal, state and local regulations. Check with your local U.S. Coast Guard office for relevant federal regulations. Your state's Department of Natural Resources may have some publications available which deal with relevant state laws.

Garbage

Dumping garbage into the sea is a worldwide problem. U.S. Coast Guard regulations prohibit dumping plastic refuse and garbage mixed with plastic into any waters, and restrict the dumping of other forms of garbage. It is essential that all boaters help to clean our waterways by properly disposing of all garbage.

Oil

The Federal Water Pollution Control Act prohibits the discharge of oil or oily waste into or upon the navigable waters and contiguous zone of the United States if such discharge causes a film or sheen upon, or discoloration of, the surface of the water, or causes a sludge or emulsion beneath the surface of the water. Violators are subject to a significant fine.

Septic Waste

On U.S. inland and coastal waters, it is illegal to discharge septic waste directly overboard. If your boat is equipped with an overboard discharge option, check with your local U.S. Coast Guard office to be sure that you are in compliance with federal regulations.

State and Local Ordinances

Your state or locality may have laws limiting speed, noise, or your boat's wake. Check with your harbor master to find out whether your boat's operation is restricted in any way by local ordinances or state laws. Check with state and local authorities to make sure that you are in compliance with local regulations regarding marine sanitation, noise, speed and wake.

Pre-Departure Actions

- Check the weather. Make sure conditions and seas will not be hazardous during your voyage.
- Make sure all safety equipment is onboard, accessible and in good working condition.
- Check the bilge for fuel vapor or water. Ventilate or pump out the bilge as necessary.
- Be sure the horn, navigation equipment and lights are working properly.
- Instruct guests and crew in safety and operational matters.
- Check engine and transmission oil and coolant levels. After starting the engines, check the overboard flow of cooling water, engine temperatures and oil pressures.
- Fill fuel tanks as full as you need. Know your tank capacity and fuel consumption at various RPMs and the cruising radius this gives you. When estimating your range, it is best to count on using 1/3 of your fuel to reach your destination and 1/3 of your fuel to return, with the remaining 1/3 of your fuel in reserve for emergencies.
- Have a second person onboard capable of taking over the boat's operation in case you are disabled.
- Before departing, inform a friend or relative where you intend to cruise and when you will return so they can tell the U.S. Coast Guard where to look and the type of boat in case you are delayed. Remember to tell them of your safe return to prevent false alarms. Do not file a float plan with the U.S. Coast Guard. They do not have the manpower to monitor all boats.
- Stow all loose gear securely. Fenders and docklines should be stowed immediately after getting underway.

Carbon Monoxide (CO) Warnings


Carver has installed CO detectors on your yacht. Have these detectors professionally calibrated at regular intervals.



Carbon monoxide (CO) is a colorless, odorless and tasteless gas which is emitted in all engine and generator exhaust. Prolonged exposure to CO can result in unconsciousness, brain damage and death.

Preventing CO Exposure

To help prevent the accumulation of CO in your boat's cabin and in enclosed exterior areas open a forward hatch, porthole or window to allow air to travel through the boat's interior, have a trained marine technician inspect the boat's exhaust systems whenever the boat is in for service or if you notice a change in the sound of an engine or the generator.

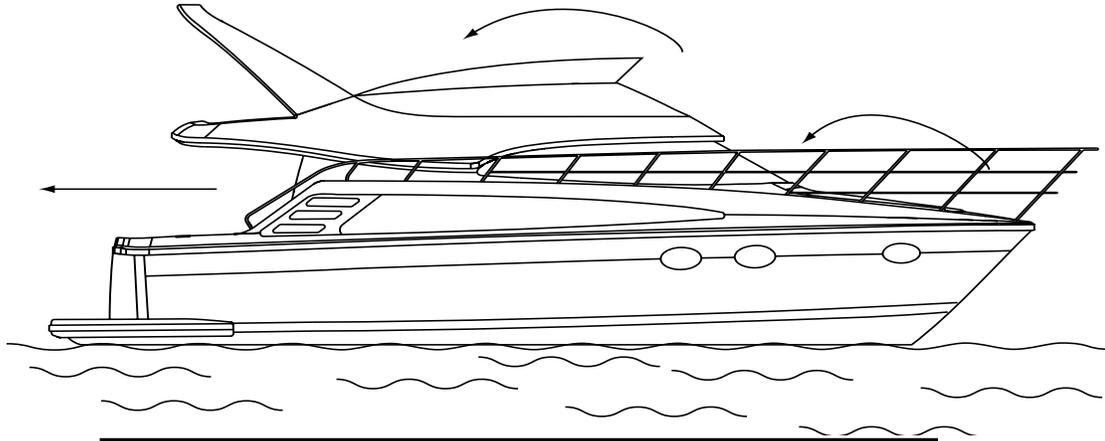

| | |
|-----------------|---|
| ⚠ DANGER | |
| | <p>CARBON MONOXIDE (CO) WILL CAUSE SERIOUS INJURY OR DEATH STAY CLEAR FROM EXHAUST PORT WHEN ENGINE IS RUNNING</p> |

⚠ DANGER

People sleeping onboard can easily be overcome by carbon monoxide without realizing it. Do not sleep while the engines or generators are running.


- Keep the engine room hatch closed when operating the engines and generator.
- Do not occupy aft lounging areas, including the boarding platform, or swim near the engine or generator exhaust outlets while the engines or generator are running.
- Because CO production is greater when the engines are cold, minimize the time spent getting underway.
- Maintain the propulsion and generator engines to optimize their efficiency; this in turn reduces CO emissions.

For additional information on carbon monoxide as it relates to boating, please contact marine organizations that produce safety publications.

For information on how to get a free VESSEL SAFETY CHECK, visit www.vesselsafetycheck.org or contact your local U.S. Coast Guard Auxiliary or United States Power Squadrons®.


- U.S. Coast Guard Auxiliary: 1-800-368-5647 or on the Internet at: www.cgaux.org
- U.S. Power Squadrons: 1-888-FOR-USPS (1-888-367-8777) or on the Internet at: www.usps.org

The following chart displays some possible situations where CO may accumulate. Become familiar with these examples and the suggested precautions to help prevent a dangerous accident.

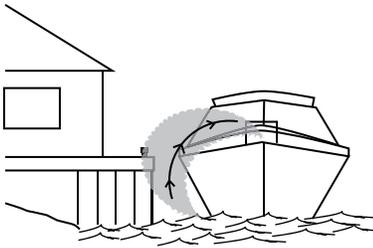


Blockage of exhaust outlets can cause carbon monoxide to accumulate in the cabin and cockpit area - even when the hatches, windows, portholes and doors are closed.

PRECAUTION: Never operate the generator while the boat is moored against any other boat, dock or wall structure that could block the exhaust outlet.

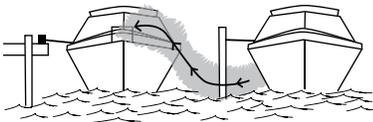


Exhaust from another vessel alongside your boat, while docked or anchored, can emit poisonous CO gas inside the cabin and cockpit areas of your boat.

PRECAUTION: Be alert for generator and engine exhaust from other vessels alongside your boat. Provide adequate ventilation.

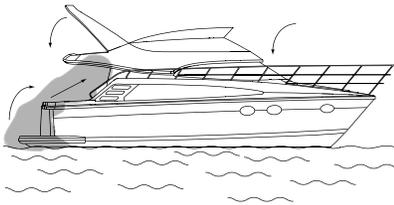


The *station wagon effect* or back drafting can cause CO gas to accumulate inside the cabin, cockpit and bridge areas when operating the boat at a high bow angle or with improper or heavy loading.

PRECAUTION: Provide adequate ventilation, redistribute the load or bring your boat out of high bow angle. Open forward hatch or window.

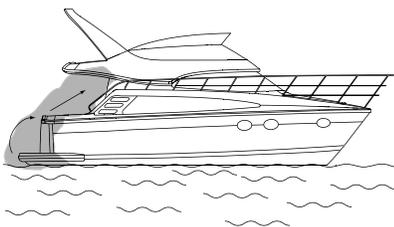

CO gas can accumulate in the cabin, cockpit and bridge areas when operating your boat at **slow speeds or when the boat is stopped in the water.** A tail wind can also increase accumulation (force of wind entering from aft section of yacht).

PRECAUTION: Provide adequate ventilation or slightly increase speed if possible. Open forward hatch or window.

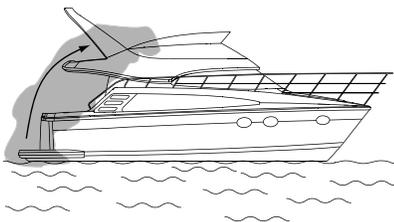

The *station wagon effect* or back drafting can cause CO gas to accumulate inside the cabin, cockpit or bridge areas when the boat is underway using protective weather coverings.

PRECAUTION: Provide adequate ventilation when the canvas top, side or back curtains are in their closed, protective positions. Open forward hatch or window.

Identifying CO Exposure

In high concentrations, CO can be fatal in minutes; however, the effects of lower concentrations can also be lethal. Symptoms of exposure to CO are:

- Watering and itchy eyes
- Throbbing temples
- Inability to think coherently
- Ringing in the ears
- Headache
- Incoherence / slurred speech
- Dizziness
- Vomiting
- Convulsions
- Flushed appearance
- Inattentiveness
- Loss of physical coordination
- Tightness across the chest
- Drowsiness
- Nausea
- Fatigue
- Collapse

Treating CO Exposure

If you suspect that someone is suffering from exposure to CO, take the following actions immediately:

- Thoroughly ventilate the area if possible
- Evacuate the area and move the affected person(s) to a fresh air environment
- Administer oxygen, if available
- Get medical assistance
- Determine the probable source of the CO and correct the condition.

Other Health and Safety Information



WARNING

Engine exhaust, some of its constituents, and a wide variety of components contain or emit chemicals known to the State of California to cause cancer and birth defects and other reproductive harm. In addition, oils, fuels and fluids contained in boats as well as waste produced by component wear contain or emit chemicals known to the State of California to cause cancer and birth defects or reproductive harm.



CAUTION

Battery posts, terminals and related accessories contain lead and lead compounds. Wash your hands after handling. Used engine oil contains chemicals that have caused cancer in laboratory animals. Always protect your skin by washing thoroughly with soap and water.

Warning Labels

Warning labels are posted throughout your boat to protect you, your passengers, your boat and its equipment, and any personal property on the boat. It is important to read, understand and obey all warning labels. Failure to obey a warning label may result in serious injury or damage to the boat, its equipment, or any personal property on the boat.

This page intentionally left blank.

DC Electrical System

Your boat is equipped with a 12-volt DC (Direct Current) electrical system. This is a comprehensive system that is designed to meet your present and future 12-volt electrical needs. Wire-runs and connections are positioned to prevent abrasion and exposure to moisture, as well as to remain accessible for inspection, repairs, and the addition of aftermarket electrical accessories.

Wires used throughout the DC electrical system are plastic coated and color-coded. Connections are made using crimped connector points. The electrical system is virtually maintenance free, with only the accessory batteries requiring periodic inspection and maintenance.

Batteries

The DC electrical system is divided into three areas, each powered by one or more 12-volt batteries:

- Engine Batteries (2) /Thruster Batteries (2)
- Accessory Battery (1)
- Generator Battery (1)

Each battery can be identified by labels attached to both its positive and negative cables.

Engine Batteries

Each propulsion engine has its own dedicated battery. Also, electricity from each battery to its engine is controlled by a master disconnect switch. To provide electricity to the engines, turn the master disconnect switches to the ON position.


The master disconnect switches are located in the engine room on the forward bulkhead.

! DANGER


Carefully follow the procedures described in Section 5 before starting your boat's engines. Improper starting procedures can create hazardous situations.

NOTE: You do not need to start the engine to activate its voltmeter. Refer to the OEM information for details on operating the engines.

Battery Disconnects - Engine Room Forward

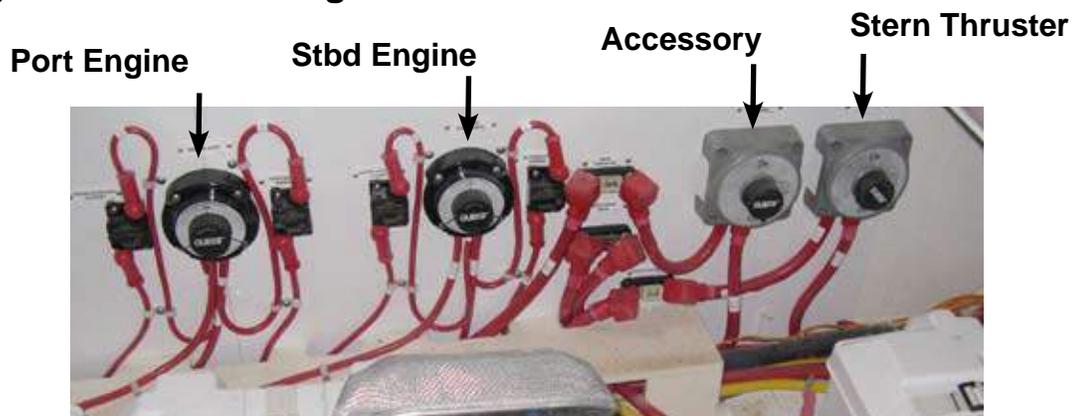

Batteries- Engine Room Forward

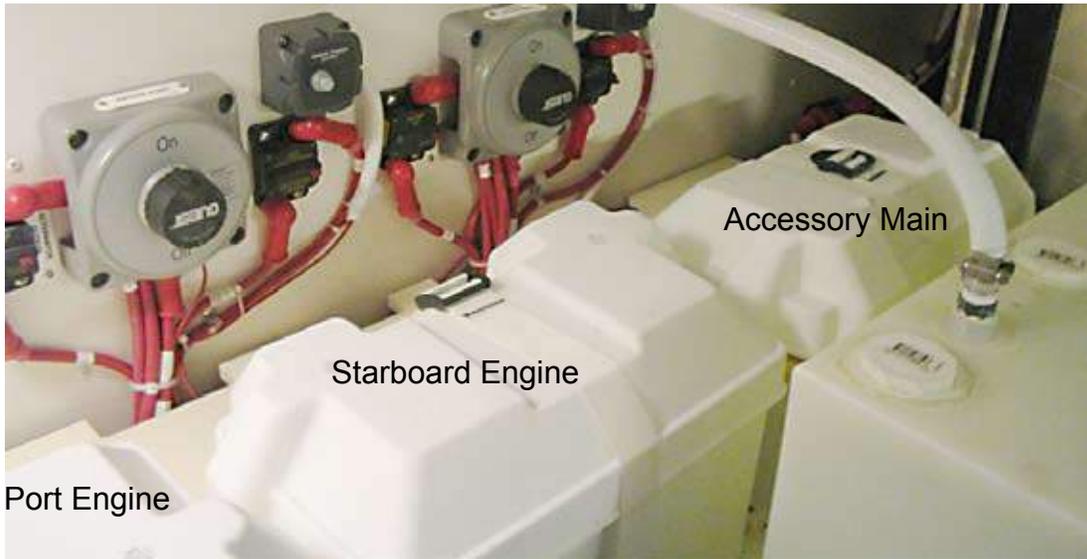

Batteries and Disconnect Switch- Generator Aft



Generator Disconnect




Refer to page 5 section 3 for location of Generator

Generator Battery

Accessory Battery



Electricity from the battery to the Safety Breaker Panel is controlled by a master disconnect switch. This switch is located in a cabinet in the starboard side of the salon. To provide electricity to the Safety Breaker Panel, turn the master disconnect switch to the ON position. Circuit breakers on the Safety Breaker Panel control the other DC circuit breaker panels.

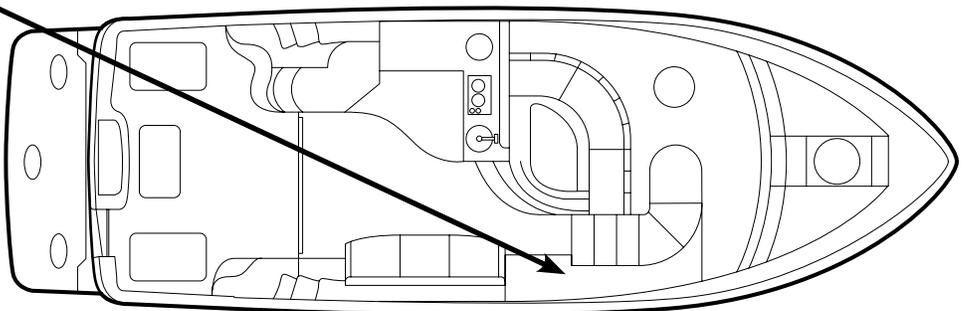

Safety Breaker Panel and Battery Chargers - Engine Room



DC Volt Meter

DC Control Panel - Salon



Generator Stop/Start

Monitoring Battery voltage Levels

A fully charged battery that has not been charged or discharged for at least two hours should indicate between 12.3 and 12.6 volts; a fully charged 24-volt battery pair that has not been charged or discharged for at least two hours should indicate between 26 and 28 volts. A reading below this level indicates a partially discharged battery.

Engine Batteries

You can determine the voltage level of each engine battery by activating the battery's dedicated voltmeter. The voltmeters are located with the other engine gauges at the helm. To activate each engine's voltmeter, turn the engine's ignition key one position to the right.

Accessory Batteries

You can determine the voltage level of the Accessory Batteries using the voltmeter located on the DC Control Center. To activate the voltmeter:

1. Turn the Accessory Battery master disconnect switch to the ON position.
2. Switch the Main - One circuit breaker on the Safety Breaker Panel ON.
3. Switch the System DC Main circuit breaker on the DC Control Center ON.

Charging the Batteries

While the engines are running, their alternators generally supply enough power to replace the power used by the boat's 12-volt equipment.

Without an engine running, however, the 12-volt equipment will eventually drain the batteries they are using. If this occurs, either start the engines or use the onboard battery charger to recharge the batteries.



CAUTION

Never allow the boat's batteries to become completely discharged. Completely discharging a battery can damage it to the point that it can no longer be recharged. The battery chargers should always be operating when your boat is connected to shore power. If you leave your boat for an extended period of time and the boat is not connected to shore power, turn all battery master disconnect switches to the OFF position.

Generator Battery Charger

The voltage level of the generator battery is monitored and maintained by a single 10 amp battery charger. Additionally, when the generator is operating, its alternator maintains the voltage level of the generator battery.

Engine/Accessory Battery Charger

The voltage level of both engine and both accessory batteries are monitored and maintained by a single 60 amp battery charger. The battery chargers are located in the engine room bulkhead.

To operate the battery chargers:

1. Provide AC power to the boat, from either a shore power source or the generator. Refer to Section 3 - Shore Power and/or Generator Power for more information.
2. On the AC Control Center, switch the Battery Charger 2 circuit breaker ON. Refer to Section 3 - Battery Charger 2 for more information on this circuit breaker. The generator battery charger now automatically charges the generator battery when their voltage drops below a predetermined level.

Battery Maintenance

While the batteries are relatively maintenance-free, there are a few things you can do to increase their effectiveness and life.



DANGER

The batteries contain electrolyte which is an acid. Wear gloves and protective eyewear when working on and around the batteries.

- Keep the batteries fully charged. Batteries that are kept fully or near fully charged last longer than batteries stored with a partial charge. The charge level of the batteries can be monitored using the voltmeters on the helm instrument panel.
- Inspect the batteries at least once every 30 days.
- When servicing the batteries avoid spilling electrolyte into the engine room or bilge. Also, avoid getting any salt water in or on the battery. Either of these conditions can create a poisonous gas that is harmful if inhaled.

If you spill electrolyte:

1. Ventilate the area of the spill.
2. Neutralize the acid in the electrolyte by pouring baking soda on the spill.
3. Remove the neutralized electrolyte using a disposable rag or paper towel.



WARNING

Disconnect the batteries before cleaning them.

- Periodically clean the battery terminals and cable connections. Remove any accumulation of dirt on the top of the battery case. Use a wire brush to clean the terminals. Coating the terminals with a terminal protecting product will help reduce corrosion that can form in these areas.
- Check that the battery cables are securely attached to the terminal posts. Tighten the terminal nuts $\frac{1}{4}$ turn beyond finger-tight using a wrench.
- The batteries are sealed so you do not need to check the electrolyte levels.
- Remove the batteries from the boat during periods of extended storage. Store your batteries in a cool (above freezing temperature), dry area. All batteries lose some charge during storage, but the lower the temperature the less charge is lost. Avoid storing the batteries in a humid place. Humidity causes the terminals to corrode.

Operating the 12-volt Equipment

Power to your boat's 12-volt equipment is controlled by circuit breakers and, in most cases, individual controls for each piece of equipment.

Your boat contains three 12-volt circuit breaker panels:

- DC Control Center
- Bridge Breaker Panel
- Safety Breaker Panel

The circuit breakers on these panels enable you to control either the equipment itself or to the equipment's controls by switching the breakers ON or OFF. All three panels also protect the electrical system by automatically disconnecting the circuit from the power source in the event of a short or overload. Power is supplied to these circuit breaker panels by the accessory batteries.



WARNING

Never reset a breaker that has been automatically tripped without first correcting the problem. Failure to follow this procedure may create a dangerous situation.

NOTE: *Sometimes a circuit breaker location is labeled but no circuit breaker is present. In this case, the component named on the label is an option that is not installed on your boat.*

DC Control Center

The DC Control Center, located in the cabinet on the starboard side of the salon, manages the power supply to most of the boat's 12-volt equipment, except for the equipment on the bridge.

To provide power to this breaker panel:

1. Turn the Accessory Battery master disconnect switch to ON position.
2. On the Safety Breaker Panel, switch Main - One and Main - Two circuit breakers ON.

The DC Control Center contains the switches, gauges and circuit breakers described in the following pages.

Bilge Blower

Use this switch to operate the four bilge blowers.

DvD - Forward and Mid

These breakers control the optional DVD players. To supply power to the DVD players, switch these breakers ON. Refer to the OEM information for details on operating the DVD player.

Generator

Use this switch to start and stop the generator. Refer to the OEM information for details on operating the generator.

Fresh Water Level Gauge

This gauge indicates the amount of fresh water in the water tank.

Head Fan - Forward Stateroom

This breaker controls the exhaust fan switch in the head.

Lights - All Marked Breakers

These breakers control the light switches indicated on the panel

Pressure Water Pump

This breaker controls the fresh water system's pressure water pump. After the fresh water tank is filled, switch this breaker ON to activate the pressure water pump. Refer to Section 4 - Pressurizing and Priming the Water System for information on using the pressure water pump to fill and prime the water system.

Refrigerator

This breaker controls the galley's refrigerator. The refrigerator can operate on either 110-volt AC power or 12-volt DC power. Refer to the OEM information for details on operating the refrigerator.

Spare(s)

These breakers are reserved for aftermarket accessories you install on your boat.

Spotlight

This breaker controls the control panel for the spotlight. The controls are located at the helm. Refer to the OEM information for details on operating the spotlight.

Stereo

This breaker controls the optional stereo indicated on the panel.

voltmeter

The voltmeter indicates the amount of voltage that is being provided by the accessory battery. When the Accessory Battery master disconnect switch, Safety Breaker main, and DC Control Center Panel are ON and the accessory batteries are fully charged, the voltmeter should read 12.3 to 12.6 volts. If the DC electrical system is not operating properly, contact a qualified electrician.

Waste Monitor

This breaker controls the waste tank's monitoring system. The system's display, one located next to each toilet, indicates when the waste tank is $\frac{3}{4}$ full.

Waste Pump - Forward


This breaker controls the pump switch for the optional overboard discharge system. Use the pump to empty the waste tank directly overboard. Refer to Section 4 - Overboard Discharge for information on using the pump.

Water Level Gauge

This gauge indicates the amount of water in the fresh water tank.

Water Monitor

This breaker controls the fresh water tank's monitoring system, including the water level gauge.

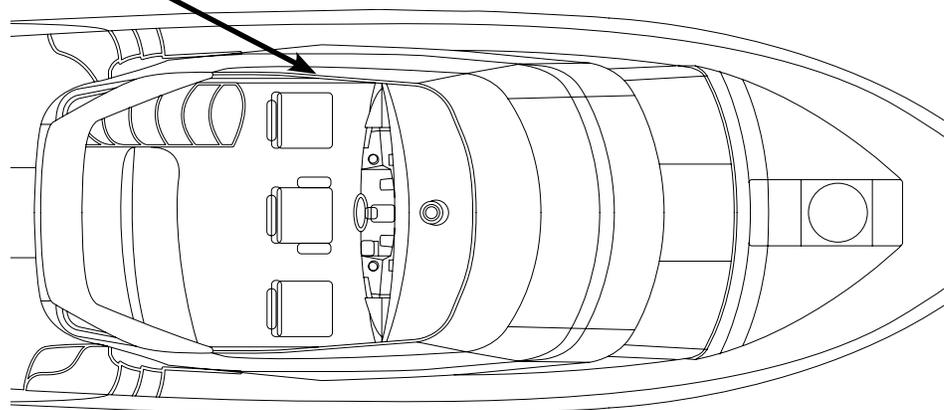Bridge Breaker Panel

Bridge Breaker Panel

The Bridge Breaker Panel, located below the port side of the bridge helm, protects the circuitry between the DC Control Center and the optional electronics package installed at the helm. The circuit breakers on this panel are normally ON and cannot be manually switched OFF. To reset a tripped breaker, press its button.


To provide power to this breaker panel:

1. Turn the Accessory Battery master disconnect switch to ON position.
2. On the Safety Breaker Panel, switch the Main - Two circuit breaker ON.
3. On the DC Control Center, switch the Bridge Electronics circuit breaker ON.

The Bridge Breaker Panel contains numerous circuit breakers That affect various circuits on the boat. Among them are Lights (Navigation, Panel, Exterior and Searchlight.

There are breakers there for bilge blowers and numerous openings for any accessory that maybe added later.

Safety Breaker Panel - Engine Room

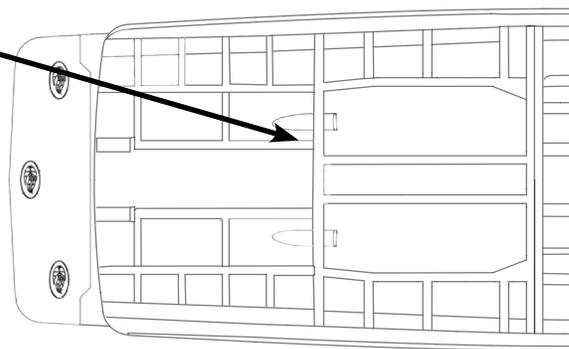

Safety Breaker Panel

The Safety Breaker Panel, located in the engine room manages the power supply to various safety and other equipment.

Because of the importance of the safety equipment, the circuit breakers on this panel should remain ON at all times.

Power is always provided to the three Auto Bilge Pump, Auto Sump, CO Detector, both Stereo Memory and High Water circuit breakers on this panel. To provide power to the other circuit breakers, except the Electric Shift breakers, the Accessory Battery master disconnect switch must be turned to the ON position. To provide power to the Electric Shift circuit breakers, both engine battery master disconnect switches must be turned to the ON position. The Safety Breaker Panel contains the switches and circuit breakers described below.

Auto Bilge Pump - Forward, Mid, and Aft

These breakers control the bilge pumps. Each pump is activated automatically by a float switch whenever water within the bilge rises to a predetermined level. Make sure these breakers are ON whenever the boat is in the water.

NOTE: Periodically test each bilge pump -- refer to OEM information for this procedure. The pump should turn on when the test circuit is complete.

Auto Sump

This breaker controls the sump pump. The sump pump is needed to pump shower waste water, sink waste water and air conditioning condensation overboard or into the optional grey water holding tank. The sump pump is activated automatically by a float switch whenever water within the sump rises above a predetermined level. Make sure the Auto Sump circuit breaker is ON before using the shower, sinks or air conditioning.

CO Detector

Carver has installed carbon monoxide (CO) detectors on your boat for your safety. The CO detectors continuously check the air in the boat's cabin for the presence of carbon monoxide. The CO Detector circuit breaker must be ON for the CO detectors to operate.

! DANGER

Make sure the CO detectors are activated when the boat's engines or generator are running. Carbon monoxide is dangerous. Refer to Section 1 - Carbon Monoxide (CO) Warnings for information on minimizing, detecting and controlling carbon monoxide accumulation.

When the CO detectors are operating, they alert you to the presence of carbon monoxide in the cabin by emitting a loud, high pitched sound. If you hear this alarm, determine the cause of the CO accumulation and correct it immediately.

There is a test button on each CO detector. Test each unit on a weekly basis. If you suspect that a CO detector is faulty, have your dealer repair or replace it immediately. Refer to Section 1 - Carbon Monoxide (CO) Warnings for more information on CO.

Electric Shift - Port and Starboard

These breakers control the optional electronic shift/throttle levers at the helm. These breakers must be ON for the shift/throttle levers to function. Refer to Section 5 - Helm Controls and the OEM information for details on operating the shift/throttle system.

High Water Alarm

This breaker controls the high bilge water alarm. Refer to Section 4 - Bilge System for a description of the high bilge water alarm. Make sure this breaker is ON whenever the boat is in the water.

Main - One

This breaker protects the circuitry between the DC Control Center and the Accessory Battery. This breaker must be ON to provide power to the DC Control Center.

Main - Two

This breaker helps protect the circuitry between the Bridge Breaker Panel and the Accessory Battery. This breaker must be ON to provide power to the Bridge Electronics circuit breaker on the DC Control Center, which in turn provides power to the Bridge Breaker Panel.


vacuum Heads - Forward and Aft

These breakers control the vacuum pump for each toilet. Pressing the foot lever at the base of the toilet then flushes the toilet. Refer to the OEM information for details on operating the toilets.

Windlass

This breaker controls the controls that operate the windlass. A set of windlass controls are located both at the helm and on the fore deck. Refer to the OEM information for details on operating the windlass.

| Problem | Possible Cause | Possible Solution |
|--|--|---|
| 12-volt equipment does not function. | Accessory Battery master disconnect switch is in the OFF position. | Turn the switch to the ON position. |
| | Main-One or Main-Two circuit breaker on the Safety Breaker Panel is OFF. | Turn both circuit breakers ON. |
| | DC Main circuit breaker on the DC Control Center is OFF. | Turn both circuit breakers ON. |
| | Main circuit breaker on the DC Control Center is OFF. | Turn both circuit breakers ON. |
| | Battery is weak or dead. | Start the engines or activate the appropriate battery charger. |
| Individual 12-volt component does not function. | Circuit breaker for that component is OFF or tripped. | Switch the circuit breaker for that component ON. |
| | Battery is weak or dead. | Start the engines or activate the appropriate battery charger. |
| | A wire within the 12-volt system is loose or disconnected. | Locate and repair the wire. |
| Cabin lights do not come on or are dim. | The appropriate circuit breaker(s) on the DC Control Center is OFF. | Switch circuit breaker(s) ON. |
| | Battery is weak or dead. | Start the engines or activate the engine/accessory battery charger. |
| | One or more light bulbs are burned out. | Replace light bulb(s). |
| Battery does not hold a charge. | Battery failed. | Replace with a new battery. |
| Engine is running and voltmeter does not indicate adequate voltage. | Engine alternator belt is loose. | Refer to engine OEM information to tighten the belt. |

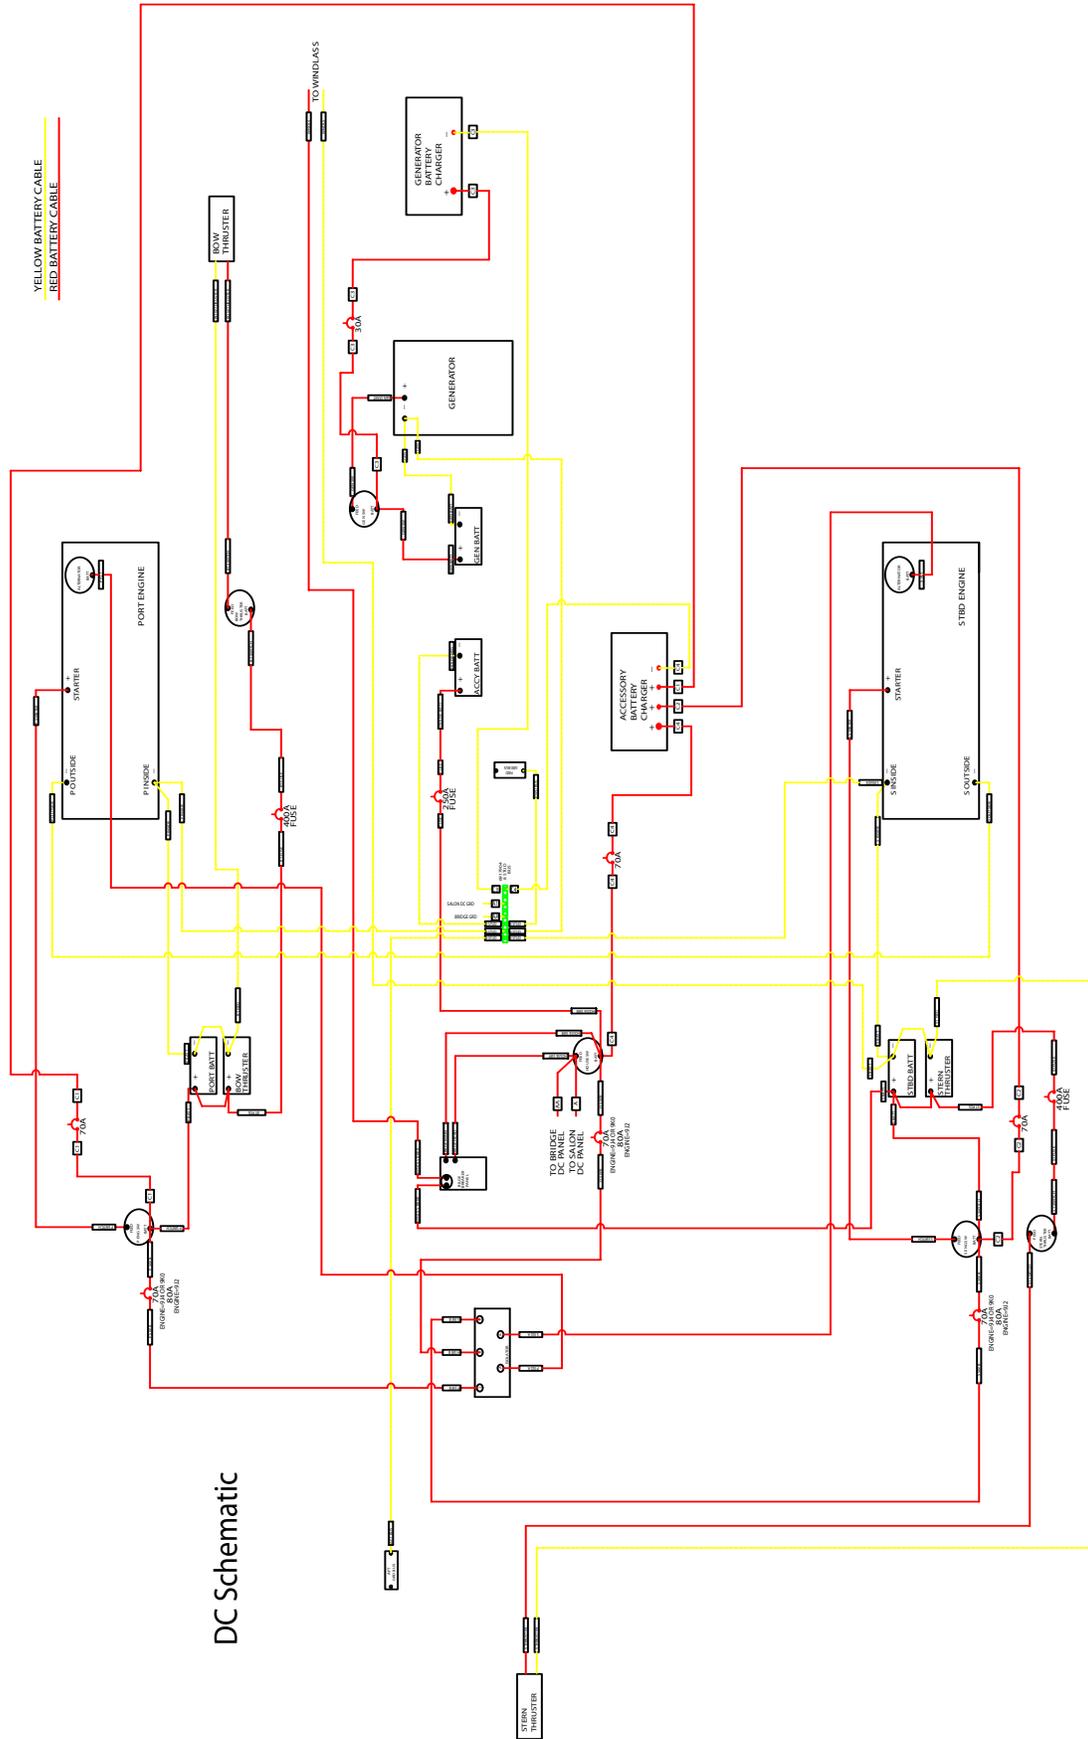

DC Schematic

AC Electrical System

Your boat is equipped with a 50 amp AC (alternating current) electrical system. The power for this system is supplied by either a shore power source or the generator. The procedures for connecting to a shore power source and to the generator are explained later in this section.

System Organization

The AC electrical system is divided into two circuits: Line 1 and Line 2. If your boat was built for use in North America or the Pacific Rim, each line is configured as 120 volts 60 Hertz. If your boat was built for use in Europe, each line is configured as 220 volts 50 Hertz.

Line 1 provides power to all of your boat's AC equipment except for the air conditioning system. Line 2 provides power to the air conditioning system.

Wiring System

The AC electrical system uses three types of color-coded wires.

The black wire carries the current from the power source to the equipment or receptacle. Each black wire is connected to and protected by a circuit breaker installed in the AC Control Center.

The white wire returns the current from the equipment or receptacle to the power source.

Safety ground wires are green. During normal operation, current does not flow through the ground wires.

Bus bars are used in the AC electrical system to help route and organize the wires. The system's white, or neutral, wires are connected together at bus bars. The ground wires are also connected together at a separate bus bar.



Do not touch the black or white wires while the AC electrical system is connected to a power source. These wires carry enough current to kill or cause serious injury.

AC Power Sources

You can supply power to your boat's AC electrical system by using either a shore power source or the onboard generator.

Shore Power

You can use a shore power source to supply AC power to your boat's AC electrical system. To do this, you will need one shore power cord (50A 125/250V) to connect to shore power.


NOTE: If you leave your boat for more than 48 hours while your boat is connected to shore power, remove all perishables from your refrigerator. If the shore power supply to your boat is interrupted, your food may spoil.

⚠ CAUTION

Do not supply power to a boat that has not had its water system fully charged. Doing so will damage the unit's water heater.


1. Make sure the generator is not running.
2. On the AC Control Center, located in a cabinet in the aft starboard side of the salon, switch the Water Heater circuit breaker OFF. Do not switch the breaker on again until the fresh water system has been filled, pressurized and primed.
3. Also on the AC Control Center, switch the Shore 1 and Shore 2 circuit breaker groups OFF. Check voltage options for your boat 110/220 panels are different.
4. Switch OFF the AC Main circuit breaker groups. These circuit breaker groups are located in the port transom locker on the boarding platform.

AC Control Center

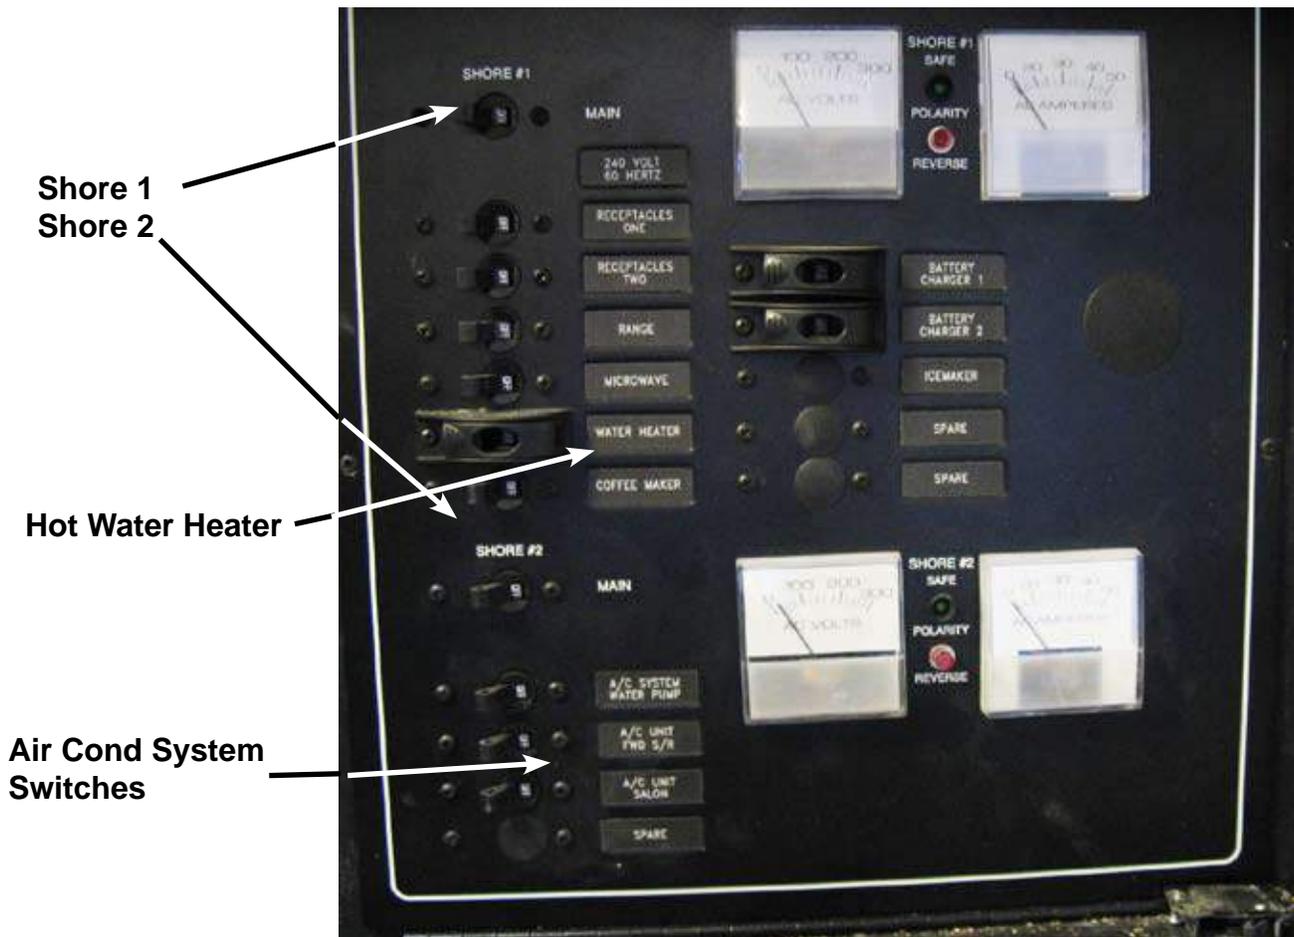

Shore Power Breakers- Aft locker

Shore Power - Aft Connections

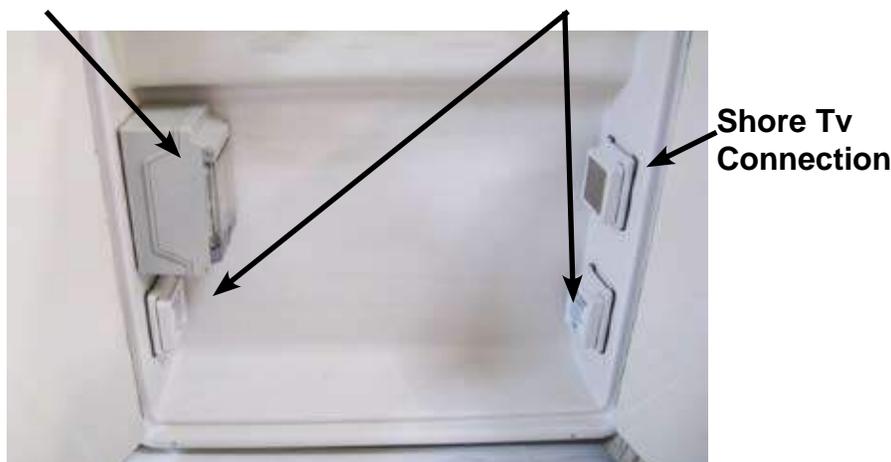**DANGER**

Make sure the shore power cord(s) you use is in excellent condition with no cuts, nicks or abrasions in the exterior plastic cover. Also make sure that the cord(s) is specifically designed to connect your boat to a shore power source. Using a damaged cord or a cord that is not designed for this purpose can cause electrical shock resulting in death or serious injury.

5. Locate your 50' shore power cord(s). If you are connecting the optional Cablemaster, proceed to step 8.
6. Connect the female end of the cord(s) to the boat's shore power receptacle(s). The receptacle(s) are located in the port transom locker on the boarding platform.
7. Secure the nonmetallic threaded locking ring that locks each cord to the boat's shore power receptacle. This prevents the cord(s) from being accidentally disconnected and from arcing due to a gap between the cord plug and the receptacle.

**DANGER**

Do not allow the end of the shore power cord(s) to hang in the water. This can cause an electrical field to form which can kill or seriously injure nearby swimmers or passengers.

8. Choose a neat and safe way to route the shore power cord(s) to the shore power source box.
9. Switch the circuit breaker that is installed in the shore power source box OFF.
10. Plug the male end of the shore power cord(s) into the shore power source outlet.
11. Secure the nonmetallic threaded locking ring that locks each cord to the shore power source outlet. This prevents the cord(s) from being accidentally disconnected and from arcing due to a gap between the cord plug and the outlet.

12. Switch the circuit breaker that is installed in the shore power source box ON.
13. Switch the AC Main circuit breaker group(s) ON.
14. There is a Reverse Polarity indicator on the AC Control Center for Shore #1 and Shore #2. If either or both of these indicators illuminate, immediately switch the respective AC Main circuit breaker group(s) OFF.

If you are in Germany or Italy, disconnect the shore power cord from the shore power source outlet, rotate the cord's plug 180 degrees, then plug the cord into the outlet again. Repeat steps 11 through 13. If the Reverse Polarity indicator(s) illuminates again, disconnect the affected shore power cord. Notify marina management of the reverse polarity problem and use a different shore power source box.

If you are not in Germany or Italy, disconnect the shore power cord. Notify marina management of the reverse polarity problem and use a different shore power source box.

If the Power Available indicator(s) illuminates, it is safe to proceed to step 15.

15. On the AC Control Center, switch the Shore 1 and/or Shore 2 circuit breaker group(s) ON. Power is now available to the other AC circuit breakers on Line 1 and/or Line 2, respectively.
16. Monitor the voltmeter(s) and ammeter(s) on the AC Control Center while your boat is connected to the shore power source. The operation of the voltmeter and ammeter is described later in this section.



Only people who are trained and experienced in working with electricity should service your boat's high voltage AC electrical system. Inexperienced or untrained people may be killed or seriously injured by incorrectly servicing the AC electrical system.

Always disconnect the boat from the shore power source, shut off the generator and disable the inverter before attempting to service the AC electrical system.

Generator Power

You can use the generator to power the boat's AC electrical system when a shore power source is not available. The generator is installed in the engine room on the forward centerline. Fuel for the generator is drawn from the starboard fuel tank.

NOTE: *Before attempting to start the generator, switch it OFF on the AC Main Circuit Breaker Group.*

To start the generator:


1. Read, understand and follow the OEM information that describes the generator.

GENERATOR OPTIONS

Master Switch





Strainers and Seacocks

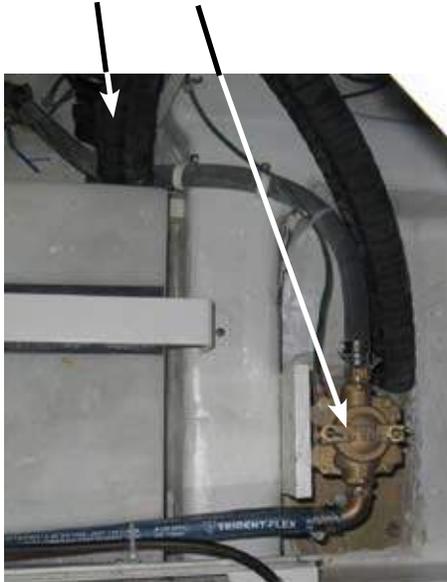

Muffler



Battery

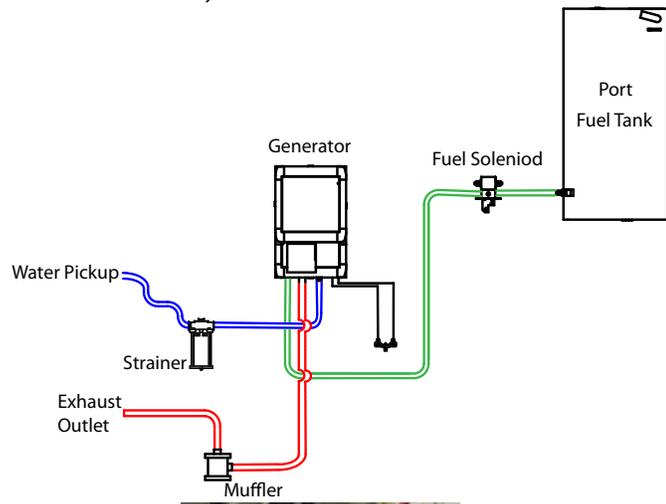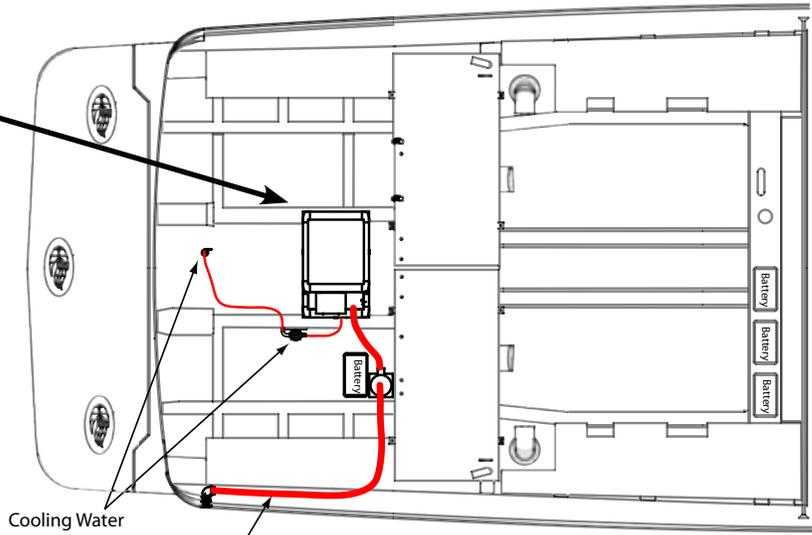

2. The generator starter is powered by its own 12-volt battery. Turn the generator battery master disconnect switch to the ON position.

A Tip From Carver!

Dedicating a 12-volt battery to the generator provides an important safety feature. A dedicated battery enables you to start the generator regardless of the condition of the propulsion engine batteries. If the batteries become discharged to the point where they are unable to start an engine, start the generator, then turn on the engine battery charger. When the engine batteries are recharged to an adequate level, you can then start the propulsion engine.

! CAUTION


Never turn the generator battery master disconnect switch to the OFF position while the generator is operating. Doing this can damage the generator or its alternator wiring.

3. The generator engine uses a seawater cooling system. This system includes a strainer that prevents debris in the seawater from entering the cooling system's water pump. Make sure the cooling system's seacock is closed. Remove and clean the strainer. The seacock and strainer are located near the starboard aft corner of the generator in the IPS system. The location of this strainer is beneath the generator in the Inboard system.
4. Reinstall the strainer. If the strainer leaks when the seacock is opened, close the seacock, then check the strainer for correct installation.

NOTE: Periodically check the strainer for debris. Debris collects on the inside of the screen basket. The cover must be removed to inspect for debris.

! CAUTION

Do not operate the generator when its cooling system seacock is closed. Operating the generator in this manner can damage it.

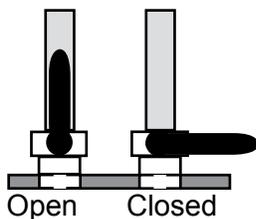

5. Open the cooling system's seacock.
6. Turn the Accessory Battery master disconnect switch to the ON position.
7. On the Safety Breaker Panel, switch the Main - One circuit breaker ON.
8. On the DC Control Center, switch the System DC Main circuit breaker ON, then switch the four Bilge Blower circuit breakers ON.
9. Turn the bilge blowers ON using the Bilge Blower switch on the DC Control Center or at the helm.

Make sure the bilge blowers are operating properly by feeling for air being blown from the bilge vents. These vents are located on either side of the hull amidships.

Operate the blowers for at least 4 minutes and until the engine room is free of any fuel vapor before starting the generator. Continue operating the blowers while the generator is running.

! CAUTION

The generator STOP/START switch is spring activated. Release the switch from its START position as soon as the generator starts. If you continue to hold the switch in its START position after the generator starts, you may damage the starter.

While you are attempting to start the generator, never hold the STOP/START switch in the START position for more than 10 seconds.

10. Push the spring-loaded generator STOP/START switch, located on the DC Control Center, to the START position and hold it there until the generator starts. Release the switch when the generator starts.
If the generator does not start within 10 seconds, release the STOP/START switch, wait 1 minute, then try to start the generator again.
11. When the generator is running smoothly, switch the Generator circuit breaker group(s) on the AC Control Center ON. Power is now available to the other AC circuit breakers on Line 1 and/or Line 2.
12. To turn the generator OFF, push the STOP/START switch to the STOP position. If you do not intend to use the generator again for at least a few days, turn the generator battery master disconnect switch to the OFF position.

DANGER

Do not inhale generator exhaust. Generator exhaust contains carbon monoxide, a poisonous gas. Refer to Section 1 - Carbon Monoxide (CO) Warnings for more information on engine exhaust and carbon monoxide.

Operating AC Equipment

Power to your boat's AC equipment is controlled by circuit breakers and, in most cases, individual controls for each component.

Your boat contains two AC circuit breaker panels:

- AC Main Circuit Breaker Groups
- AC Control Center

The circuit breakers on these panels enable you to control the electricity to either the AC component itself or to the equipment's controls by switching the breakers ON or OFF. They also protect the electrical system by automatically disconnecting the circuit from the power source in the event of a short or overload. Power is supplied to these two circuit breaker panels by either a shore power source or the generator.


Never reset a breaker that has automatically tripped without first correcting the problem. Failure to follow this procedure may create a dangerous situation.

NOTE: *Sometimes a circuit breaker location is labeled but no circuit breaker is present. In this case, the component named on the label is an option that is not installed on your boat.*

AC Main Circuit Breaker Groups

When using a shore power source to supply AC power to your boat, the power is routed through an AC Main circuit breaker group before it enters the boat. Each shore power cord has its own AC Main circuit breaker group.

The AC Main circuit breaker groups are located in the aft port cabinet of the salon. When these circuit breaker groups are ON, power flows to the AC Control Center. (Refer to page 2 and 8)

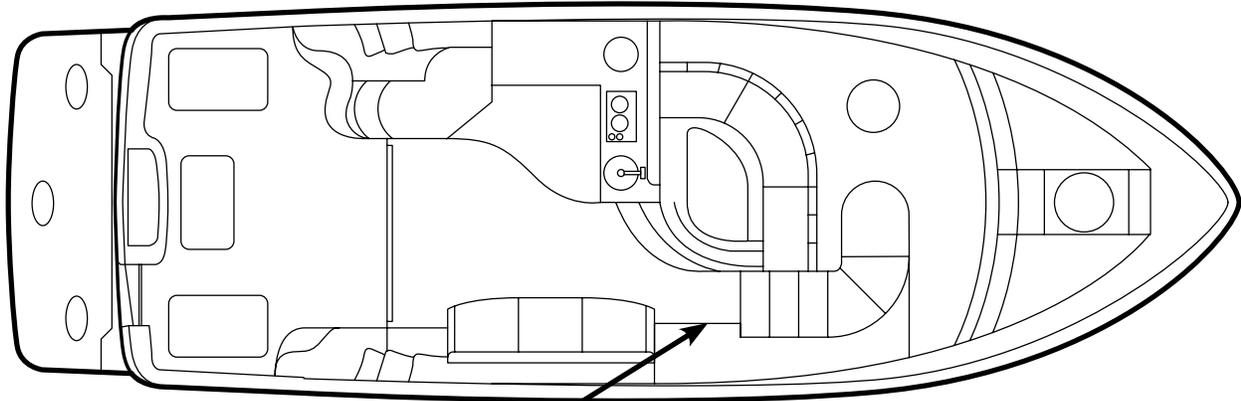

AC Control Center

The AC Control Center, located in the cabinet in the starboard side of the salon, manages the power supply to all of the boat's AC equipment. To provide power to this breaker panel, first provide a source of AC power to the boat, either through a shore power connection or the generator, as described earlier in this section. The AC Control Center contains the gauges and circuit breakers described on the following pages.

Air Conditioning Units - Aft/Forward Staterooms and Salon

These breakers control the flow of electricity to the air conditioning units in their respective areas. Before switching these breakers ON to supply power to the units, switch the A/C System Water Pump breaker ON.

CAUTION

Do not switch A/C Unit breakers ON until after you have opened the seacock that supplies the air conditioning system with seawater. Refer to Section 4 - Air Conditioning System for more information.

Ammeter

The ammeter indicates the amount of current that is being drawn by the selected line circuit.

When the appropriate Shore (1 or 2) or Generator circuit breaker group is ON, all other breakers on the AC Control Center are OFF, and the voltmeter is reading between 100 and 130 volts in a 120-volt system (210 and 230 volts in a 220-volt system), the ammeter should read zero amps.

As you switch the circuit breakers on the AC Control Center ON and turn on their associated equipment or turn on equipment plugged into the AC receptacles, the ammeter readings increase above zero amps. Refer to Electrical Loads, in this section, for information on the AC electrical system load limits.

Battery Charger 1

This breaker controls the battery charger that maintains the voltage level in the engine/accessory batteries. Switch this breaker ON to supply power to the battery charger. Refer to the OEM information for details on operating the battery charger.

Battery Charger 2

This breaker controls the battery charger that maintains the voltage level in the generator battery. Switch this breaker ON to supply power to the battery charger. Refer to the OEM information for details on operating the battery charger.

Coffee Maker

This breaker controls the galley's coffee maker. Refer to the OEM information for details on operating the coffee maker.

Microwave

This breaker controls the galley's microwave. Refer to the OEM information for details on operating the microwave.

Power Available Indicators

These indicators illuminate when the polarity of the shore power source for the respective line circuit is correct.

Range

This breaker controls the galley's cooking range. Switch this breaker ON to supply power to the range. Refer to the OEM information for details on operating the range.

Receptacles

These breakers control the flow of electricity to the receptacles in various places in the boat. Switch breakers ON to supply power to these receptacles.

NOTE: *If these circuit breakers are ON but power is not available at any of the receptacles in this group, the circuit's GFCI receptacle may have tripped.*

Reverse Polarity Indicators

These indicators illuminate when the polarity of the shore power source for the respective line circuit is incorrect. Refer to Section 3 - Shore Power for information on correcting reverse polarity.

**CAUTION**

If reverse polarity occurs, immediately switch the respective Shore circuit breaker group OFF.

Shore 1, Shore 2 and Generator

The Shore 1, Shore 2 and both Generator circuit breaker groups allow you to provide power to the other circuit breakers on the AC Control Center. Each breaker group consists of two circuit breakers that operate together.

A sliding lockout plate prevents you from switching ON both the Shore and Generator breaker groups for the same line circuit. Slide the lockout plate to the position necessary to expose the breaker group that you wish to use.

Shore 1 - Switch this breaker group ON if you are using a shore power source to provide electricity to the Line 1 circuit.

Shore 2 - Switch this breaker group ON if you are using a shore power source to provide electricity to the Line 2 circuit.

Spare(s)

These breakers are reserved for aftermarket accessories you install on your boat.

voltmeter

The voltmeter indicates the amount of voltage that is entering the selected line circuit.

When the boat's AC electrical system is connected to either a shore power source or the generator (and the generator is running), the voltmeter should read between 100 and 130 volts in a 120-volt system or between 210 and 230 volts in a 220-volt system.

If the voltmeter reads 100 volts or less (205 volts in a 220-volt system), DO NOT USE THE AC SYSTEM; in this situation, either contact the marina's management to identify and correct a shore power problem, or have a qualified technician service your generator.

If a voltmeter reads zero voltage, it means that no electricity is reaching the AC Control Center for the selected line circuit. If you are using the generator, make sure:

- It is operating properly.
- The safety circuit breaker on the generator control panel is ON.

If you are using shore power, make sure:

- Your shore power cord is properly attached to both the boat and the shore power source.
- The appropriate circuit breaker at the shore power source box is ON.
- The appropriate AC Main circuit breaker group is ON.
- The appropriate Shore (1 or 2) circuit breaker group on the AC Control Center is ON.

If the voltmeter continues to read zero voltage, either have a qualified technician service your generator or contact the marina's management to identify and correct a shore power problem. If the problem appears to be with your boat's AC electrical system, have the system inspected by a qualified electrician.

Water Heater

This breaker controls the water heater. The water heater supplies hot water to your fresh water system. Switch this breaker ON to supply power to the water heater. Refer to the OEM information for details on operating the water heater.



CAUTION

Do not supply power to the water heater when it is empty. Doing so may damage the unit's heating element. Refer to Section 4 - Fresh Water System to fill, pressurize and prime the fresh water system before turning on the water heater.

Ground Fault Circuit Interrupters

When someone receives an electrical shock through a GFCI receptacle, the current flowing to the receptacle continues flowing through the person's body and into any grounded object the person is touching or standing on. Thus, the current does not return from the receptacle through the appropriate wire. The GFCI "sees" this difference in current and shuts off power to the receptacle. This limits the amount of time the person is being shocked to a brief moment, which can reduce the amount of injury to the person.



DANGER

Any electrical shock from the AC electrical system, even through a GFCI receptacle, can cause death or serious injury. Always seek immediate medical attention after receiving such a shock.

GFCI Receptacle Locations

Three GFCI receptacles are installed on your boat. Each one protects a group of receptacles that can include both open outlets and those that are already in use for built-in equipment.

Testing GFCI Receptacles

The GFCI receptacles are identified by Test and Reset buttons located between the receptacles' two outlets.

Test each GFCI receptacle once every week:

1. Press the Test button. If the GFCI is operating normally, this cuts the power supply to the GFCI receptacle and to all other receptacles on that circuit.
2. Plug a lamp or other AC powered device into the GFCI receptacle and turn on the device. The device should not operate.
3. Repeat Step 2 for each receptacle on the same circuit as the GFCI receptacle.
4. Press the Reset button to restore power to the GFCI receptacle and to all other receptacles on that circuit.



! WARNING

If the GFCI receptacle or any other receptacle on that circuit still has power after the Test button is pressed, do not use any of the receptacles on that circuit. Contact a qualified electrician to make the appropriate repairs.

Electrical Loads

When operating AC powered devices through your boat's AC electrical system, be aware that each device exerts a "load" on the system. This load is equal to the amount of current (amps) that the device draws from the AC electrical system. The AC electrical system, like your house's electrical system, has a maximum total load that it can handle. Each line circuit has an electrical load capacity of 50 amps.

If the total load on the circuit exceeds the circuit's capacity, the breaker for that circuit trips. This means that the devices operating from the circuit are drawing too much current.

! WARNING

Do not overload the electrical circuits. If an excessive load trips a circuit breaker, turn off all devices connected to the circuit, then switch the breaker back ON.

A list of common AC powered devices and the approximate maximum current that they draw when operating are shown in the **Electrical Loads** chart. If you use an AC powered device that has an electric motor, such as a vacuum cleaner or electric drill, the device should have a *motor load plate* mounted on it. This plate lists the current that the device draws while operating.

As the chart indicates, appliances that use a motor or a heating element draw relatively large amounts of current. Therefore, be especially careful when using curling irons, toasters, coffee makers, hair dryers, food mixers or similar types of AC powered devices. Do not use too many of these types of devices at the same time.

ELECTRICAL LOADS

| AC Device (Amps) | Approximate Maximum Current Used |
|---------------------|----------------------------------|
| Fan | 0.7 |
| Refrigerator | 1.5 |
| Electric blanket | 2.0 |
| Television | 2.7 |
| Coffee maker | 6.3 |
| Battery charger | 7.3 |
| Toaster | 10.5 |
| Frying pan | 12.3 |

Bonding System

Your boat is equipped with a comprehensive metallic bonding system that interconnects all underwater equipment and thru-hull fittings. The bonding system ensures that the “cases” of all metallic equipment onboard your boat, including the fittings, are at the same electrical potential. This minimizes corrosion of the underwater fittings caused by stray electrical currents.

Included within this bonding system are sacrificial zinc anodes that have been installed on each of the boat’s propeller shafts and onto the underwater portion of the boat’s transom. These anodes corrode and deteriorate before the boat’s underwater fittings and provide a visual reference to the level of stray current to which your boat is being exposed.

Your boat’s 12-volt DC electrical system, AC electrical system, and the batteries’ negative leads are all connected to the bonding system through bus bars. The bus bars are located in the engine room and bilge area and are connected to the transom-mounted zinc plate.


WARNING

Do not tamper with or modify the boat’s bonding system. Doing so could threaten the integrity of the system.


CAUTION

Monitor the condition of your boat’s zinc anodes. Replace the zinc anodes when they have deteriorated to 50% of their original size. Do not allow the zinc anodes completely deteriorate. Refer to Section 7 - Maintenance Schedule for recommended inspection intervals.

NOTE: *Damage resulting from stray current or galvanic corrosion is NOT covered under the Carver limited warranty.*


Zinc Anode
(1 of 2)



Troubleshooting the AC Electrical System

| Problem | Possible Cause | Possible Solution |
|---|---|---|
| voltmeter on the AC Control Center reads zero volts. | Shore power cord is not connected. | Connect the shore power cord. |
| | There is no power at the shore power source box. | Contact marina management. |
| | The breaker installed in the shore power source box is OFF. | Switch the circuit breaker ON. |
| | The AC Main circuit breaker group is OFF. | Switch the circuit breaker group ON. |
| | The appropriate Shore or Generator circuit breaker group on the AC Control Center is OFF. | Switch the circuit breaker group ON. |
| | The shore power cord failed. | Replace the cord. |
| | The generator ran out of fuel. | Check the fuel level in the starboard fuel tank; refuel if necessary. |
| | The safety circuit breaker on the generator control panel is OFF. | Switch the circuit breaker ON. Refer to the OEM information. |
| | The generator failed. | Contact a qualified electrician to make the appropriate repairs. |
| | The voltmeter failed. | Contact a qualified electrician to make the appropriate repairs. |
| No power at the receptacles, but the voltmeter on the AC Control Center indicates an adequate voltage level. | The Receptacles breakers on the AC Control Center are OFF. | Switch the circuit breaker ON. |
| | A GFCI tripped. | Locate the tripped GFCI and press the Reset button. |
| The Shore #1 or Shore #2 Main circuit breaker on the AC Control Center trips immediately after being reset. | The circuit breaker failed. | Contact your Carver Dealer to have the circuit breaker replaced. |

AC Wiring Schematics

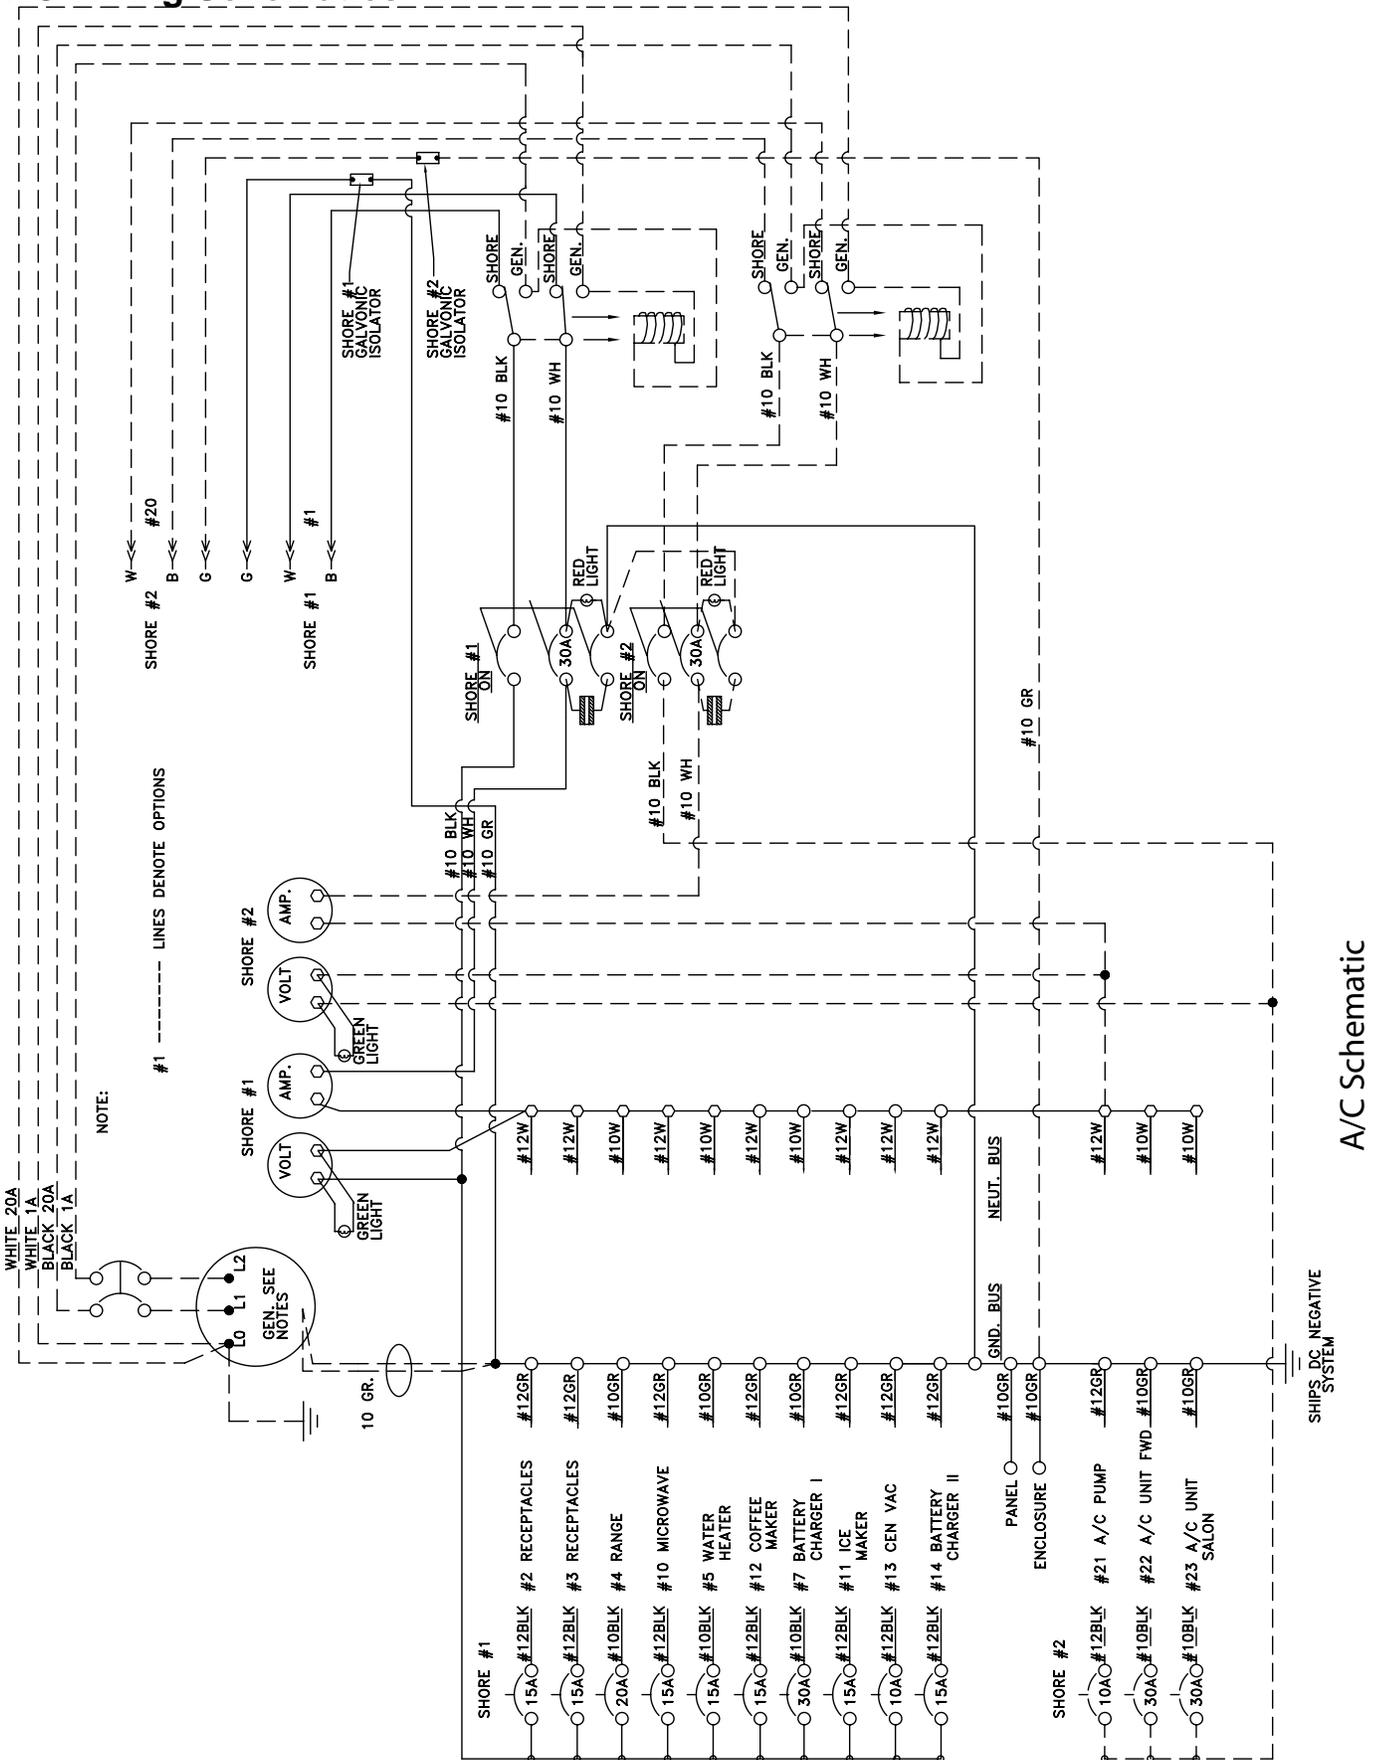

A/C Schematic

This page intentionally left blank.

Air Conditioning System

For the air conditioning system to operate, it needs a source of AC power (supplied by either a shore power source or the generator) and a supply of seawater (either salt or fresh).


The factory-installed air conditioning system consists of two air conditioning units:

- A 16,000 BTU unit, located in a starboard cabinet aft of the dinette seating to cool the dinette and forward stateroom.
- A 16,000 BTU unit, located beneath the master stateroom berth to cool the master stateroom, master and forward heads.

Producing Heat

The air conditioning system can produce heat when it is operated in reverse cycle mode. Reverse cycle operation, however, is affected by the temperature of the seawater. As seawater temperature decreases so does the air conditioning system's ability to produce warm air. Carver recommends that the air conditioning system not be operated in reverse cycle mode when the seawater temperature is below 40°F.

Powering the Air Conditioning

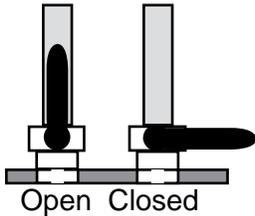

1. Make sure the air conditioning seacock is closed. Remove and clean the air conditioning system's seawater strainer. The strainer prevents debris in the seawater from entering the air conditioning system.
2. Reinstall the seawater strainer. If the strainer leaks when the air conditioning seacock is opened, close the seacock, then check the strainer for correct installation.
3. Open the air conditioning seacock to supply seawater to the air conditioning pump.
4. Supply AC power to your boat. Refer to Section 3 - Shore Power or Generator Power to do this.



CAUTION

Because the air conditioning condensation drains into the sump, the Auto Sump circuit breaker on the Safety Breaker Panel must be ON when the air conditioning system is operating.

5. On the Safety Breaker Panel, make sure that the Auto Sump circuit breaker is ON.




CAUTION

Do not run an air conditioning system's water pump when the seacock that supplies seawater to the system is closed. Operating the pump with no seawater can damage it.

6. On the AC Control Center:
 - a. Switch the Air Conditioning System Water Pump circuit breaker ON.
 - b. Switch the desired Air Conditioning Unit circuit breakers ON.
7. Verify that seawater is being pumped through the air conditioning units. As the seawater exits the units, it flows out of a single discharge thru-hull fitting.

Air Conditioning System

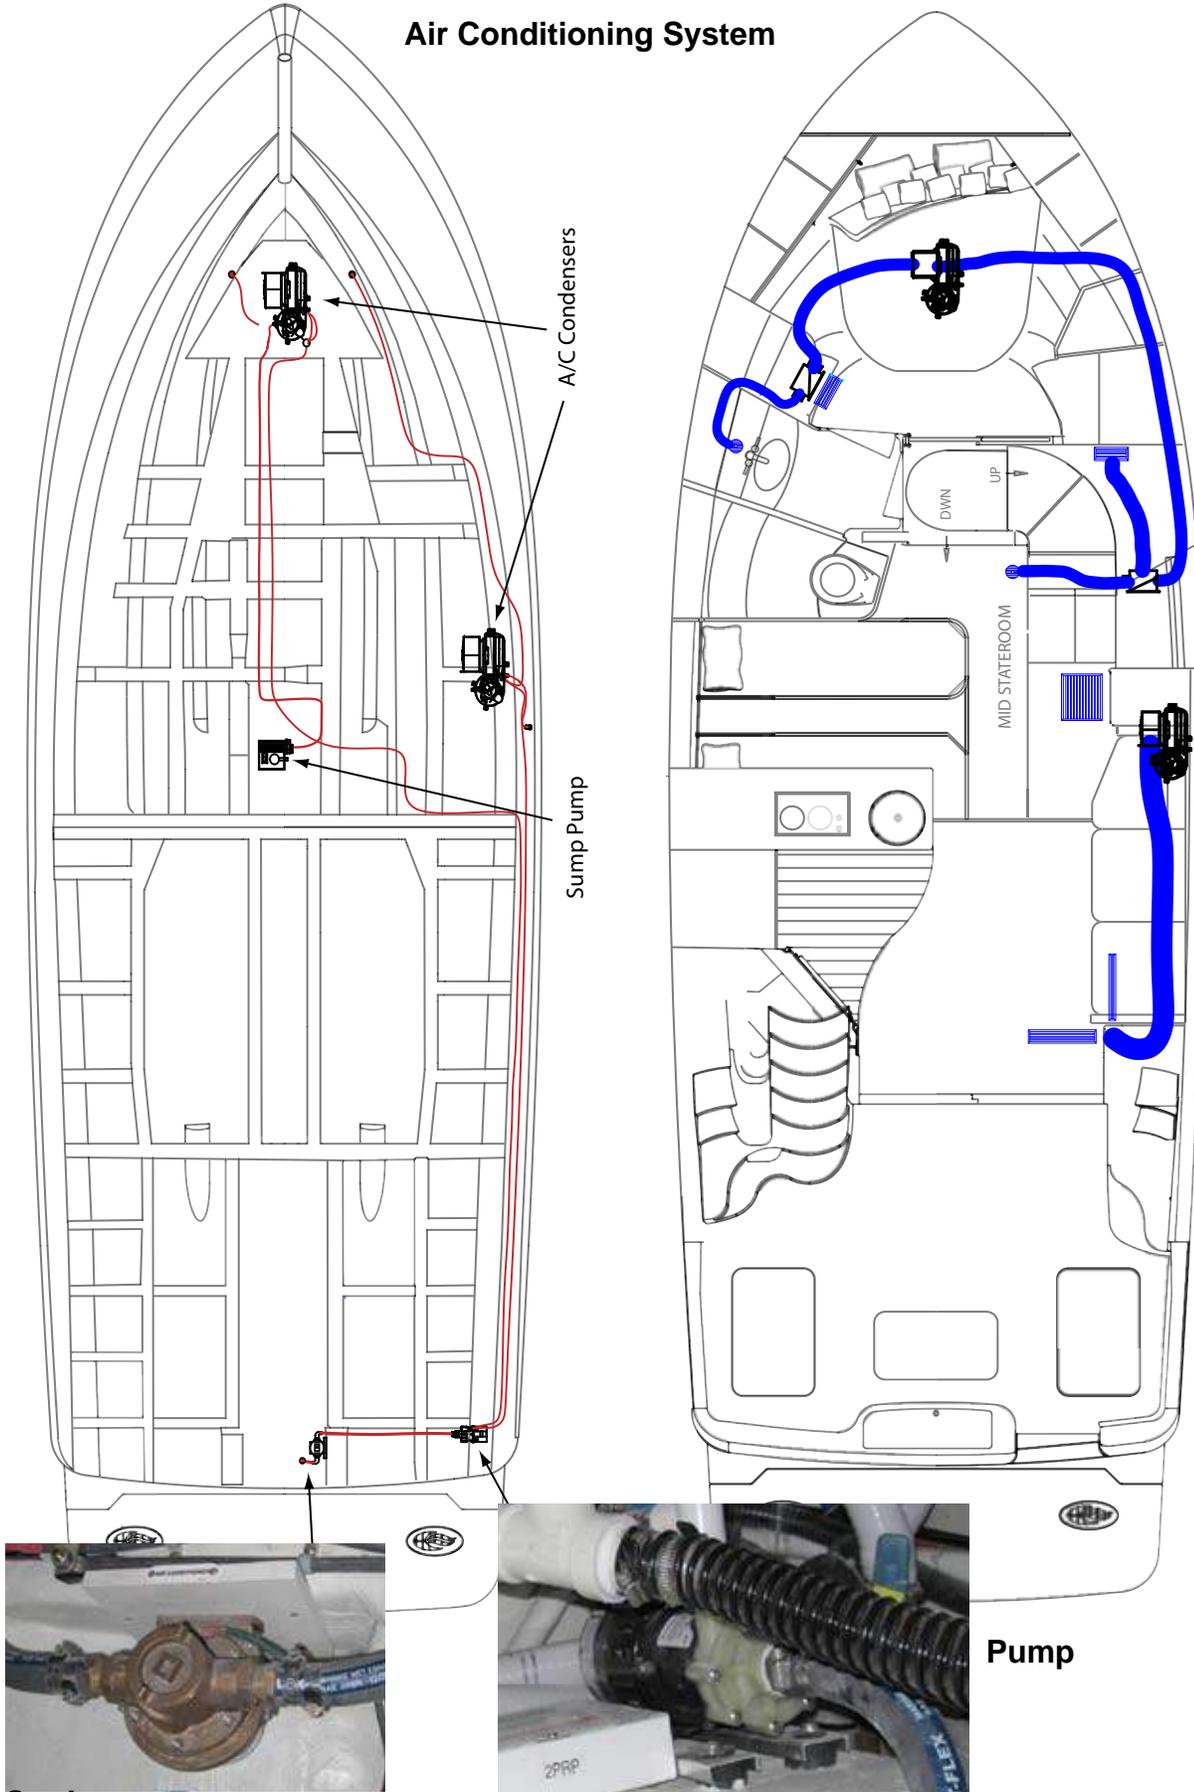

Strainer

Pump

8. Use the controls for each air conditioning unit to set the desired temperature. The controls are located in the salon and master stateroom. Refer to the OEM information for details on operating the air conditioning controls.

Fresh Water System

The capacity of your boat's fresh water system is approximately 86 gallons. The water tank is located in the engine room centerline. Refer to the diagram on the next page for the exact location of the water tank.

Filling The Water Tank

The fresh water tank is filled through a single deck fitting with a plate labeled WATER. The plate is located in the cockpit on the second step.

NOTE: *Thoroughly flush and sanitize the water system before initial use and at least Once each season.*



CAUTION

Do not overfill the water tank or leave the fill hose unattended while the tank is being filled. Overfilling the tank could cause it to rupture.


Put only clean, fresh water into your water tank. The tank is full when water is discharged from the water tank vent installed through your boat's hull. Refer to the Fresh Water System diagram on the next page for the location of the water tank vent.

Pressurizing and Priming the Water System

Perform the following **ONLY** after the fresh water tank is full.

1. Turn the Accessory Battery master disconnect switch to ON.
2. On the Safety Breaker Panel, make sure the Auto Sump circuit breaker is ON, then switch the Main - One circuit breaker ON.
3. Partially open all cold water faucets, including the faucets for the optional transom hand shower and bow and transom fresh water washdowns.
4. On the DC Control Center, switch the System DC Main circuit breaker ON, then switch the Pressure Water Pump circuit breaker ON. This activates the boat's pressure water pump, which pressurizes the water system. The pump is located in the engine room, aft of the port batteries. The location of the pump in the Inboard system is in the port aft corner of the day hatch.
5. The fresh water system is primed when all air is purged from the system's pipes and hoses. Monitor each sink tap and shower head. When a steady stream of water flows from the tap or shower head, close the cold water faucet for that tap or shower head, then open its hot water faucet (the washdowns supply only cold water). When a steady stream of water again flows from the tap or shower head, close the hot water faucet for that tap or shower head. When you have done this for each sink tap and shower head, the water system is primed.
6. Add water to the fresh water tank to replace that which was used in the previous step. Refer to Section 4 Filling the Water Tank.

FRESH WATER SYSTEM

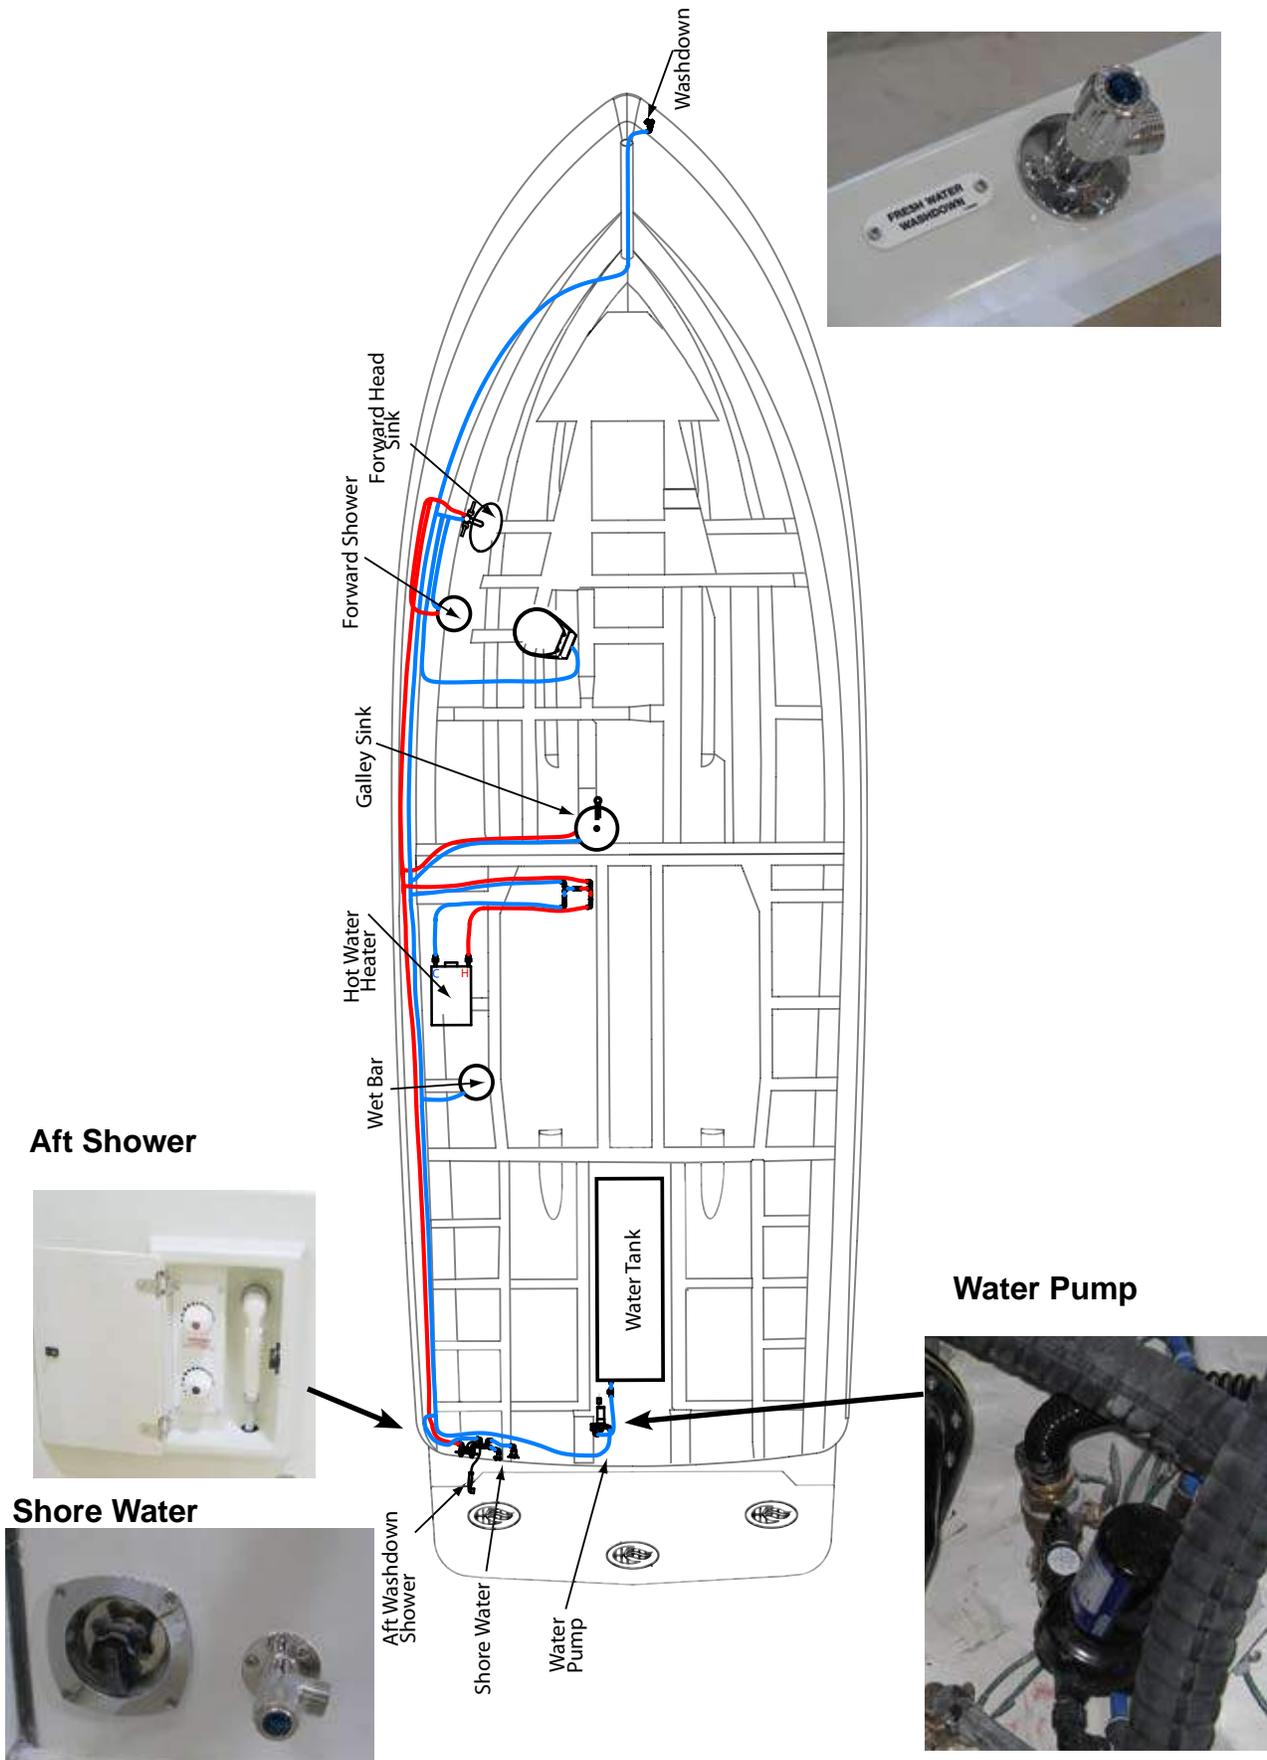

Aft Shower



Shore Water



Water Pump



8. Use the controls for each air conditioning unit to set the desired temperature. The controls are located in the salon and master stateroom. Refer to the OEM information for details on operating the air conditioning controls.

Fresh Water System

The capacity of your boat's fresh water system is approximately 86 gallons. The water tank is located in the engine room centerline. Refer to the diagram on the next page for the exact location of the water tank.

Filling The Water Tank

The fresh water tank is filled through a single deck fitting with a plate labeled WATER. The plate is located in the cockpit on the second step.

NOTE: *Thoroughly flush and sanitize the water system before initial use and at least Once each season.*



Do not overfill the water tank or leave the fill hose unattended while the tank is being filled. Overfilling the tank could cause it to rupture.

A Tip From Carver!

If your boat will be left unattended for at least a few days, switch the Pressure Water Pump circuit breaker OFF. If this breaker is left on, pressure in the fresh water system may fall and cause the water pressure pump to engage. If this happens frequently, it could discharge your

Put only clean, fresh water into your water tank. The tank is full when water is discharged from the water tank vent installed through your boat's hull. Refer to the Fresh Water System diagram on the next page for the location of the water tank vent.

Pressurizing and Priming the Water System

Perform the following **ONLY** after the fresh water tank is full.

1. Turn the Accessory Battery master disconnect switch to ON.
2. On the Safety Breaker Panel, make sure the Auto Sump circuit breaker is ON, then switch the Main - One circuit breaker ON.
3. Partially open all cold water faucets, including the faucets for the optional transom hand shower and bow and transom fresh water washdowns.
4. On the DC Control Center, switch the System DC Main circuit breaker ON, then switch the Pressure Water Pump circuit breaker ON. This activates the boat's pressure water pump, which pressurizes the water system. The location of the pump in the Inboard system is in the port aft corner of the day hatch.
5. The fresh water system is primed when all air is purged from the system's pipes and hoses. Monitor each sink tap and shower head. When a steady stream of water flows from the tap or shower head, close the cold water faucet for that tap or shower head, then open its hot water faucet (the washdowns supply only cold water). When a steady stream of water again flows from the tap or shower head, close

the hot water faucet for that tap or shower head. When you have done this for each sink tap and shower head, the water system is primed.

6. Add water to the fresh water tank to replace that which was used in the previous step. Refer to Section 4 Filling the Water Tank.

When water pressure within the system increases to a predetermined point, the pressure water pump automatically shuts off. Priming the system also fills and maintains the water level within the water heater.

Using the Water System

After filling, pressurizing and priming the fresh water system, simply open a faucet to receive fresh water. As you draw water from the system, the pressure in the system decreases. When the pressure decreases to a predetermined point, the pressure water pump automatically turns on and increases the pressure. This ensures a steady flow of water any time you open a faucet.

Sometimes a recently filled system or one that has not been used for some time may need re-priming. This is normal and is caused by an accumulation of air bubbles at the pressure water pump. To re-prime the fresh water system, repeat the steps - Pressurizing and Priming the Water System.

Water Heater

To operate the water heater:

1. Fill, pressurize and prime the fresh water system. This automatically fills the water heater.
2. Supply AC power to your boat. Refer to Section 3 - Shore Power or Generator Power to do this.
3. On the AC Control Center, switch the Water Heater circuit breaker ON.
4. Refer to the OEM information for details on operating the water heater.

CAUTION

Do not supply power to the water heater when it is empty. Doing so may damage the unit's heating element. Fill, pressurize and prime the fresh water system as described in Section 4 - Filling the Water Tank and Pressurizing and Priming the Water System before turning on the water heater.

Shower and Sinks

A Tip From Carver!

To obtain the most consistent shower temperature, turn on the cold water faucet fully, then slowly turn on the hot water faucet until the water flowing from the shower head is at the desired temperature. This method keeps the pressure water pump running, eliminating widely fluctuating water temperatures.

Used water from the sinks, shower drains and air conditioning units drain into a sump. Because the sump is located below the boat's waterline, a pump is needed to drain the sump and discharge its water overboard or into an optional grey water holding tank. When the Auto Sump circuit breaker on the Safety Breaker Panel is "ON," the sump pump operates automatically when water in the sump rises above a predetermined level.

NOTE: *The sump pump can not operate if the Auto Sump circuit breaker is OFF. Make sure the circuit breaker is ON before using the showers or sinks.*

Cockpit Hand Shower

The cockpit hand shower enables you and your guests to rinse off with warm, fresh water after swimming without having to enter the cabin. The hand shower is especially useful if you operate your boat in salt water.

The hand shower is an integral part of your boat's fresh water system. Simply turn on the faucets and adjust them for the desired water temperature. The hand shower and its faucets are located in the starboard locker in the cockpit.

Fresh Water Washdowns

The optional bow and transom fresh water washdowns enable you to use water from the fresh water tank to washdown and clean your boat. Fresh water washdown is especially useful if you operate your boat in salt water.

A Tip From Carver!

Remember that the fresh water washdown system draws its water from the boat's fresh water tank. Prolonged use of the washdown system quickly reduces the amount of fresh

To use the fresh water washdowns:

1. Locate the bow- and transom-mounted hose fittings. The transom-mounted fitting is located in the port locker in the cockpit.
2. Attach one end of an appropriately sized garden hose to the hose fitting you wish to use.
3. Attach a nozzle to the other end of the hose.
4. Open the faucet at the base of the hose fitting to supply water to the hose.

Shore Water

Your boat has a shore water fitting that enables your fresh water system to draw water from a land water source while your boat is docked. When you use shore water you are not drawing water from the onboard water tank.

NOTE: *Connecting your boat to shore water bypasses the boat's fresh water tank and pressure water pump, therefore the water tank does not get filled. The only way to fill the fresh water tank is through the deck plate labeled WATER.*

When you connect your boat to shore water, switch the Pressure Water Pump circuit breaker on the DC Control Center OFF.



Do not leave your boat unattended when it is connected to shore water. Should one of the water lines in your boat develop a leak, an unlimited amount of water could enter your boat. Disconnect the shore water hose whenever you leave your boat unattended.

To connect to shore water:

1. Locate the shore water fitting, labeled SHORE WATER. Refer to the Fresh Water System diagram in this section for the exact location of this fitting. (page 4)
2. Attach one end of a garden hose to the shore water fitting.
3. Attach the other end of the hose to the dockside water tap.
4. Close all sink and shower faucets.
5. Make sure the Auto Sump circuit breaker on the Safety Breaker Panel is ON.
6. Turn the dockside water tap ON.

Bilge System

Your boat contains three bilges and three automatic bilge pumps. The bilge is the lowest point in the interior of the boat's hull where any water that finds its way into the hull will accumulate. Each bilge pump can remove up to 1500 gallons of water per hour.

The bilges include the areas described below. Refer to the bilge diagram in this section for the exact location of the bilge pumps.

- The forward bilge runs from the bow to the forward engine room bulkhead.
- The amidships bilge runs the length of the engine room. It contains the amidships bilge pump, located beneath the forward edge of the generator.
- The aft bilge runs from the aft engine room bulkhead to the boat's stern. It contains the aft bilge pump, located beneath a hatch in the cockpit.



CAUTION

Never store anything in the bilges. Storing loose items in the bilges could damage pumps, pipes or other components that are essential for the proper operation of your boat.


If you keep your boat in a climate where temperatures can drop below freezing, make sure that all water within the bilges is drained before you store the boat for the winter. Water that freezes in the bilge could cause severe damage to your boat and its components. Refer to Section 8 - Bilge for more information on winterizing the bilge.

Bilge Pump Operation

For safety and convenience, the forward, amidships and aft bilge pumps can be operated either automatically or manually. The engine room bilge pump operates automatically only.

The bilge pumps remove almost, but not quite, all of the water that collects within the bilge. If you want your bilge to be completely dry, use a sponge and bucket to remove the small amount of water that remains.

BILGE SYSTEM

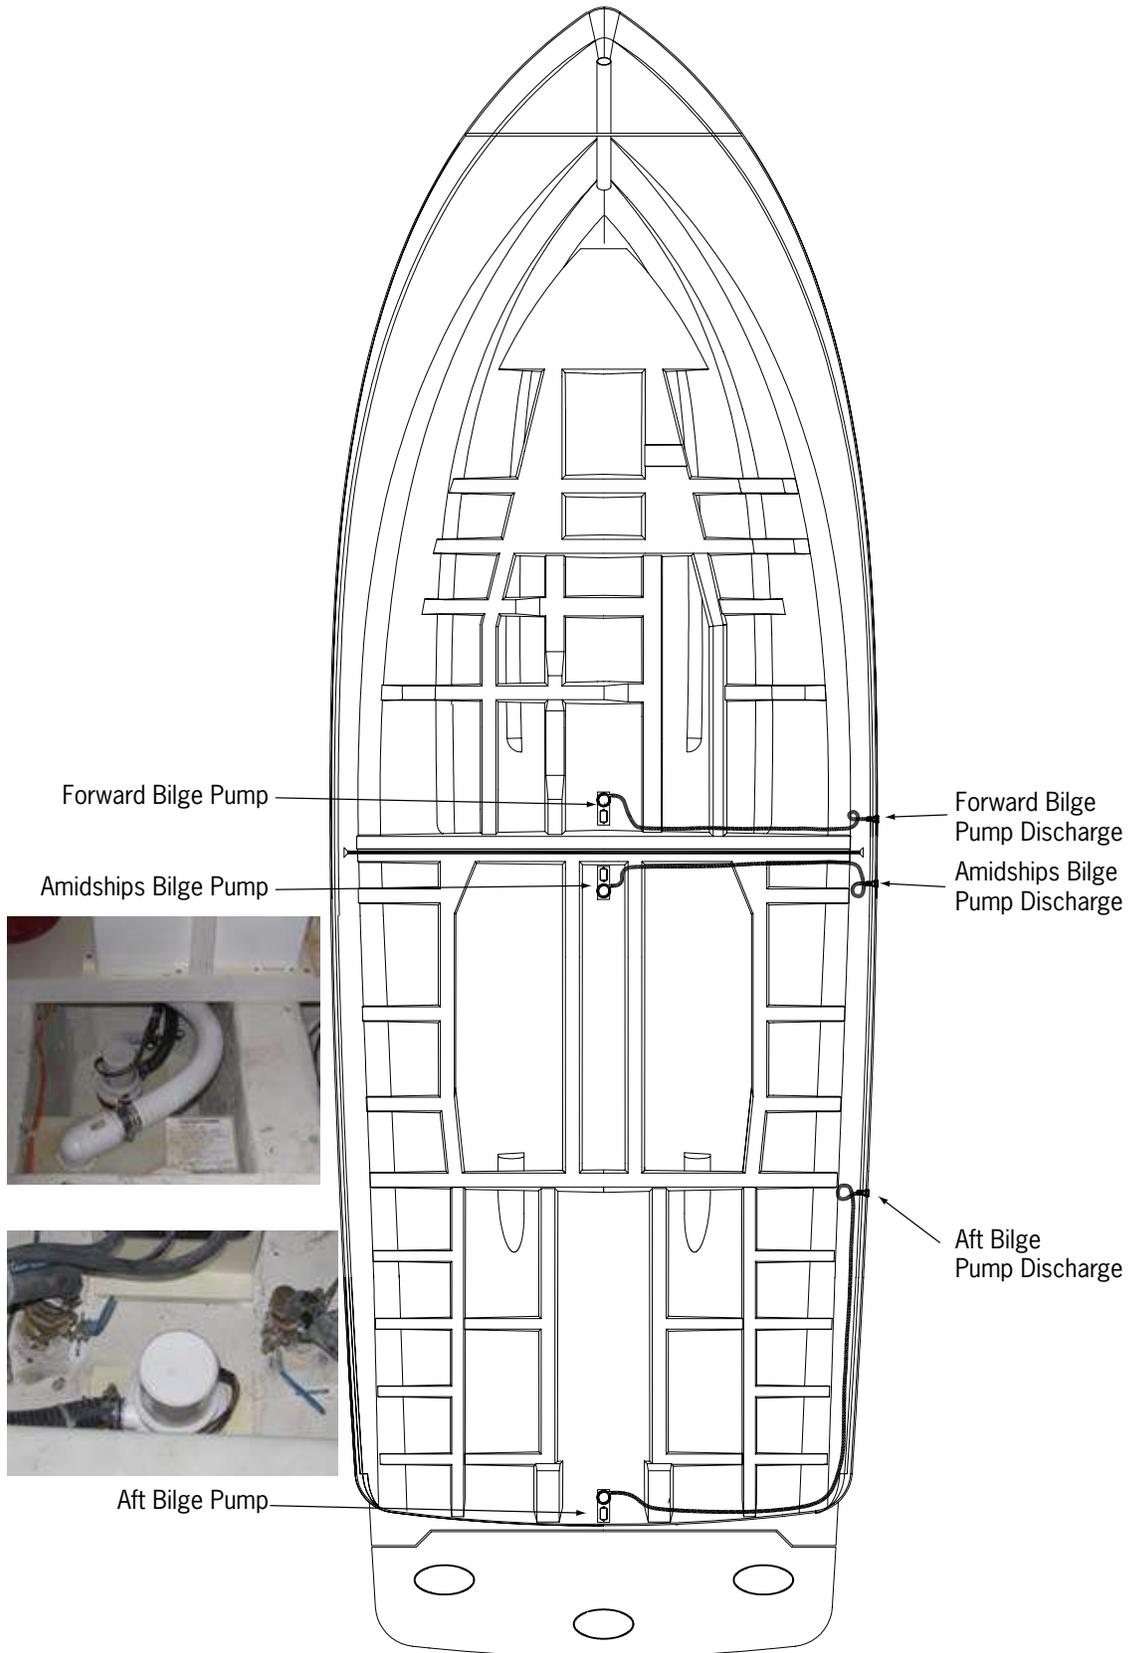

A Tip From Carver!

A small amount of water always collects in your boat's bilge. This water is usually not enough to activate an automatic float switch. While underway and on plane, use the helm switches to manually turn the bilge pumps on and let them run for 30 seconds to a minute. When your boat is on plane, water in the bilge flows to the stern, where the aft bilge pump is located. The amidships bilge pumps are near the lowest point in the hull when the boat is at rest.

NOTE: Before operating your boat's bilge pumps, wipe up any oil that may have accumulated in the bilge. Pumping oil overboard contributes to water pollution and is in violation of the Federal Water Pollution Control Act. Violators are subject to a substantial penalty.




Your boat is equipped with a high bilge water alarm. If the sensors detects high bilge water, an alarm sounds. The most likely causes of high bilge water are: a hull breach, faulty bilge pump or faulty seacock/hose. Immediately identify and correct the cause of the high water, and remove the water. Silence the alarm by turning its circuit switch OFF. The switch is located on the bottom of the Main Cabin DC Access.

NOTE: The High Water Alarm circuit breaker on the Engine Room Breaker Panel must be ON at all times so that the alarm will sound if there is high water in the bilge.

Automatic Operation

Each bilge pump is wired to its own circuit breaker on the Safety Breaker Panel and then routed to the Accessory Battery. Incorporated into each bilge pump is a float switch. If the bilge pump is not being manually operated, the float switch automatically turns on the pump when bilge water rises to a predetermined level. The pumps operate in automatic mode as long as the Auto Bilge Pump circuit breakers on the Safety Breaker Panel are ON. Periodically test each switch by lifting the float, which should turn the bilge pump on.

NOTE: The Auto Bilge Pump circuit breakers on the Engine Room Breaker Panel must be ON at all times so that the pumps can operate in automatic mode when necessary.

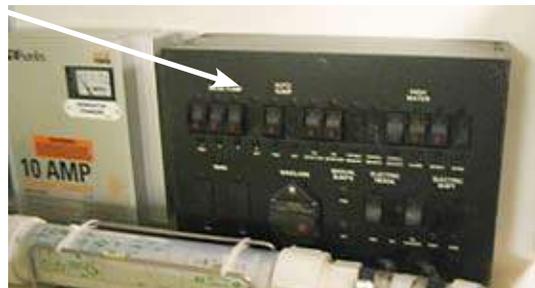

Hull Drain

Your boat is equipped with one hull drain. The drain allows water to drain from the bilges while the boat is in dry storage. The boat and cradle should be positioned to allow water to flow toward the hull drain. The drain is located in the transom in the deepest portion of the hull's "V."

Make sure the hull drain plug is securely screwed into the hull drain before launching the boat.

A Tip From Carver!

Coat the threads of the hull drain plug with waterproof grease before you install the plug into the hull drain fitting. This makes it easier to remove the plug at a later date.

Sanitation System

Your boat's sanitation system includes the head, waste tank and optional overboard waste discharge system. When properly used, this system conforms to all United States antipollution laws.

Toilet

The toilet uses fresh water and vacuum pressure to remove waste from the head. If you have guests who are unfamiliar with marine sanitation systems, instruct them on how to properly use the toilet. Refer to the OEM information for details on operating the toilet.

To operate the vacuum flush system:

1. Turn the Accessory Battery master disconnect switch to ON.
2. On the Safety Breaker Panel, switch the Vacuum Heads circuit breaker ON.
3. Check the holding tank indicator located next to each toilet. If the waste tank is at least $\frac{3}{4}$ full, it should be emptied. If not, proceed to step 4.
4. Press the foot pedal at the base of the toilet. This flushes the toilet.



NOTE: Lifting the foot pedal will add additional water without flushing.

It is common for vacuum systems to gradually lose vacuum pressure. When pressure in the system drops below a predetermined level, the vacuum pump engages automatically to bring vacuum pressure back to the optimum level.

NOTE: Whenever you don't want to hear the toilet's vacuum pump operating, such as at night, you can temporarily shut it off using the toilet Run/Sleep switch. Placing the switch in the Sleep position shuts off the toilet's vacuum pump.

Emptying the Waste Tank

The sanitation system contains one polyethylene waste tank located Centerline - amidships. Refer to the Sanitation System diagram in this section for the exact location of this tank. The two methods of disposing of waste are described below. Use waste tank deodorizer inside the waste tank between pumpouts.


Dockside Discharge

With the dockside discharge method, waste is flushed from the head to the waste tank where it is stored until it can be transferred to a dockside pumpout station.

To empty the tank:

1. Locate a dockside pumpout station.
2. Remove the waste tank deck plate labeled WASTE using the removal tool supplied with your boat. This plate is located on the starboard side aft entry gate. Refer to Section 9 - Deck Plates and/or the Sanitation System diagram, in this section, for the exact location of this plate.

SANITATION SYSTEM

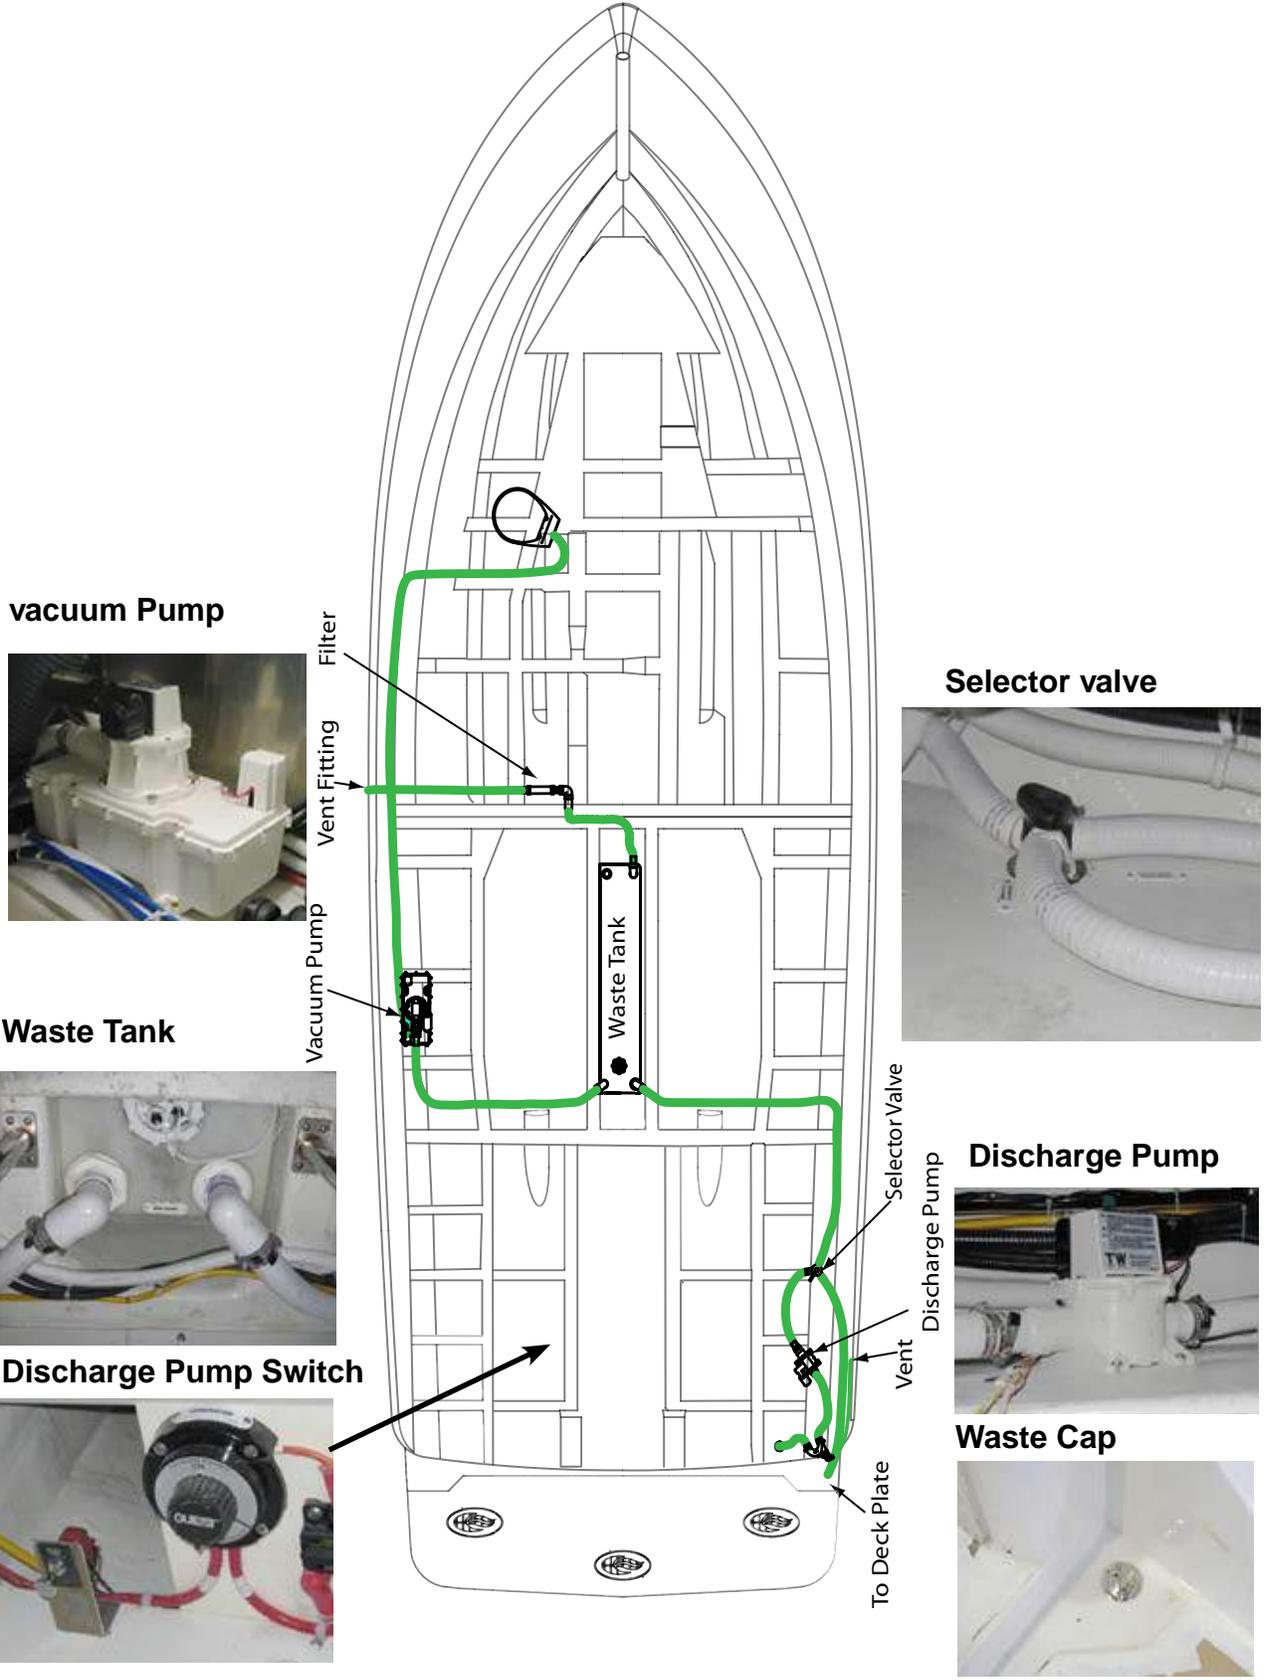

vacuum Pump



Waste Tank



Discharge Pump Switch



Selector valve




Discharge Pump



Waste Cap



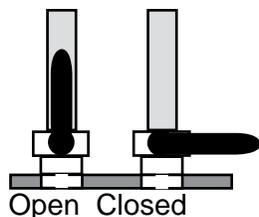

3. Attach the pumpout vacuum hose to the WASTE deck fitting. Because the transfer process uses a vacuum action, there must be a secure connection between the transfer hose and the deck fitting.
4. Activate the pumpout vacuum. The pumpout vacuum transfers onboard waste to the dockside holding station.
5. After all waste is removed, flush the waste tank by pouring a few gallons of fresh water through the WASTE deck fitting. Reattach the vacuum hose to the deck fitting and activate the pumpout vacuum again to remove the fresh water and any remaining waste.
6. Replace the WASTE deck plate.

A Tip From Carver!

The WASTE deck plate is not connected to the fitting and does not float. Be careful that you don't drop the plate in the water when you remove it. If you do lose the plate, you can order a replacement from your Carver Dealer. WASTE deck plates are dropped overboard frequently enough that we suggest you carry an extra in your onboard spare parts kit.

Overboard Discharge

NOTE: *It is against the law to discharge waste overboard in many areas of the United States. It is your responsibility to make sure that you are in compliance with all applicable federal, state and local laws when using your boat's overboard discharge system. People who discharge waste overboard in restricted areas are subject to significant penalties.*

In certain coastal areas of the world it is legal to discharge the waste from your boat's waste tank into the sea. To accommodate this procedure Carver offers an optional overboard discharge system for your boat. This system is available only on boats that are exported or used in the coastal areas of the United States.

With the overboard discharge system, waste is flushed from the toilet to the waste tank where it is stored. Where it is legal, you can then empty the waste tank directly overboard. If overboard discharge is not legal where you are, you can either wait until you reach an area where it is legal or use a dockside pumpout station to empty the waste tank.

To empty the tank

1. Open the overboard discharge seacock. The seacock is located on the aft bilge bulkhead.
2. Turn the Accessory Battery master disconnect switch to the ON position.
3. On the Safety Breaker Panel, switch the Main - One circuit breaker ON.
4. On the DC Control Center, switch the System DC Main circuit breaker ON, then switch the Waste Pump circuit breaker ON.
5. Turn the overboard discharge pump switch ON. The switch is located next to the Generator Master Switch. Refer to the Sanitation System diagram in this section for the exact location of this switch. This activates the overboard discharge pump, which pumps the waste overboard.

This page intentionally left blank.

Propulsion

This section gives a general overview of your propulsion system and how it works. For a detailed explanation of the engines installed in your boat, refer to the OEM information.

Fuel Systems

Gasoline Fuel Systems

Each gasoline propulsion engine in your boat is plumbed to the fuel tank located on the same side of the boat as the engine. The generator draws fuel from the starboard fuel tank.

Anti-siphon check valves are installed in gasoline fuel systems between the fuel hose and the fuel tank withdrawal tube. These check valves automatically stop the flow of fuel if the fuel hose ruptures or becomes disconnected.

Never remove an anti-siphon check valve from the fuel system. The valves are important safety components. Clean or replace obstructed or sticking valves.

Fuel Tanks

Your boat holds a maximum 334 gallons of fuel in two tanks. The fuel tanks are positioned forward of each engine. The fuel system meets or exceeds the standards set by the U.S. Coast Guard, the Boating Industry Association and the American Boat and Yacht Council that were in effect when your boat was constructed. Each fuel tank has passed a rigorous test conducted by the tank manufacturer. Additionally, the entire fuel system passed Carver's own pressure testing and inspection.

Before your boat is delivered, your Carver Dealer also makes a full inspection of the fuel system. An entry on the Carver Pre-Delivery Service Record verifies the dealer's completion of this inspection.

CAUTION




Over time, water can condense inside the fuel tanks, especially in areas with high humidity. This water can then react with the fuel in the tanks to create a mixture that can corrode the tanks from the inside. To avoid this:

- ***Use the fuel in the fuel tanks as often and as completely as possible.***
- ***Keep the tanks full of fuel when the boat is stored and when it is used infrequently.***
- ***Do not put alcohol-based fuels in the tanks.***
- ***Check the fuel tanks for water accumulation at least once a year.***

Fuel Tank vents

Each fuel tank is vented overboard. As the fuel tanks are filled during fueling, air is displaced from inside the tanks and escapes through the vents. Conversely, when the engines are running, air enters the fuel tanks through the vents to displace the fuel being used. Each fuel tank has one vent, which is combined with its respective fuel fill fitting.

FUEL SYSTEM

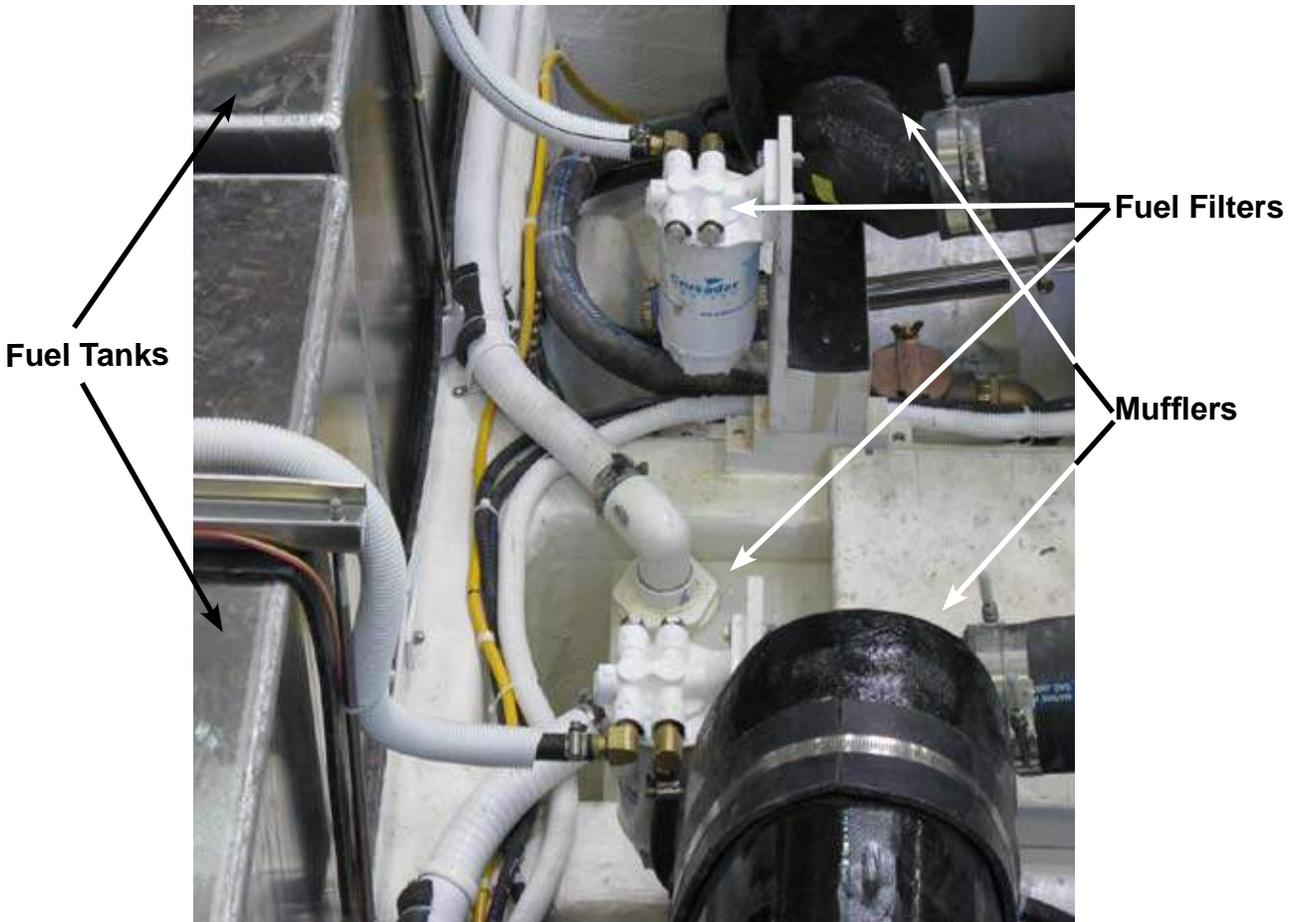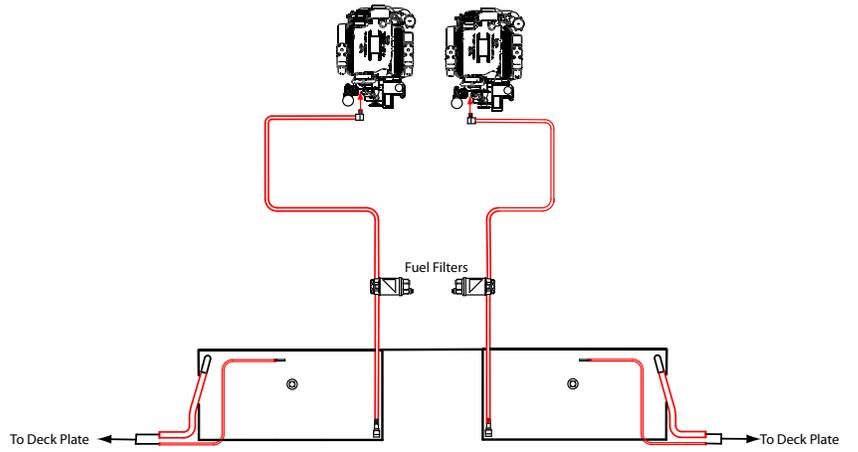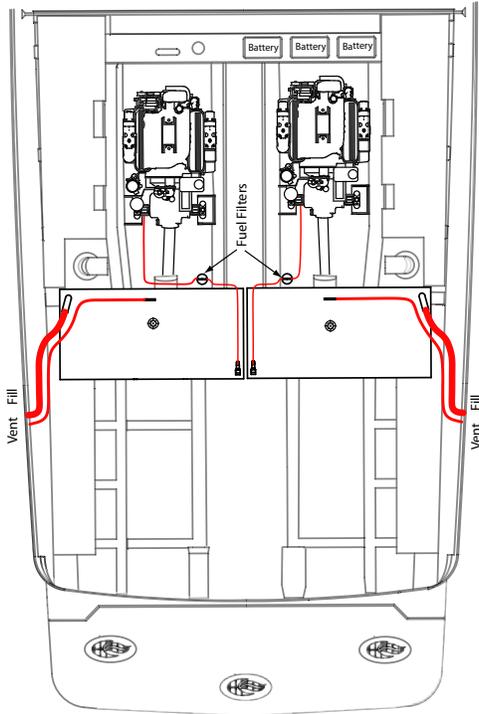

Fuel Shut-Off valves

Gasoline engines models do not have manual fuel shut-off valves. This system utilizes anti-siphon check valves. These engines also do not have return lines or fuel crossovers.

Fire Suppression System

An automatic fire suppression system is installed in the engine room. This system provides extra security in the event of an engine room fire. Refer to the OEM information for details on operating the fire suppression system. If your boat was built for use in Europe, the system can also be activated manually using a release control located at the helm.

WARNING

If the fire suppression system is activated, anyone in the engine room must immediately evacuate the room. The chemical used in the fire suppression system can cause asphyxiation. Once the fire is extinguished and the system is deactivated, ventilate the engine room with fresh air before reentering it.

The fire suppression chemical tank is located on the center forward bulkhead of the engine room. A fire suppression system monitor, installed on the helm, is wired to an ignition switch. The monitor's light should be ON when the ignition switch is turned ON. The Helm also has a manual handle that activates the fire control bottle.

The system contains an engine shut-off circuit. When the system is activated, the engines automatically shut off for safety reasons. Do not attempt to restart the engines until the fire is out and any damage to the engines and fuel system has been repaired. An override switch, located on the system monitor, resets the engine shut-off circuit after the system has been activated, allowing you to restart the engines.

When replacing components while servicing the fire suppression system, you must use new components that have the same designation or that are equivalent in their technical and fire-resistance capabilities



**Fire Suppression
Bottle**

Fire Suppression Monitor



**Manual handle
- Bridge**




Engine Room ventilation

Your boat's engine room is equipped with a ventilation system consisting of intake ducts, exhaust ducts and bilge blowers. This system is designed to remove any fuel vapor from the engine room. The bilge blowers operate whenever the engines are running, as long as the four Bilge Blower circuit breakers on the DC Control Center are ON.

You must keep the engine room ventilation system in proper operating condition. Inspect the intake and exhaust ducts regularly to make sure they are free of obstructions and have not collapsed or torn. Inspect the blowers to make sure they are operating properly. Replace any worn components with new components of the same type.

Cooling System

Each propulsion engine has a cooling system which removes excess heat from the engine and its exhaust system. Closed systems use a freshwater/antifreeze mixture to cool the engine. The coolant runs through a heat exchanger where the excess heat is transferred to seawater taken in through a seacock for each engine. Open cooling systems use seawater to cool the engines directly. More details on next page.

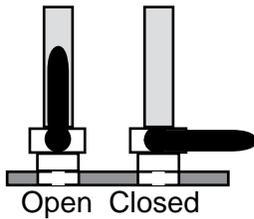

Both open and closed cooling systems require seawater to function. Before each cruise, make sure the cooling system seacocks are closed, then make sure the optional strainers are free of seaweed and other debris. Open the cooling system seacocks before you start your engines. If the engines have closed cooling systems, make sure that you have a sufficient level of coolant in each system.


! CAUTION

If you intend to operate the boat with only one engine running, you must first close the cooling system seacock for the engine that will not be running. Failure to do so

Port Strainer



Stbd Strainer

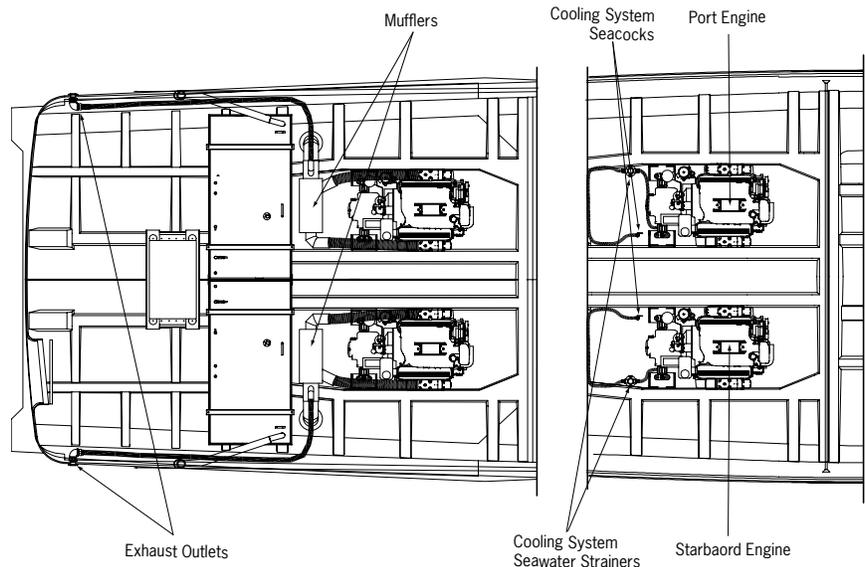

can flood the non-running engine with seawater, damaging it. Before you restart the non-running engine, open its seacock again.

Running an engine with an inadequate supply of antifreeze, or with obstructed or restricted seawater pickups or strainers can cause serious damage to the engine and its related systems.

If the engine temperature gauges show a higher than normal temperature, the respective cooling system may need to be repaired. If the gauge needle moves quickly toward a high temperature, immediately shut off the affected engine and have the cooling system inspected and repaired.

Exhaust System

The exhaust system for each engine consists of an exhaust manifold, exhaust piping, a muffler and the exhaust pipes used to vent the exhaust to the atmosphere. If the exhaust system contains leaks or obstructions, or has any other problem that prevents it from venting exhaust properly, carbon monoxide may escape and endanger you and your passengers. Check the exhaust system regularly for proper operation. Any change in engine noise could indicate an exhaust system problem and should be immediately investigated.

Engine Gauges

The helm is equipped with a complete set of gauges on the instrument panel. The gauges allow you to monitor the operation and condition of your boat's propulsion systems while underway. The side of the instrument panel that the gauges are on (port or starboard) determines the respective engine that the gauges are for. Familiarize yourself with the gauges before starting the engines for the first time.

CAUTION

Do not start the engines until you have read and understood the engine OEM information.

Tachometer

The tachometer displays the speed of the engine in revolutions per minute (RPMs). This is not the boat's speed over the water or the speed of propeller rotation. The tachometer may not register zero RPM when its engine's ignition key is turned off; this is normal.

CAUTION

The engine manufacturer has established a maximum RPM rating for your engines, as listed in the engine OEM information. Do not exceed the maximum RPM. Doing so could damage the engines. Likewise, your engines have a minimum wide open throttle RPM requirement. If your engine will not reach this minimum RPM contact your Carver dealer.

Temperature Gauge

The temperature gauge displays the temperature of the coolant in the engine's cooling system. Every engine is designed to operate within a specific temperature range. Refer to the engine OEM information for the normal operating temperature range of your engines. A sudden increase in the temperature gauge reading could indicate that the cooling system has become blocked; a cooling system intake hose has failed; or the coolant system's water pump has malfunctioned.

A Tip From Carver!

A cold engine has a tendency to stall when first put into gear. Let your engines warm up a few minutes before departing your dock or anchorage.

Each engine is equipped with a temperature alarm. The alarm sounds when the temperature of the engine's coolant increases to a predetermined point. If the alarm sounds, immediately shut off the affected engine. Even with high temperature alarms installed, it is important that you visually monitor both temperature gauges while running the engines. If a temperature gauge indicates excessive engine temperature, immediately shut off the affected engine.



CAUTION

The engine manufacturer has established a maximum coolant temperature rating for your engines, as listed in the engine OEM information. Do not exceed the maximum coolant temperature; doing so could damage the engines.

Engine Data Display

These data displays (Port and Starboard Engines) are able to show the various parameters of the engine performance. To operate the displays properly please refer to the manufacturer's information supplied in the Captain's Kit provided with this boat.



The engine manufacturer has established a minimum oil pressure rating for your engines, as listed in the engine OEM information. To avoid damaging the engines, shut them off if the oil pressure is below the minimum rating.

Fuel Gauges

The fuel gauges display the approximate amount of fuel in the fuel tanks. These gauges are not calibrated and should not be regarded as an accurate method of measuring the amount of fuel in the tanks. Both fuel gauges are OFF until the ignition switch for the port engine is turned ON.

Gauge Maintenance

The gauges on the helm instrument panel should be protected from the sun and weather when not in use. The gauges are not waterproof. Protecting them from the elements prolongs their life.

NOTE: *Small beads of moisture (condensation) can form behind the glass bezel on some gauges. This does not mean the gauge is defective. The Carver Limited Warranty does not cover the replacement of gauges that are cosmetically affected by condensation.*

The gauges can be affected by static electricity that may build up on their glass bezels. To help reduce the static electricity and thus improve the gauges' accuracy, periodically wash the bezels with warm water and a mild liquid detergent.

Helm Controls

The helm controls allow you to engage the boat's engines, control the boat's speed and engine RPMs, and control the direction in which the boat is traveling.

Shift/Throttle Levers

Two shift/throttle levers allow you to both shift the engines from neutral to forward or reverse and control the engine RPMs. With the levers in the center position, the engines remain in neutral at their lowest RPM levels. Lifting the levers above the neutral position shifts the engines to forward and increases the RPM levels. Lowering the levers below the neutral position shifts the engines to reverse and increases the RPM levels.

The shift/throttle levers are located on the starboard side of the steering wheel. The outboard lever controls the starboard engine and the inboard lever controls the port engine. The engines can be shifted/throttled independently to improve maneuverability in tight quarters. Because your boat has dual engines, it is recommended that you operate the engines at the same speed while cruising. This reduces engine noise and vibration, and improves engine efficiency.

Use the engine synchronizer gauge to monitor the speed of each engine. Adjust the shift/throttle levers so that the synchronizer gauge needle is centered.

NOTE: *Aligning the shift/throttle levers with each other does not necessarily mean the engines are synchronized. To accurately synchronize the engines, rely on the tachometers or the engine synchronizer gauge.*

Engine Synchronizer

The optional engine synchronizer allows you to electronically and mechanically interconnect both engine shift/throttle levers. This allows you to increase and decrease engine speed using one lever, and keeps the engines precisely synchronized. Refer to the OEM information for details on operating the engine synchronizer.

Shift/Throttle - Engine Interface

For the standard mechanical controls, push-pull cables are used to connect the shift/throttle levers to the engines. Refer to the OEM information for details on adjusting and maintaining the shift and throttle control systems.

For the optional electronic controls, the shift/throttle levers from the helm are connected to the engines by an electronic control system. Refer to the OEM information for details on adjusting and maintaining the shift/throttle control systems.

Steering

Your boat uses a hydraulic steering system. This system is preferable over a mechanical steering system because it provides better response for large boats.

The boat's helm is connected to the rudders through a hydraulic pump, a network of hydraulic lines, an oil reservoir, a hydraulic cylinder, and a tiller tie rod. When the helm is turned, oil pumps through the hydraulic line, which activates the hydraulic cylinder. The cylinder is connected to the tiller tie rod. Extending and retracting the cylinder moves the rudders, enabling you to steer the boat. With hydraulic steering, the effort needed to turn the helm remains the same regardless of the boat's speed.

For the hydraulic steering system to operate properly, it must have an adequate supply of hydraulic fluid and sufficient pressure within the hydraulic pump and lines. Refer to the OEM information for details on operating and maintaining the steering system.

Preparing for Cruising

Follow the steps below to safely fuel your boat and operate its engines.

Fueling

1. Make sure that your boat is securely moored.
2. Close all portlights, windows, hatches and doors.
3. Turn OFF all devices that use electricity to operate or create electricity.
4. Extinguish all open flames and smoking material on the boat and in the area around the fuel dock.
5. Turn all battery master disconnect switches to the OFF position.
6. Have all guests and passengers leave the boat. Only the fuel handlers should be in the area.
7. Estimate the amount of fuel you wish to take on.
8. Select the fuel tank you wish to fuel first.
9. Remove the appropriate FUEL fill deck plate using the cap removal tool supplied with your boat.



WARNING

While fueling, keep the fuel hose nozzle in constant contact with the metal fuel fill fitting. This is a safeguard against static electricity that could ignite any fuel vapor and cause an explosion.

 **CAUTION**

You must use the correct fuel for your boat's engines. Refer to the engine OEM information for the recommended type of fuel.

 **CAUTION**

Avoid spilling fuel on the gelcoat surface of your boat. Fuel can stain the gelcoat and damage any hull accent stripes that may have been applied

10. Your boat's fuel tanks are designed to take on fuel at a maximum rate of 9 gallons per minute (GPM) when the tank is between 25% and 75% full. During this time the pressure inside the tank must not exceed 4 psi. Be aware that many marine fuel pumps can deliver fuel at rates up to 35 GPM. This high fueling rate should never be used with your boat as it could damage your fuel system.

When fueling a tank that is either nearly empty or nearly full, decrease the fueling rate. This helps prevent fuel surge when the tank is empty, and back-up and spillage when the tank is full.

Begin pumping fuel into the fuel tank at a rate of no more than 9 GPM. When the tank is close to full, slow the fuel rate to less than 9 GPM.

11. Monitor the fuel tank's air vent. When the fuel tank is almost full, air whistles through the vent.
12. Replace the FUEL fill deck plate.
13. Repeat steps 9 - 12 for the remaining fuel tank.
14. Wipe up all spilled fuel.

Pre-Start Checklist

1. Read and understand this Owner's Guide and all OEM information.
2. Check both fuel gauges to verify that you have sufficient fuel for your trip.
3. Inspect the engine room:
 - a. Sniff for fuel vapor.
 - b. Check the bilge water level.
 - c. Check for oil in the bilge.
 - d. Check the crank case oil level in each engine.
 - e. Make an overall inspection of the engine room to look for signs of potential problems.
 - f. Follow all maintenance instructions described in Section 7 -Maintenance.
4. Turn the master disconnect switches for both engines batteries and the Accessory Battery to the ON position.
5. On the Safety Breaker Panel:
 - a. Switch the Main - One and Main - Two circuit breakers ON.

- b. Verify that all of the safety circuit breakers are ON.
 - c. If needed, switch ON the Windlass, Manual Sump and Electric Head circuit breakers.
6. On the DC Control Center:
 - a. Switch the System DC Main circuit breaker ON.
 - b. Switch the four Bilge Blower circuit breakers ON.
 - c. If you have navigation equipment installed at the helm and are going to use it, switch the Bridge Electronics circuit breaker ON.
 - d. Switch ON any other circuit breakers for equipment you may need.
 7. On the Bridge Breaker Panel, verify that the circuit breakers for the navigation equipment you will use are ON.
 8. Turn the bilge blowers ON using the blower switch at the helm or on the DC Control Center.

Make sure the bilge blowers are operating properly by feeling for air being blown from the bilge vents. These vents are located on either side of the hull amidships.

Operate the blowers for at least 4 minutes and until the engine room is free of any fuel vapor before starting the engines.

9. Verify that all safety gear is onboard and in proper operating condition. Make sure your boat carries all safety equipment required by federal, state and local regulations.
10. Verify that you have an adequate supply of fresh water.
11. Check the level of waste in the waste tank. Empty it if necessary. Refer to Section 4 - Emptying the Waste Tank.
12. Disconnect and store the shore power cord(s) and shore water hose.

Starting the Engines

1. Open the cooling system seacocks for both engines.
2. Move both shift/throttle levers to neutral.
3. Select the engine you wish to start first. NEVER start both engines at the same time.

WARNING

The ignition switch is spring activated. Release the key as soon as the engine starts. Failure to do so may damage the starter.

WARNING

If the engine does not start within 10 seconds, release the ignition key, then try starting the engine again. Do not hold the ignition key in the START position for more than 10 seconds.

4. Place one hand on the shift/throttle lever of the engine you are starting. With the other hand, turn the ignition key.

The oil pressure alarm sounds for the first few seconds after the engine has started; this is normal. The alarm is silenced as soon as the oil pressure increases to within the normal operating range.

If the engine is cold when it starts, it may run rough. Advance its shift/throttle lever slightly to keep it running.

5. When the engine is idling smoothly, start the other engine in the same manner as the first.

After the Engines Have Started

Check the engine gauges. Make sure all readings are within the normal range.



The engine room contains moving, hot machinery. Keep your hands, feet and body out of the engine room while one or both engines are operating.

3. Look into the engine room and visually inspect the fuel system hoses and exhaust hoses. If you see a leak or suspect that anything is out of order, shut off the engines and investigate. Identify and correct the cause of any problem before restarting the engines.
4. Let the engines warm up until the needles on the temperature gauges begin moving up.
5. Make sure any navigation systems installed are operating properly.
6. Periodically perform a visual inspection of the engine room while underway.

This page intentionally left blank

Launching the Boat

Have a professional launch your boat. Your dealer can either provide experienced people to do this or recommend someone.

Navigation

Understanding navigation is very important when operating your boat on the open seas. Instructions on how to navigate your boat are beyond the scope of this guide. Carver encourages you to read *Chapman's Piloting and Seamanship* and obtain instruction regarding how to navigate your boat.

Charts

You can obtain charts of the waters in which you intend to navigate from the National Ocean Survey, a branch of the National Oceanic and Atmospheric Administration in Washington D.C. The NOS offers a publication listing the charts you will need for your area. However, this listing may not include inland rivers. Charts of inland rivers are also available from the appropriate district office of the U.S. Army Corps of Engineers. Your dealer may also have charts of the waters in which you intend to cruise.

Keeping your charts up-to-date is a very important part of navigation. The Weekly Notice to Mariners available from the Defense Mapping Agency or the U.S. Coast Guard is an excellent resource for updating charts.

Compass

The compass is the most important piece of navigation equipment onboard your boat. To operate properly, the compass must be free from interference by local magnetic influences and electrical components. Refer to the OEM information for details on using and maintaining the compass. When it is time to compensate your compass, Carver recommends having it done professionally.

Horn

If you are navigating in fog or at night, use your boat's horn to alert other boaters of your presence. The horn meets U.S. Coast Guard standards.

Depth Sounder

An optional depth sounder can help you avoid entering waters that are too shallow for your boat and can aid in navigation.

Shallow Water Operation

Always pay attention to the depth of the waters in which you are cruising. Do not venture into waters which are too shallow for your boat's draft. Shallow water navigation can be very hazardous. If you do find yourself in shallow waters, reduce speed immediately. Consult nautical charts to determine your position. Try to plot a course out of the shallows through waters deep enough for your boat's draft. If your boat runs aground, radio for help and wait until it arrives. Do not attempt to relaunch your boat. You may do serious damage to your hull or underwater gear.

Controlling the Boat

Every boat owner should know how to perform the following procedures competently. Do not attempt any of these procedures without first receiving appropriate training.

Loading

When you load items onto the boat, have someone on the pier hand them to you after you have boarded the boat. Stow all items securely to prevent them from shifting when the boat is in motion. If your boat is loaded near capacity or if seas get rough, distribute the weight evenly and keep the load low. Don't make any abrupt changes in its distribution. Shift the load or move about only after stopping or slowing the boat.

Casting Off and Docking

Docking and casting off can be hampered by wind and current. It is important to use the current by approaching or leaving with the current instead of fighting against it. Also, the operator should adequately fender his boat against collisions with docks or other boats.

Leaving a Pier or Mooring

Getting underway from a pier is normally accomplished by taking in all lines except the bow spring. With a neutral rudder, power the boat forward using only the engine farthest from the pier. The boat will pivot around the bow spring line, moving the stern out and away from the pier. A fender should be placed between the bow and the pier to prevent scraping as the boat pivots about the bow spring. Once the stern is clear of boats and other obstructions, take the bow spring in and back the boat away.

At marina anchorages, boats are often secured to a mooring buoy. Fouling your propeller with a mooring line is the principal hazard when leaving a mooring. If you use a dinghy to reach your boat, make sure the dinghy line does not foul the propeller.

After getting onboard, start the engines and send someone forward to slacken the line. Release the line. In a river with current, the boat will gain headway with the current. After you are clear of the buoy, power the boat forward. In a calm bay, if there is neither wind nor current, back the boat away a few boat lengths. As you power forward, keep the buoy in sight and give it ample room until you are clear. Run slowly until you clear the anchorage to avoid creating a nuisance with your wake.

Landing at a Pier


To land at a pier, approach the pier at a right angle. If you desire a starboard side landing, place the rudders to port and reverse the port engine to check headway. Leave the starboard engine in forward gear to swing the boat parallel to the pier. For landings on the port side, turn the rudders to starboard and put the starboard engine into reverse as the boat comes in. You may have to shift into and out of gear to control the boat's speed.

Picking Up a Mooring

As you return to the anchorage, approach your mooring at slow speed. Take note of how other boats are lying at their buoys. They are heading into the wind or current and your approach course should be roughly parallel to their heading. Stay clear of other moorings to avoid fouling them. If you tow your dinghy, station a crew member at the helm to keep the dinghy line from fouling the propeller.

Shift the engines into neutral when you estimate that the boat's forward momentum will carry you to the buoy. Station someone at the bow with a boat hook to pick up the pennant float. If you are about to overshoot your mark, check headway as the bow comes up to the buoy. If you fall short, a few turns of the propeller should get you to the buoy. Keep the engine running until the pennant eye has been secured on the bitt or bow cleat.

If your crewman can not reach the pennant or if you overshoot, get clear and calmly try again.

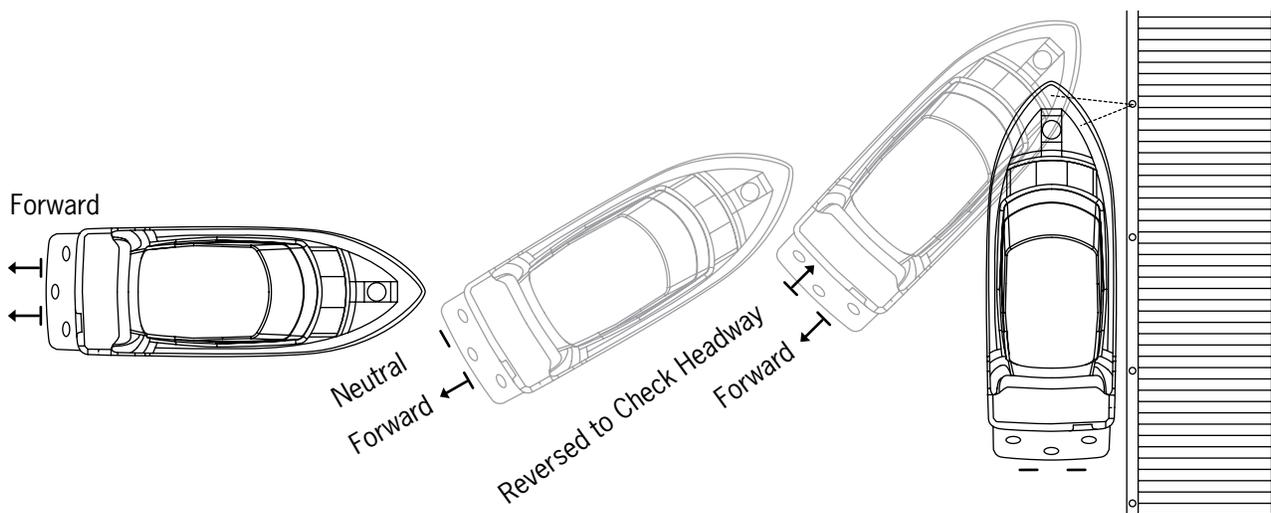

Maneuvering

The propellers on your boat can rotate in opposite directions. With only the port propeller rotating, your boat tracks forward and to starboard in forward gear and to port in reverse gear. With only the starboard propeller rotating, your boat tracks forward and to port in forward gear and to starboard in reverse gear.

With both propellers rotating at the same speed, the rudders amidships and the engines in forward gear, your boat tracks straight forward.

When the boat is moving backward, its rudders are not as effective and the side force from the propellers is used to steer the boat.

Maneuvering Astern

Backing a boat may be necessary in a crowded marina. Your boat's twin engines allow the boat to track straight astern or to either side. When backing, be sure to keep your trim tabs up. To make a turn to port, shift the port engine to neutral. A starboard turn astern is made by shifting the starboard engine to neutral.

Check sternway (stop reverse motion) by shifting your engines to forward gear and throttling forward.


Full stern turns can be executed, but watch the bow. The bow cuts a much wider arc than the stern and collisions could occur in crowded areas.

Checking Headway

Stopping the boat’s forward motion is referred to as “checking headway.” You should learn how to confidently stop your boat within any required distance. You can check headway by shifting engines to neutral and coming to a complete stop over a long distance, or by reversing engines and stopping within a shorter distance.

Close Quarters Turns

To execute a close quarters turn, check your headway, then shift one engine into reverse while shifting the other into forward gear. As you advance the throttles, the opposing forces cause the boat to pivot about a point centered between the propellers. You can assist the rate of turn by turning the rudders in the direction of the turn.

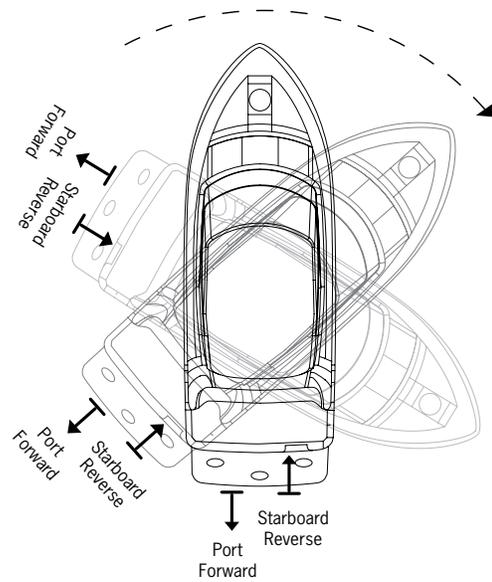

Bow/Stern Thrusters

Your boat is equipped with the optional bow and stern thrusters. This feature will also aid in close quarter turns. To effectively use this the main engines can be in neutral and idling. The thruster controls will allow you to position the boat next to another object slowly avoiding possible damage from moving too fast.


It also will allow you to position the bow in the direction you need to go before moving forward.

Thruster Control


Stern Thruster



Tracking Forward (Props Only)

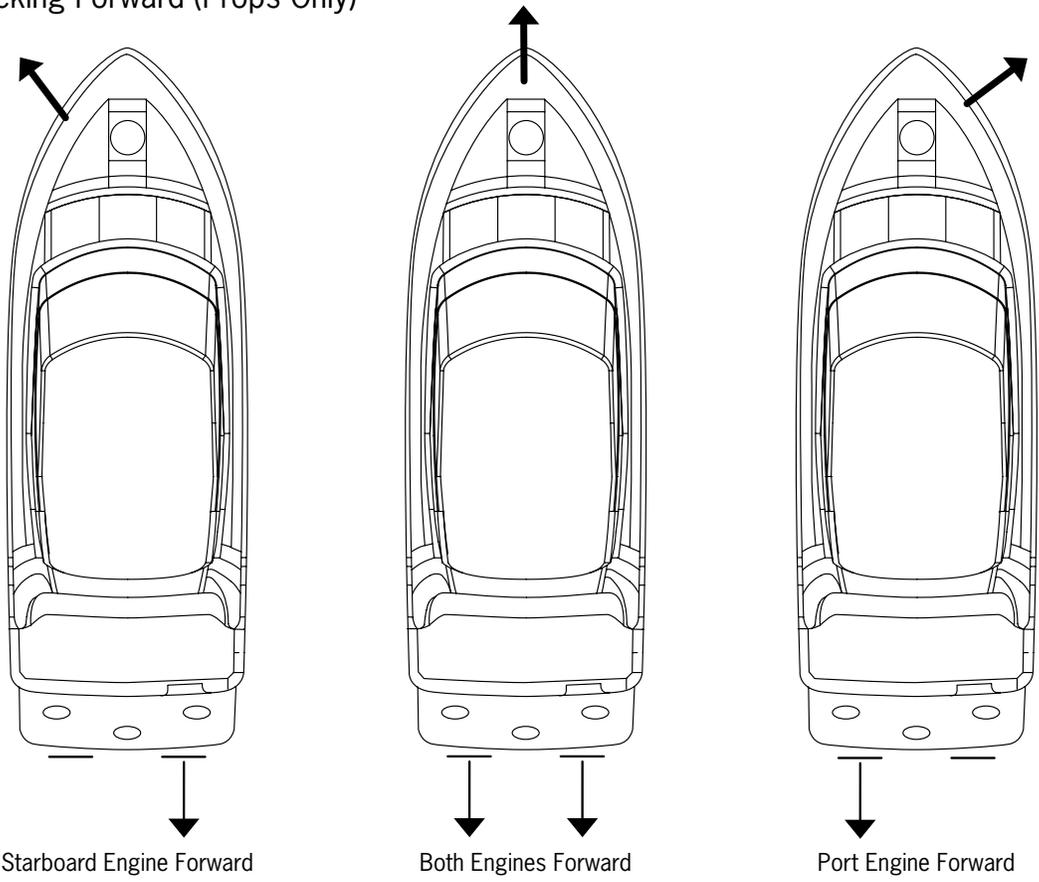

Tracking Astern (Props Only)

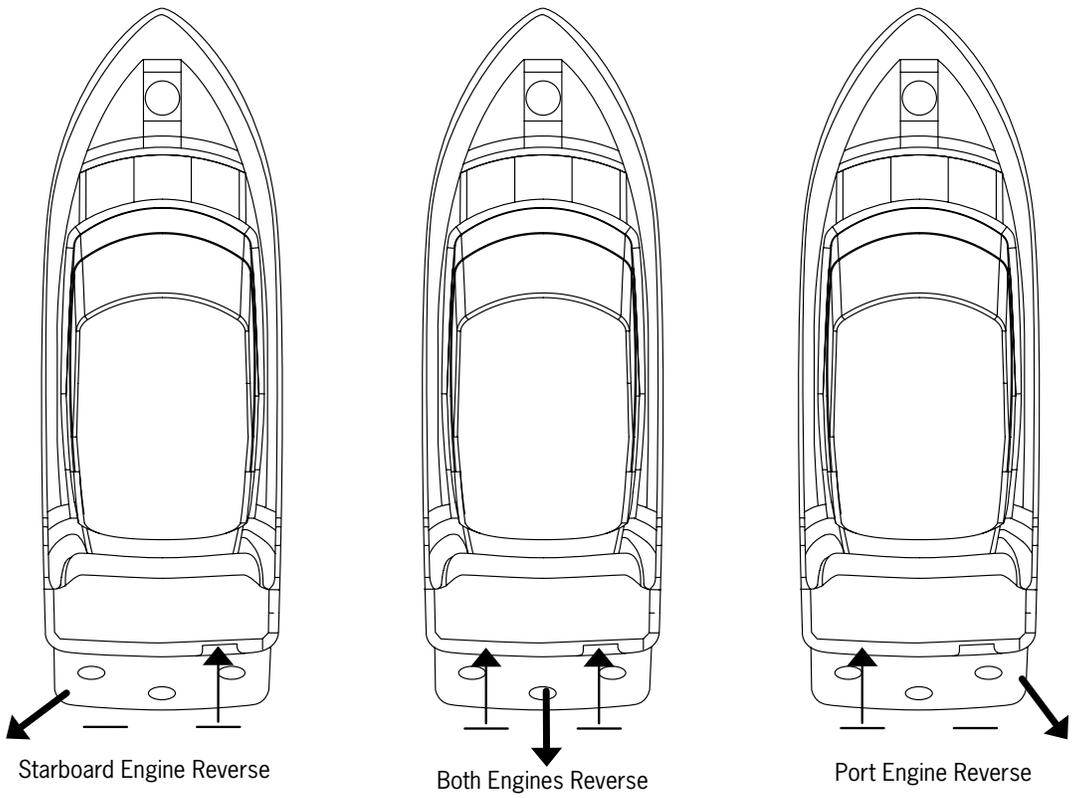

Towing

Always offer assistance to a vessel in distress. However, towing a capsized boat or a boat with a damaged hull is not recommended. In these situations, lend aid to the occupants and call the proper authorities. Remember, you are obligated to lend aid to any person in distress, but not to the vessel. If you believe your vessel can not tow the vehicle in distress, do not attempt it. One disabled boat is better than two.

Anchoring

An anchor's holding power depends on its weight and the length of the anchor line. The most effective length is six to seven times the depth of the water you intend to anchor in. For example, if the water is 10 feet deep, you should have 60-70 feet of anchor line.

Approach your selected anchor site from downwind. Come to a dead stop over the spot where you want to drop anchor. Have a crew member lower the anchor. When the anchor hits bottom, reverse engines and slowly move the boat backward to pay out more anchor line as the crew member keeps a slight tension on the line. When the proper length is out, the crew member can snub the line by winding it around the bow cleat. This should cause the anchor flukes to dig in and hold effectively.

Check for anchor drag. Immediately after anchoring, observe shoreline landmarks. After thirty minutes, observe the landmarks again. If the points of reference have changed, reset your anchor.

When weighing (pulling in) your anchor, pull the line in until it is vertical. When the line is taut, a hard tug will pull the anchor's shank up. If the anchor is stuck, wrap some of the line around a bow cleat and keep tension on the line. The boat's momentum may free the anchor. If there is a swell, wind the line around a bow cleat when the bow drops into a wave trough. As the bow lifts, it may free the anchor. If neither of these methods works, pay out a few feet of line, secure it around the bow cleat, and maneuver around the anchor. Keep the line tight until you find the angle that pulls the anchor loose.

A TIP FROM CARVER!

To avoid potentially damaging stress on the windlass, always tie off the anchor rope to the anchoring cleat.

An electric windlass simplifies the above procedures. Follow the above procedures and use the windlass control at the helm to drop anchor. To relieve strain on the windlass, hooks called *devil's claws* engage the chain when the anchor is down.

If you intend to stay at anchor overnight or if you anchor your boat close to another structure, consider dropping another anchor from the stern. This prevents your boat from swinging around if the wind or current shifts.



Be aware of Carbon monoxide (CO) poisoning while anchoring. Refer to Section 1 - Boating Safety for detailed safety precautions.

You may also need to anchor in a strong wind. If you drop your spare anchor, make sure the two anchors are laid out at an angle. If both anchors are set in-line and one of them drags, it may cut a trough for the other anchor to follow.


Stern Anchors

In some anchorages, boats use bow and stern anchors at the same time. To get these anchors down, drop the bow anchor first, then pay out extra anchor line (15-18 times the depth). Drop the stern anchor and adjust the length of line payed out on both anchors as necessary.

Mooring Lines

It's a good idea to familiarize yourself with mooring line terminology and using mooring lines. If necessary, obtain training on mooring your boat. Learn how and when to tie the various knots used in seamanship. Boats that are not moored correctly can suffer and cause serious damage. The following information serves only as a guide to mooring your boat.

The mooring illustration demonstrates possible mooring lines for a small vessel. These lines include the (1) bow line, (2) after bow spring, (3) after quarter spring, (4) stern lines and (5) forward quarter spring. Of the two dockings shown, the left one shows how to tie up when docking your boat in an alongside berth. The docking shown on the right is used when tying up at four corners of the boat.

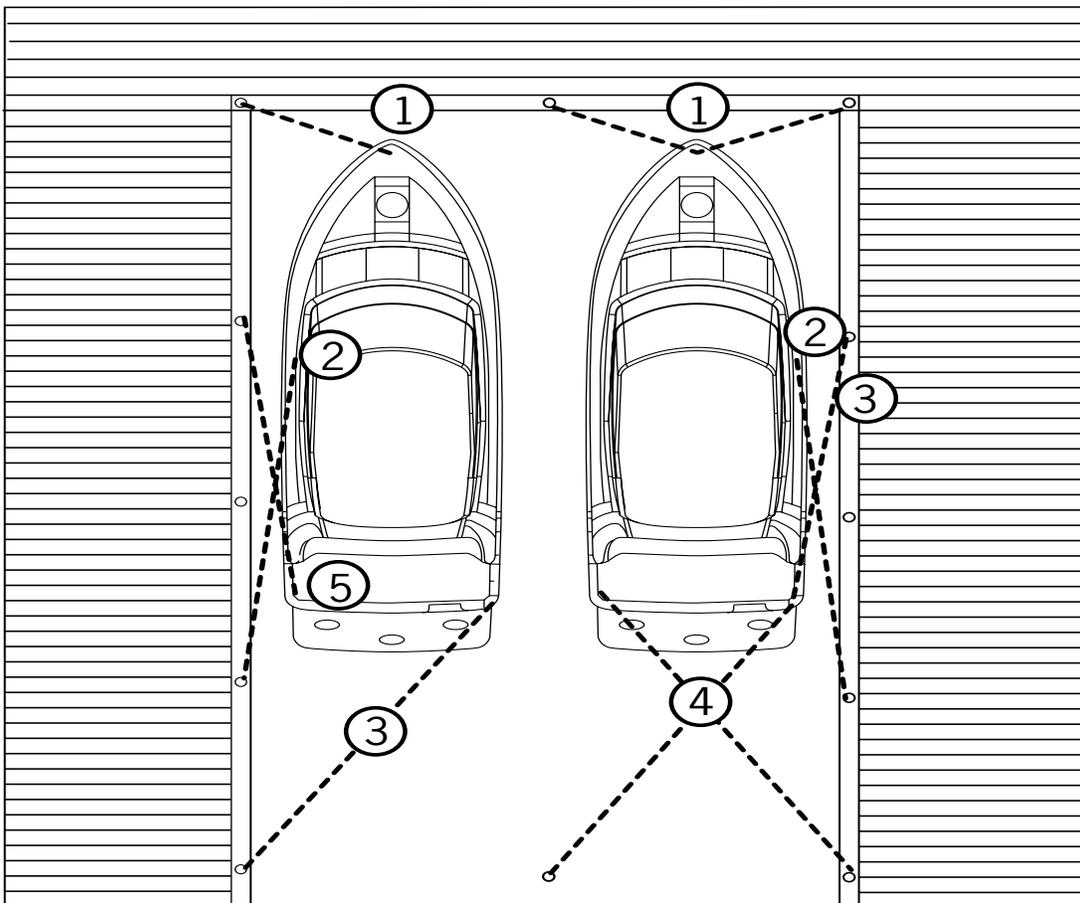

The two spring lines are crossed and running to separate deck cleats. If possible, the stern line should be run to the offshore quarter cleat. Spring lines are useful in preventing undesired movement ahead or astern in a berth; they also keep a moored vessel in position when there is a significant rise or fall in tide.

Getting Underway

It takes training and experience to become an “expert yachtsman.” Reading and understanding this Owner’s Guide gives you only part of the knowledge you’ll need to operate a boat safely and skillfully.

Carver owners have a wide range of abilities, from seasoned yachtsmen with years of experience to absolute beginners with a new-found love for the water. Be honest with yourself in appraising your level of skill.

Shakedown Cruise

Before taking your boat on its first outing, be sure that the following tasks have been completed.

1. Your Carver Dealer has completed Pre-Delivery commissioning. This inspection is documented on the Pre-Delivery Service Document and is signed by the dealer.
2. All warranty registration cards have been completed and mailed.
3. You have read and understand this Owner’s Guide and all OEM information.
4. The safety equipment onboard your boat is in compliance with federal, state and local regulations.
5. Your boat has been documented or registered and displays the appropriate identification on the hull.
6. A representative of your Carver Dealer has reviewed the operation of the boat and its systems with you and answered all of your questions to your satisfaction.

If possible, pick a calm day for your first outing. The shakedown cruise with a new boat is not the best time to bring friends or guests along. Entertaining guests can distract you from the real purpose of the cruise, which is to familiarize yourself with your new boat. Bring only those people (spouse and children) who will make up your regular crew. Invite the sales person who sold you the boat or a member of your Carver Dealer’s service staff along for the ride.

Carry a pad and pencil with you during this first outing. Write down any questions that come to mind during the cruise so you can discuss them with your dealer.

Follow the procedures outlined at the beginning of this section for fueling and starting the boat’s engines.

This may be the first time you have been in total command of your new boat. Proceed slowly. Have fun but remember that the objective of the cruise is to learn more about how your boat operates and handles. Operate the engines at different RPMs. Try different trim angles. Monitor the gauges. Practice backing down and turning slow speed tight corners that simulate docking maneuvers.

Operating at Planing Speed

Your boat has a planing hull. A planing hull skims over the water rather than through it. To do this, however, your boat first has to reach a certain speed, called planing speed.

When you first accelerate from a dead stop, the trim angle of the boat increases, causing the bow to rise and the stern to drop. If you continue to accelerate, the boat eventually achieves plane, which means the bow slowly drops to a more level attitude.

CAUTION

It is important to get on plane as soon as possible and avoid speeds that cause the boat to plow through the water with the boat in a bow-high attitude. A bow-high attitude obstructs your vision and limits the boat's handling and performance capabilities.

Once the boat is on plane, you can back the throttles off to a point where the hull is still planing but the engines are operating at a fuel-efficient speed.

Trim Tabs

Your boat is equipped with a set of trim tabs. Trim tabs help the boat get on plane by allowing you to adjust the attitude of the boat for variables such as load, passengers, seas or wind. Under normal conditions your boat does not need adjustments to the trim tabs to achieve plane. Use the tabs at planing speeds to make minor adjustments in the fore-to-aft and beam-to-beam angle of the boat.



To use the trim tabs:

1. On the Safety Breaker Panel:
 - a. Turn the Accessory Battery master disconnect switch to the ON position.
 - b. Switch the Main - One circuit breaker ON.
2. On the DC Control Center:
 - a. Switch the Main circuit breaker ON.
 - b. Switch the Trim Tabs circuit breaker ON.
3. A set of trim tabs controls are located at the helm. The controls consist of two switches. The port switch controls the starboard tab; the starboard switch controls the port tab. Each switch is labeled BOW UP and BOW DOWN. Before advancing the throttles, press both switches on the BOW UP side for 5 seconds. This lifts the trim tabs to the full up position.

4. Advance the throttles to bring the boat on plane. Adjust the engine RPMs for cruising speed.

CAUTION

Do not overtrim your boat. When adjusting the trim tabs, press their control switches for only one-half second at a time, then allow the boat to respond. Continue to adjust the trim tabs in this manner until the boat is at the desired trim angle. Over-trimming can cause the bow to veer and may lead to loss of control. Always reset the trim tabs to the BOW UP position before advancing throttles to achieve plane. Accelerating the a loss of control.

When the seas are at any angle to the boat's stern, put the trim tabs in the full BOW UP position. Do not change the trim tabs' position until the seas are no longer at the stern.

5. Use the trim tabs individually to make beam-to-beam adjustments. If the majority of your passengers are sitting on the port side, you may find that the starboard side of your boat is riding higher than the port side. Use the BOW DOWN side of the starboard trim tab switch to adjust the trim.

If your passengers decide to shift to the other side of the boat, level the boat by pressing the BOW UP side of the starboard trim tab switch for a few seconds. This undoes your previous adjustment. Then, use the BOW DOWN side of the port trim tab switch to adjust the trim.

6. The trim tab switches can be used together to bring the bow of the boat to a lower attitude. This adjustment is often used when running into choppy seas. Bringing the bow down uses the sharper part of the boat's V hull to break through waves. Use the BOW DOWN side of both trim tab switches simultaneously to adjust the trim. Be careful when making bow down adjustments. Excessive bow down trim can cause considerable bow spray which hampers visibility and reduces control of your boat.

Helm Switch Panel - Starboard side

Trim Tab switches



Maintenance Schedule

The maintenance activities and their intervals listed on the following pages are provided as guidelines only. The ideal maintenance activities and maintenance schedule depend on the components installed in your boat and the manner and environment in which you use your boat. The more frequently you use your boat, the more often maintenance needs to be performed. If you use your boat in salt water, it requires more maintenance, especially on its exterior.

For instructions on when and how to maintain many of your boat's components, refer to the OEM information.

Maintenance activities are divided into four types:

Type A Maintenance

Perform Type A maintenance 48 hours after the first launching of your boat, and 48 hours after launching your boat following a period of onshore storage.

Type B Maintenance

Perform Type B maintenance after the engines have operated for 25 hours following launching, whether your boat is new or coming out of onshore storage.

Type C Maintenance

Perform Type C maintenance semiannually or after the engines have operated for 100 hours, whichever comes first.

Type D Maintenance

Perform Type D maintenance annually or after the engines have operated for 200 hours, whichever comes first.

Maintenance Log

Use a maintenance log to keep a record of the maintenance activities you perform on your boat. The log should list both the activities described in the following charts and the maintenance activities for the OEM equipment as recommended in the OEM information. Make

| | Type A | Type B | Type C | Type D |
|--|--------------------------|--------------------------|--------------------------|--------------------------|
| ENGINES AND DRIVE SYSTEM | | | | |
| Perform maintenance as outlined in the engine OEM information. | Refer to OEM Information |
| Inspect water intake hoses and connections. | | X | X | X |
| Inspect exhaust system hoses and connections. | X | X | X | X |
| Inspect exhaust guard covers. | | | | X |
| Check prop for balance and nicks. | | | | X |
| Check strut bearings. | | | | X |
| Check rudder alignment. | | | | X |
| Check all thru-hull fittings. | | | | X |
| Inspect shaft seals. | X | X | X | X |
| Check engine and shaft alignment. | X | X | X | X |
| Spray ignition switch with contact cleaner. | | | | X |
| Tighten engine mounts. | | X | | X |
| Weigh fire suppression chemical tank. | | | X | X |
| CONTROL SYSTEM | | | | |
| Make any necessary throttle and shift adjustments. | | X | | X |
| Lubricate cables and controls. | | | | X |
| STEERING SYSTEM | | | | |
| Inspect linkage and connections. | | X | | X |
| Inspect hydraulic fluid level. | X | X | X | X |
| Inspect rudder seals. | X | X | X | X |
| Inspect tiller tie bar linkage. | | X | X | X |
| Inspect trim tab reservoir. | | X | X | X |

| | Type A | Type B | Type C | Type D |
|---|--------------------------|--------------------------|--------------------------|--------------------------|
| ELECTRICAL SYSTEM | | | | |
| Inspect and clean batteries. | | | X | X |
| Check battery fluid levels. | | X | X | X |
| Check operation of all 12-volt equipment. | X | X | X | X |
| Check operation of all AC equipment. | | X | X | X |
| Inspect shore power cords. | | | X | X |
| Inspect generator water intake and discharge. | | X | X | X |
| Inspect zincs anodes. | * | * | * | * |
| Perform generator maintenance. | Refer to OEM Information |
| FUEL SYSTEM | | | | |
| Clean engine fuel filters. | | X | X | X |
| Inspect for fuel leaks. | X | X | X | X |
| Inspect fuel lines for signs of chafe. | | X | X | X |
| FRESH WATER SYSTEM | | | | |
| Flush water tank(s) and system. | | | X | X |
| Clean in-line water filter. | | | X | X |
| FIBERGLASS / WOODWORK | | | | |
| Clean fiberglass. | | | X | X |
| Wax hull and all non-tread areas. | | | X | X |
| Repair chipped fiberglass. | | | | X |
| Clean interior woodwork. | | | | X |

* Inspect the zinc anodes at least once every two weeks. Check with your marina or consult other local boat owners to determine the average life expectancy of your boat's zinc anodes. If you notice a rapid deterioration of the zinc anodes, have a professional yacht corrosion specialist check your boat, local seawater and dock.

| | Type A | Type B | Type C | Type D |
|--|----------------------------------|----------------------------------|----------------------------------|----------------------------------|
| INTERIOR | | | | |
| Perform maintenance on the heads. | Refer to OEM Information |
| Inspect thru-hull fittings. | X | X | X | X |
| Clean refrigerator/freezer. | | | X | X |
| Clean range and microwave oven. | | | X | X |
| Lubricate door hinges and locks. | | | X | X |
| Clean vinyl fabrics and wall coverings. | | | X | X |
| Spot clean woven fabrics. | | | | X |
| Spot clean carpet. | | | | X |
| EXTERIOR | | | | |
| Check compass for magnetic deviation. | | | | X |
| Check trim tab system for leaks. | | X | | X |
| Check tightness and caulking of deck hardware. | | | | X |
| Clean upholstery. | | | X | X |
| Clean plexiglass surfaces. | | | | X |
| Lubricate hinges, latches, and locks. | | | X | X |
| Wash weather covers. | | | | X |
| BILGE SYSTEM | | | | |
| Check hull drain plug. | X | X | | X |
| Check and test bilge pumps. | X | X | X | X |
| Inspect sump pump(s). | | | X | X |
| Check and test bilge blowers. | Each time before starting engine |

copies of the log and keep the copy in a safe place.

Exterior Maintenance

The following paragraphs explain how to maintain the various materials present outside your boat's cabin to help keep the boat looking new.

Fiberglass Surfaces

The exterior fiberglass surfaces of your boat are coated with a protective layer of gelcoat. Gelcoat forms a hard, smooth and durable surface. It does, however, contain microscopic pores that, over time, can collect dirt and discolor if the gelcoat is not kept clean.

CAUTION

Do not use abrasive cleaners when washing your boat. Abrasive cleaners scratch and dull the gelcoat.

Wash the boat with fresh water after each outing to help keep the gelcoat clean. If you operate your boat in salt water, wash it at least once every week, even if it hasn't been used since the last washing. Periodically wash the boat with a solution of fresh water and mild soap. Use a sponge to wash smooth surfaces and a stiff nylon or natural bristle brush to wash nonskid surfaces.

WARNING

Do not wax the nonskid surfaces. Waxing them makes them slippery and dangerous to walk on.

Wax all non-tread areas at least once a season. Use a high quality, non-yellowing, marine wax. Waxing your boat provides a shiny surface and seals the pores in the gelcoat, making it easier to keep clean.

CAUTION

The continued and frequent use of abrasive polishing compounds eventually erodes the gelcoat.

Gelcoat eventually dulls with age, much like the paint on your car. When it does this, you can restore the gelcoat's luster using an electric buffer and a very fine grade polishing compound. Ask your Carver Dealer what brand and grade of polish to use.

Stress cracks are common on all fiberglass boats. In the majority of instances these cracks are cosmetic and limited to the gelcoat surface only. Gelcoat stress cracks are rarely an indication of structural problems. If you discover stress cracks in your boat contact your Carver Dealer.

NOTE: *The repair of cosmetic (non-structural) gelcoat stress cracks is not included under the terms of the Carver Limited Warranty.*

Gelcoat Repair

Cosmetic repair of minor gelcoat nicks and scratches is not difficult nor does it require the use of special or unique tools. Any boat owner with a little practice can make visually satisfying repairs. Repairs to fiberglass laminates or structural fiberglass components are best left to the experienced technicians at your Carver Dealer.

A gelcoat repair kit is available from your Carver Dealer (Carver part number 82036-03). This kit includes color matched gel, gel hardener and detailed instructions on making gelcoat repairs.

Gelcoat Blisters

While fiberglass is a durable and economical material, it is not indestructible. The most commonly known problem associated with fiberglass is blistering. These blisters generally form in the gelcoat or in the outer most layer of laminate. They can range in size from microscopic to two inches or larger in diameter.

The appearance of fiberglass blisters does not indicate structural problems or faulty hull lamination. Gelcoat blisters form through a natural process and are quite common. If you discover blisters on the underwater portion of your boat's hull, contact your Carver Dealer.

Hull Bottom

The underwater portion of your boat's hull is coated with a high-quality, factory-applied coat of anti-fouling bottom paint, applied after the hull has been carefully prepared. The paint has a high copper content and anti-fouling elements that retard the growth of marine life on the bottom of your boat's hull. The anti-fouling elements in this paint have a limited life span, usually from one to three years, depending on how and where you use your boat.

Inspect the hull bottom once a year. If you see gelcoat showing through the bottom paint, repaint the hull. Be sure to use a paint that is compatible with the factory-applied paint. Failure to do so can void your bottom paint warranty. Also make sure the paint is formulated for the type of water you operate the boat in. See your Carver Dealer for assistance in selecting an appropriate bottom paint.

To prepare the hull bottom for painting, lightly sand the existing paint with 80 grit or 100 grit sandpaper. Remove all dirt and sanding residue from the hull. Apply the new paint using a brush, roller or sprayer. If you wish to apply a second coat, allow the first coat to dry before proceeding.

Underwater Metal Components

The underwater portion of your boat's hull has been carefully prepared, primed and coated with a high-quality, anti-fouling bottom paint at the factory. However, the underwater metal components, including the shafts, struts, propellers, trim tabs and thru-hull fittings, were NOT primed or painted at the factory. You are responsible for priming and painting all of the underwater metal components. Use a high-quality primer and anti-fouling paint. Reprime and repaint these components whenever bare metal is visible.

NOTE: *Painting the propellers requires special care at attaining a smooth surface. A rough surface on the propellers will seriously affect the boat's performance.*

If you need additional information on priming and painting the underwater metal components, please contact your Carver Dealer's Service Department.

Caulking and Sealants

Deck fittings, rail bases, window and all underwater fittings have been sealed with the finest quality sealants. These sealants, however, do not last indefinitely. The working action of the boat and the expansion and contraction caused by variations in outside temperature eventually break down the sealant.

Fittings that have begun to leak must be resealed. Remove the fitting and clean the old sealant from both mating surfaces. Reseal the fitting using the sealant recommended by your Carver Dealer.

Stainless Steel Rails and Hardware

Stainless steel is not rust-resistant nor is it stain-resistant. When left in contact with the marine environment it does rust and corrode. Proper care helps keep the stainless fittings on your boat looking bright and shiny.

Clean the stainless steel rails and fittings after each outing with either soap and water or glass cleaner. If you operate your boat in salt water, clean the rails and fittings at least once every week, even if the boat hasn't been used since the last cleaning.

If you discover any rust, remove it immediately. Failure to do so leads to irreversible pitting. Use brass, silver or chrome polish to remove rust on stainless steel. Wax the stainless fittings and rails to help protect them from the elements and keep them looking their best. Use the same wax you use on the fiberglass surfaces of the boat.



CAUTION

Never use abrasives like sandpaper or steel wool to clean stainless steel fittings or rails. Never use mineral acids or bleach to clean stainless steel. Never let stainless steel come into prolonged contact with iron, steel or other metals which cause contamination leading to rust or corrosion.

Decorative Striping Tape

A variety of decorative stripes may be used on the exterior of your boat. Striping tapes are custom-made to Carver's color and size specifications. Replacement striping tape is only available through Carver Dealers. To remove a damaged section of tape, heat the area with a hair dryer. This softens the adhesive and makes the tape easier to remove. To remove any adhesive residue, use acetone.



CAUTION

When fueling your boat, avoid spilling fuel on any of the striping tape. Fuel damages the striping tape.

Hatches and Windows

The hatch frames on your boat are fabricated from aluminum. Some of these frames are painted with enamel. To clean both the painted and unpainted frames, use a sponge dipped in a solution of fresh water and mild soap. Do not use a brush or abrasive cleaner as these can scratch the painted frame surfaces, damaging their appearance.

The cabin windows are made from tempered glass. Clean them with a soft cloth and glass cleaner. The bridge wind screen is made from formed plexiglass. Clean it with a solution of fresh water and mild soap.

Exterior vinyl Upholstery

Refer to the OEM information for details on cleaning the exterior vinyl upholstery.

Avoid saturating the exterior cushions with water. To enhance the appearance of the exterior cushions and upholstery, occasionally treat them with an approved vinyl protectant.



CAUTION

If you have used Dr. vinyl to repair damaged upholstery, do not use the following cleaners on the repaired area as they will damage it.

- Denatured alcohol
- 3M Citrus Cleaner
- Ammonia and hydrogen peroxide

Exterior Carpet

Rinse the optional bridge and deck carpet with fresh water when cleaning the other portions of the boat's exterior. When the exterior carpet becomes soiled, remove the carpet from the boat and wash it with hot water and any brand of carpet detergent suitable for hot water extraction. To remove stains from the carpet, refer to the carpet OEM information.

Canvas

White vinyl

White exterior enclosures are made from vinyl coated materials. Clean the enclosures using a sponge dipped in a solution of fresh water and mild soap. To remove heavy dirt, use a vinyl cleaner. Treat the vinyl with a vinyl protectant twice each season.

Sunbrella

Colored canvas enclosures are made from Sunbrella fabric. This fabric should be cleaned regularly before dirt accumulates and becomes embedded in it. The fabric can be cleaned without removing it from the stainless steel bow supports. Refer to the OEM information for details on cleaning the Sunbrella fabric.

To store the fabric:



The fabric must be completely dry before you store it. Moisture on stored fabric can cause the glass to cloud, and the fabric and thread to break down.

1. Thoroughly air dry the fabric.
2. If possible, store the fabric flat (avoid rolling it).
3. Avoid storing the fabric so that its zipper(s) imprints into the next curtain.
4. Place the fabric in a dry, ventilated area.

When you remove the fabric from storage, check it for cloudy glass and zipper imprints. In most cases, these can be removed by hanging the fabric in the sun.

Deck Enclosure Windows

The enclosure curtain's clear vinyl windows are easily scratched if cleaned incorrectly. Because of this, use only nonabrasive cleaners and a soft cloth to clean the vinyl windows. To remove water spots, use glass cleaner and a clean, soft cloth. To remove dirt and dust, use a clean, soft cloth dipped in a solution of fresh water and very mild soap. Do not use paper towel to clean the clear vinyl windows as it will scratch them.

There are several cleaners made specifically for vinyl windows. If you decide to use one of these cleaners, first try the product on a small, inconspicuous area to make sure that it does not damage or scratch the vinyl surface.

Interior Maintenance

One of the best things you can do to maintain the interior of your boat is to ventilate the cabin as often as possible. Do not allow moisture to accumulate in the boat's interior. Moisture leads to a damp, musty environment, which encourages the growth of mildew.

Woodwork

Solid hardwood and hardwood veneer are used throughout the interior of your boat. Treat this woodwork like you treat your finest furniture. Dust it on a regular basis using 3M Clean and Shine and a soft rag. Do not use wax-based furniture polish or cleaner containing abrasives.

Do not lay wet or damp towels or clothing on or against the finished hardwood surfaces.

The interior woodwork was finished at the factory with a special industrial/commercial grade finish. If you need to refinish any woodwork, contact your Carver Dealer to order the appropriate product. Follow the manufacturer's instructions on the product package when applying the finish.

High Pressure Laminate

High Pressure Laminate (HPL) is used on many of the cabinet faces and counter tops inside your boat. HPL is extremely durable and easy to clean. Clean the laminated surfaces with a cleaner made for use on household counter tops. Avoid using the counter tops as cutting surfaces. Cutting or slicing on the HPL surfaces can permanently scratch them.

Fabrics

The fabrics used in your boat's interior include drapes, pillow shams, bed spreads, woven headliners, and some sofa and chair coverings. Some of these fabrics have been treated with a stain protector. All of the fabrics require periodic cleaning. For best results, have the fabrics dry cleaned.

For furniture upholstered in Ultraleather, refer to the OEM information for details on cleaning this material.

Carpet

The carpet used on the interior of the boat has been treated with a stain protector. Even so, the carpet still needs periodic cleaning. Care for the carpet as you would care for the carpet in your home. Vacuum it often and shampoo it as needed using a carpet shampoo.

When your boat is new, the carpet sheds and needs to be vacuumed frequently. This is normal. The shedding stops after a few weeks.

Interior Fiberglass

Some of your boat's interior components, such as the shower stalls and stateroom berth platforms, are made of gelcoated fiberglass. Interior fiberglass can be cleaned with any household cleaner that has been made for cleaning fiberglass. Many of these types of cleaners are marketed as "tub and tile" cleaners. Do not use abrasive cleaners on the interior fiberglass surfaces. Abrasive cleaners scratch and dull the shiny gelcoat surface.

Plexiglass

The shower door, mirrored face of the head medicine cabinets, and other areas of your boat are made of plexiglass. Clean plexiglass with a solution of fresh water and mild liquid detergent. Remove any fine scratches with a fine automotive acrylic rubbing and polishing compound.



CAUTION

Do not use glass cleaners, abrasive cleaners, or aromatic solvents on plexiglass. Doing so etches the plexiglass.

Mechanical Systems

The following paragraphs explain how to maintain your boat's propulsion, electrical, fresh water, bilge and sanitation systems.

Engines/Generator

Refer to the engine and generator OEM information for instructions on maintaining your boat's engines and generator. There may be a seawater strainer installed in the water intake lines for each engine and the generator. At least once every 30 days, close the seawater seacocks, then open and clean the strainers. If you are operating the boat in dirty waters or areas with a high degree of aquatic vegetation, inspect the strainers more frequently. A clogged strainer restricts the intake of seawater which can cause the affected engine or the generator to overheat.

Thru-Hull valves

Inspect the thru-hull valves on a monthly basis. Make sure the connections between the hose and the valve are tight. Look for water leaks around the area where the valve and hull meet. Every 30 days open and close each valve two or three times. This guards against the valve seizing in the open or closed position. While doing this make sure the valve handle is securely fastened. Tighten any loose handles. Refer to Section 9 - Thru-Hull Fittings for the location of the thru-hull valves.

Propeller Shaft Seals

The propeller shaft extends through a watertight fitting called a shaft seal. Check the shaft seal every month; if the seal is leaking, contact your Carver Dealer.



DANGER

Make sure the engines are OFF before inspecting the propeller shaft seals. The engine room contains moving, hot machinery. Keep your hands, feet and body out of the engine room while one or both engines are operating.

Props

Inspect your props often. Carry a swim mask in your boat so you can inspect the props while swimming. Props that are out-of-balance or damaged can diminish the boat's performance by reducing the boat's speed, causing steering problems, and creating vibrations. Vibrations can lead to drive train damage.

Have the propellers balanced by an established propeller repair shop at least once a year. Repair or replace damaged props.



WARNING

Wear gloves when handling a propeller. Its blades are sharp.

A TIP FROM CARVER!

Consider purchasing and carrying a spare set of props onboard your boat. Many marine dealers do not carry a full inventory of replacement propellers. A spare set allows your vacation or cruise to continue in the event that your boat's primary set of props is damaged.

Struts

Propeller shaft struts require very little maintenance. Within each strut is a strut or cutlass bearing that provides a smooth surface for the shaft to rotate. These bearings occasionally need to be replaced. They need replacement more often if you use your boat in water that has a lot of sand or other abrasive material suspended in it. Have a marine technician inspect the strut bearings whenever the boat is pulled. Replace the bearings when the technician recommends it.

DC Electrical System

The majority of difficulties that occur with the 12-volt DC electrical system are caused by poor battery maintenance. The factory-installed batteries on your boat should function normally for several years if properly maintained. These heavy-duty batteries can be discharged and recharged repeatedly without damaging them; however, completely discharging or overcharging a battery can shorten its life span.

To maximize the useful life of the batteries:

- While using the boat, use the voltmeters to frequently monitor the voltage level of each battery or battery bank. Monitor the charge level with the engines turned off (static condition). Use the onboard battery charger or the engine alternators to recharge the batteries when they are not fully charged. Refer to Section 2 - Charging the Batteries for more information. When the battery bank is fully charged, the voltmeter reads between 12.3 and 12.6 volts.
- Do not store batteries that are only partially charged. Recharge each battery, if necessary. Check the voltage level every 30 days while the battery is in storage and recharge it if the voltage reads below 12.3 volts.
- Do not charge the batteries if they are already fully charged. The

engine alternators can not overcharge the batteries. The onboard battery charger can overcharge the batteries because, when it determines the batteries are fully charged, it does not shut off but rather switches to trickle charge mode. Trickle charging a fully charged battery reduces its useful life.

WARNING

Disconnect the batteries when performing maintenance tasks on the DC electrical system. Failure to do so can lead to electrical shock.

Inspect the batteries once every month. Clean any corrosion that has developed on the battery terminals. Spray a terminal protector on the terminals and battery cable eye connectors. Make sure the battery cables are securely fastened to the terminals. Tighten the nuts only slightly beyond finger tight with a wrench.

Check the level of fluid in each battery cell. Fill any low cells with distilled water only. The fill level is marked on the side of the battery case.

Spray the connections for the bridge instruments and switches with an electrical connection protector every six months.

Fresh Water System

Flush and sanitize the fresh water system at least once every season. Flushing involves draining all water from the system. Sanitizing involves using a commercially-made fresh water tank sanitizing liquid that is available at many marine supply stores.

Shower

If the water flow from a shower head becomes restricted, it may be due to the accumulation of sediment in the shower head. If this happens, remove the head and rinse it with clean water. If necessary, clean the discharge holes with a narrow wire.

Water Taps

Periodically remove and clean the filter screens from the sinks' water taps. Rinse the screens with clean water. If necessary, clean the screens with a narrow wire. A buildup of debris in the filter screens can block the water flow enough to cause the pressure water pump to repeatedly cycle on and off.

Sump

Clean the sump and sump filter frequently. Hair, dirt and soap scum collect in the sump and, if not removed, eventually clog the sump pump or sump hoses.

Pressure Water Pump

There is an in-line filter installed near the pressure water pump. Clean the filter once a month. Refer to Section 4 - Fresh Water System diagram for the exact location of the pump and filter.

THIS PAGE INTENTIONALLY LEFT BLANK

Winterization - Storage

Before you store your boat for an extended period of time during which temperatures could fall below freezing (such as during winter), you must properly winterize it. Winterizing your boat removes all water from its various systems. If this water froze, it could cause extensive damage to the boat and its systems.

Carver recommends that you hire a professional to winterize your boat and its systems. Carver also recommends that you place your boat in dry (out-of-water), as opposed to wet, storage. Some of the winterizing procedures can only be completed when the boat is out of the water. Dry storage also gives you the opportunity to thoroughly inspect your boat's hull and underwater components for any maintenance needs.

Lifting

To lift your boat from the water, hire an experienced professional who has the proper equipment and is trained in lifting yachts. The boat's hull must be properly supported during the lifting operation to avoid serious and permanent hull deformation.



CAUTION

Do not place a lifting strap around the boat's prop shaft or any other underwater component.

Use approved lifting straps. **SLING** tags are located on the sidedeck of the boat. These are the only places where lifting straps should be positioned for lifting.



WARNING

Never go under the boat when it is suspended in a lift.

Blocking

When your boat is placed in dry storage its hull must be properly blocked to avoid damaging it. You can either use a cradle or blocking supports.

If you are using a cradle, the forward end of the cradle should be slightly elevated to position the boat in a bow-high attitude. This allows any water in the bilges to flow to the back of the aft bilge and drain through the hull drain.

All of the blocking supports should be setup to prevent the boat from shifting while it is in storage.

Winterization - Systems

CAUTION

Your boat must be properly winterized before storage. Failure to winterize the boat could result in damaged pipes, valves, faucets, tanks, hot water heater, and other components.

Engines

Refer to the OEM information for details on winterizing the engines.

Generator

Refer to the OEM information for details on winterizing the generator.

Marine Satcom Unit (MSU)

If your boat is equipped with a MSU, during off-season storage the unit should be deactivated. During winter storage the unit should be turned OFF.

CAUTION

If the boat is not stored in a heated facility you will need to remove the internal battery to prevent freeze damage. Refer to the OEM information for details on removal of the unit.

Air Conditioning System

Refer to the OEM information for details on winterizing the air conditioning system. Carver recommends that you have a qualified marina winterize your air conditioning system for you.

Fresh Water System

Refer to Section 4 - Fresh Water System for a diagram of your boat's fresh water system, including optional equipment.

CAUTION

When winterizing your boat's fresh water system, drain the entire system including the water heater.

Draining the System

1. On the AC Control Center, switch the Water Heater circuit breaker OFF.

CAUTION

Do not supply power to the water heater when it is empty. Doing so may damage the unit's heating element.

2. On the Safety Breaker Panel:

- a. Turn the Accessory Battery master disconnect switch to the ON position.
- b. Switch the Main - One circuit breaker ON.

- c. Verify that the Shower Sump circuit breaker is ON.
3. On the DC Control Center:
 - a. Switch the Main circuit breaker ON.
 - b. Switch the Water Pump circuit breaker ON.
4. Open all sink and shower faucets on the boat, including the faucets for the optional cockpit hand shower and cockpit fresh water washdown.
5. When there is no more water coming from any of the sink taps, shower heads, or washdown, switch the Water Pump circuit breaker OFF.
6. Drain the water heater. Refer to the OEM information for details on draining the water heater.

Winterizing the System

1. Pour 25 gallons of nontoxic recreational vehicle antifreeze into your boat's fresh water tank.

NOTE: *If the fresh water system loses pressure during this procedure, you will have to add more antifreeze into the water tank.*



DANGER

You must use a nontoxic, non-alcohol, RV-type (pink) antifreeze in your boat's fresh water system. Using the wrong type of antifreeze can damage the fresh water system. The repair of such damage is not included under the terms of the Carver Limited Warranty.

2. Close all faucets.
3. On the DC Control Center, switch the Water Pump circuit breaker ON.
4. If your boat does not have the optional grey water holding system, place a large bucket under the sump discharge fitting and galley sink drain fitting. This catches the antifreeze pumped out in the next step.
5. Open the galley sink cold water faucet. When a steady stream of antifreeze flows from the tap, close the faucet. Repeat this step for the galley hot water faucet, then for each cold and hot water faucet on the boat, except for the optional cockpit hand shower and cockpit fresh water washdown.

For the cockpit hand shower, place the shower head in a bucket before turning on the shower faucet. This catches the antifreeze, which can be reused. Proceed as described earlier in this step.

For the cockpit fresh water washdown:


- a. Remove the hose from the fresh water washdown fitting.
 - b. Place a bucket under the washdown fitting to catch the antifreeze, which can be reused.
 - c. Open the washdown faucet. When a steady stream of antifreeze flows from the fitting, close the faucet.
6. If your boat does not have the optional grey water holding system, pour one quart of antifreeze into the shower and each sink drain. Otherwise, refer to Grey Water Holding System, later in this section, to winterize the shower and sink drains.

Preparing the System for Use Again

When you remove your boat from storage and prepare to use it again, flush the entire fresh water system with fresh water. Nontoxic antifreeze is colored, so the water system is adequately flushed when uncolored water flows from all of the faucets and shower heads. You may need to fill the water tank more than once to flush the system.

Raw Water Washdown

Before performing this procedure on the optional transom raw water washdown, your boat should be pulled from the water.

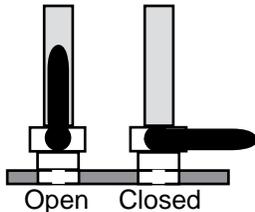

Refer to Section 4 - Raw Water Washdowns for a description of your boat's raw water washdown system.

1. Close the seacock that supplies the raw water washdown pump with seawater.
2. Disconnect the end of the hose that is attached to the washdown side of the seacock.
3. Place the disconnected hose end into a bucket that contains about a gallon of nontoxic recreational vehicle antifreeze.
4. Remove the hose from the transom raw water washdown fitting.
5. Place a bucket under the washdown fitting to catch the antifreeze, which can be reused.
6. On the Safety Breaker Panel:
 - a. Turn the Accessory Battery master disconnect switch to the ON position.
 - b. Switch the Main - One circuit breaker ON.
7. On the DC Control Center:
 - a. Switch the Main circuit breaker ON.
 - b. Switch the Washdown Pump circuit breaker ON.
8. When a steady stream of antifreeze flows from the washdown fitting, switch the Washdown Pump circuit breaker OFF.
9. Reconnect the hose to the washdown fitting.
10. Reconnect the hose that was disconnected in Step 2.

Bilge

Refer to Section 4 - Bilge System for a description of your boat's bilge system.

1. Open the hull drain. Leave the drain open while your boat is in storage.
2. Remove all water from the bilge.
3. Clean the bilge as described in Section 7 - Bilge System.

Sanitation System

Before performing this procedure on the sanitation system, your boat should be pulled from the water. Refer to the OEM information for more information on winterizing the sanitation system.

Refer to Section 4 - Sanitation System for a description of your boat's sanitation system.

There are two types of sanitation systems: the standard system and the overboard discharge system.

Standard Sanitation System

1. Empty the waste tank as described in Section 4 - Emptying the Waste Tank. Remove as much of the fresh water used in flushing the tank as possible.
2. Flush 4 gallons of nontoxic recreational vehicle antifreeze through the toilet and allow it to remain in the waste tank while the boat is in storage.
3. When you remove your boat from storage and prepare to use it again:
 - a. Pour 5 gallons of fresh water through the toilet.
 - b. Empty the waste tank as described in Section 4.
 - c. If the toilet uses seawater to flush, open the seacock that supplies seawater to the toilet. Flush the toilet a few times to prime the sanitation system.
 - d. Charge the waste tank by adding deodorizer. Use the brand of deodorizer recommended by your Carver Dealer.


Overboard Discharge System

1. Empty the waste tank as described in Section 4 - Emptying the Waste Tank. Remove as much of the fresh water used in flushing the tank as possible.
2. Flush 10 gallons of nontoxic recreational vehicle antifreeze through the toilet.
3. Under the boat, place a large bucket under the overboard discharge fitting to collect antifreeze pumped out later in this procedure. Refer to Section 9 - Thru-Hull Fittings for the exact location of the overboard discharge fitting.
4. Open the overboard discharge seacock.
5. If your boat has the optional grey water holding system, turn the Y-valve to select the waste tank.
6. On the Safety Breaker Panel:
 - a. Turn the Accessory Battery master disconnect switch to the ON position.
 - b. Switch the Main - One circuit breaker ON.
7. On the DC Control Center:
 - a. Switch the Main circuit breaker ON.
 - b. Switch the Waste Pump circuit breaker ON.
8. Turn the overboard discharge pump switch ON.
9. When a steady stream of antifreeze flows from the overboard discharge fitting, turn the overboard discharge pump switch OFF.

10. Close the overboard discharge seacock.
11. On the DC Control Center, switch the Waste Pump circuit breaker OFF.
12. When you remove your boat from storage and prepare to use it again:
 - a. Pour 5 gallons of fresh water through the toilet.
 - b. Empty the waste tank as described in Section 4.
 - c. If the toilet uses seawater to flush, open the seacock that supplies seawater to the toilet. Flush the toilet a few times to prime the sanitation system.
 - d. Charge the waste tank by adding deodorizer. Use the brand of deodorizer recommended by your Carver Dealer.

Grey Water Holding System

Before performing this procedure on the optional grey water holding system, your boat should be pulled from the water. Winterize the grey water holding system only after you have winterized the fresh water system.

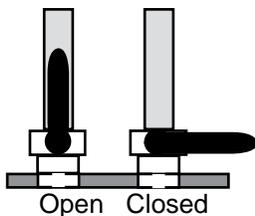

Refer to Section 4 - Grey Water Holding System for a description of your boat's grey water holding system.

There are two types of grey water holding systems: the standard system and the overboard discharge system.

Standard Grey Water Tank System

1. Empty the grey water tanks as described in Section 4 - Grey Water Holding System. Remove as much of the fresh water used in flushing the tanks as possible.
2. On the Safety Breaker Panel, verify that the Shower Sump circuit breaker is ON.
3. Pour 3 gallons of nontoxic recreational vehicle antifreeze through the shower and each sink drain.
4. When you remove your boat from storage and prepare to use it again:
 - a. Pour 5 gallons of fresh water through the shower and each sink drain.
 - b. Empty the grey water tanks as described in Section 4 - Grey Water Holding System.
 - c. Charge the grey water tanks by adding deodorizer. Use the brand of deodorizer recommended by your Carver Dealer.

Overboard Discharge System

1. Empty the grey water tanks as described in Section 4 - Grey Water Holding System. Remove as much of the fresh water used in flushing the tanks as possible.
2. On the Safety Breaker Panel:
 - a. Turn the Accessory Battery master disconnect switch to the ON position.
 - b. Switch the Main - One circuit breaker ON.
 - c. Verify that the Shower Sump circuit breaker is ON.

3. Pour 3 gallons of nontoxic recreational vehicle antifreeze through the shower and each sink drain.
4. Under the boat, place a large bucket beneath the grey water overboard discharge fitting to collect antifreeze pumped out later in this procedure.
5. Open the grey water overboard discharge seacock.
6. Turn the Y-valve to select the grey water tanks.
7. On the DC Control Center:
 - a. Switch the Main circuit breaker ON.
 - b. Switch the Waste Pump circuit breaker ON.
8. Turn the overboard discharge pump switch ON.
9. When a steady stream of antifreeze flows from the overboard discharge fitting, turn the overboard discharge pump switch OFF.
10. Close the overboard discharge seacock.
11. Switch the Waste Pump circuit breaker OFF.
12. When you remove your boat from storage and prepare to use it again, flush and pump out the grey water tanks to remove the antifreeze.

Exterior

Wash the exterior of the boat, particularly the underwater portions. Remove as much aquatic growth as possible while it is still wet. Once the growth has dried it is more difficult to remove.

Check the zinc sacrificial anodes for deterioration. If the zincs show signs of deterioration have them replaced before spring launch. Check stainless steel rails and fittings for signs of rust. Remove rust prior to winter lay-up. Inspect the underwater portions of the hull. Review anything that looks out of the ordinary with your Carver Dealer.

Interior

Air out the cushions and make sure they are dry. Storing damp cushions leads to mildew. Position the cushions so air can circulate around them. Purchase and position moisture accumulators throughout the boat. These help reduce the amount of moisture that accumulates during storage. Remove everything from the boat that could spoil or freeze while the boat is stored. Also remove all dried food. Food attracts mice and insects.

To give your boat the maximum protection while it is in storage, Carver recommends that you place your boat in dry, as opposed to wet, storage.

Protecting the boat from the elements during winter storage is advised. Have your marina shrink wrap the boat or have a winter storage cover made. Occasionally check on the boat while it is in storage to make sure that it is in good condition.

Storage

Dry Storage

If your boat will be in outside storage, properly support a storage cover and secure it over the boat. Do not secure the cover to the boat too tightly. Allow adequate ventilation to protect against dry rot. Do not store the boat in a damp storage enclosure. Purchase and position moisture accumulators between the shrink-wrap and your boat's enclosures to help prevent moisture from accumulating. Excessive dampness can lead to mildew, electrical problems, corrosion and dry rot.

NOTE: Do not use the bridge enclosure canvas in place of a winter storage cover. This canvas is not designed for long-term storage purposes. The life of the enclosure canvas may be significantly shortened if it is exposed to harsh weather for prolonged periods.

Wet Storage

Wet storage procedures vary from region to region. Consult your Carver Dealer before preparing to leave your boat in the water over the winter.

Spring Recommissioning Checklist

Before launching your boat, complete the following.

Hull

- Fill gelcoat nicks and gouges
- Inspect props, struts, rudders
- Inspect thru-hull fittings
- Apply new antifouling bottom paint or touch up failing areas
- Buff out minor hull scratches
- Remove dirt, stains
- Apply wax

Deck and Cabin

- Inspect hatches and windows for leaks
- Wax non-walk surfaces

Engines

- Follow manufacturer's recommissioning guidelines
- Inspect belts, hoses
- Replace fuel filters

Electrical System

- Check battery water level
- Charge batteries
- Inspect connections for corrosion

Plumbing

- Purge fresh water system of antifreeze
- Replace Sealand vent filters.
- Inspect seacocks
- Inspect heads
- Chemically charge waste and grey water tanks
- Fill fresh water tank

Safety Equipment

- Inspect PFDs
- Replace old distress signals
- Inspect fire extinguishers
- Inspect, test bilge pumps
- Inspect mooring lines, fenders
- Test, recalibrate and/or replace CO detectors

After Launch

- Check for engine cooling water flow
- Check propeller shaft alignment
- Check propeller shaft seals
- Check crankcase (boat must be in-water)
- Check transmission oil levels
- Have compass professionally calibrated
- Inspect thru-hulls, exhaust, etc.

This page intentionally left blank.

Warranty Information

Carver warrants every boat we manufacture as explained in the Carver Limited Warranty. Your copy of the warranty is located at the end of this section. Please review the warranty carefully.

To ensure that the warranty remains in effect during its lifetime, Carver Boat Corporation, your Carver Dealer, and you must each uphold specific responsibilities. Carver's responsibilities are described in the Carver Limited Warranty.

Carver Dealer's Responsibilities Warranty Information

Your Carver Dealer will review the terms of the warranty and make certain the warranty is registered with Carver. Your Dealer will also instruct you on how to obtain warranty service.

Pre-Delivery Service Procedure

Your Carver Dealer will prepare your boat for delivery in accordance with the procedures detailed on the Pre-Delivery Service Record. Your dealer will sign the Pre-Delivery Service Record and provide you with a copy.

Registration of your boat and its engines is required by the Federal Safe Boating Act of 1971. Your Carver Dealer will complete and mail your engine warranty cards as part of the Pre-Delivery Service procedure.

Boat and Systems Review

A representative from your Carver Dealer will review the operation of your boat and its systems with you.

Owner's Responsibilities

Pre-Delivery Service Record

Verify that the boat's pre-delivery service record has been completed and mailed to Carver. The pre-delivery service record is located in the Preface of this guide. Review the Pre-Delivery Service procedure with your dealer. Read the Pre-Delivery Service Record. Be certain you sign a copy of the Pre-Delivery Service Record and retain a copy for your records.

OEM Components

Many of the OEM components installed in your boat are warranted by their respective manufacturers. To activate these warranties, complete and mail all OEM warranty cards. The warranty card for each component that is warranted is located with its respective OEM information. Many of these OEMs also have programs designed to resolve any problems you may experience with their products. Your Carver Dealer can assist you when necessary in gaining access to these programs.

NOTE: All warranty cards must be completed and forwarded to the appropriate company within 5 days of taking delivery of your boat.

Delivery

At the time of delivery, make a complete inspection of the boat and its systems. Document any work that needs to be completed by the dealer in order to meet the terms of your agreement.

Owner's Information Kit

Read, understand and follow the instructions in this Owner's Guide and all other guides and manuals supplied with your boat, including all OEM information.

Contact your Carver Dealer if you have any questions regarding warranty responsibilities.

Obtaining Warranty Service

The following requirements must be met before warranty work can be performed on your boat.

1. Your boat must be registered with the Carver Boat Corporation. Registration is accomplished by completing, then submitting the Pre-Delivery Service Record to the Carver Boat Corporation, P.O. Box 1010, Pulaski, WI 54162-1010.
2. Pre-Delivery Service must be completed by your Carver Dealer. Information concerning Pre-Delivery Service can be found in the preface of this manual. The Pre-Delivery Service Record must be signed by both the dealer and the owner.

NOTE: Your Carver Dealer is the ONLY person authorized to approve warranty work. If warranty service is needed you MUST contact your Carver Dealer first. There are no exceptions to this policy.

Your Carver Dealer has knowledgeable professionals who are familiar with your boat and are capable of providing the highest level of service. The Carver Dealer's service personnel will communicate with the Carver Boat Corporation to ensure that you receive fast and satisfactory solutions to any problem that may arise.

Second and Third Owner Registration

A "Second Owner Registration" card and "Third Owner Registration" card are located in the Preface of this Owner's Guide. The purchaser of a previously-owned Carver boat should complete the appropriate card and mail it as soon as taking title to the boat.

Registration of a previously-owned Carver boat does not extend or in any way modify the boat's original limited warranty. However, purchasers of a previously-owned Carver boat should register the boat so that, if it is ever necessary, Carver can contact you.

OEMs

Whenever you need information about a system or component on your boat, contact your Carver Dealer first. If your Dealer is unable to provide the information, contact the manufacturer (OEM) of the system or component. Refer to the OEM information for telephone numbers and addresses.

When contacting an OEM for information, be ready to provide the component's serial number. A Serial Number Record Sheet is provided on the following pages. Use this sheet as a convenient location to record the serial numbers of your boat's OEM components.

Specifications


The specifications listed here are based on a standard model with no options installed. Certain options may change some of these specifications.

| | | | |
|---|----------------|-----------|---------------|
| Length Overall (LOA) <i>with platform</i> | 39'11" | | 12,17 m |
| Beam | 13'5" | | 4,09 m |
| Draft | 31.5" | | 0,8 m |
| Bridge Clearance <i>with arch</i> | 14'1" | | 4,29 m |
| Weight <i>with fuel and water</i> | 25,839 lbs. | | 11721 kg |
| Water System | 86 U.S. gals. | | 325.5 liters |
| Waste System | 25 U.S. gals. | | 94.6 liters |
| Fuel System | 334 U.S. gals. | | 1264,3 liters |
| Cabin Headroom | 6'7" | | 2 m |
| Sleeps | 4 | | |


Component Locations

The illustrations on the following pages show the locations of various components, deck plates, and thru-hull fittings discussed throughout this guide.

Deck Plates

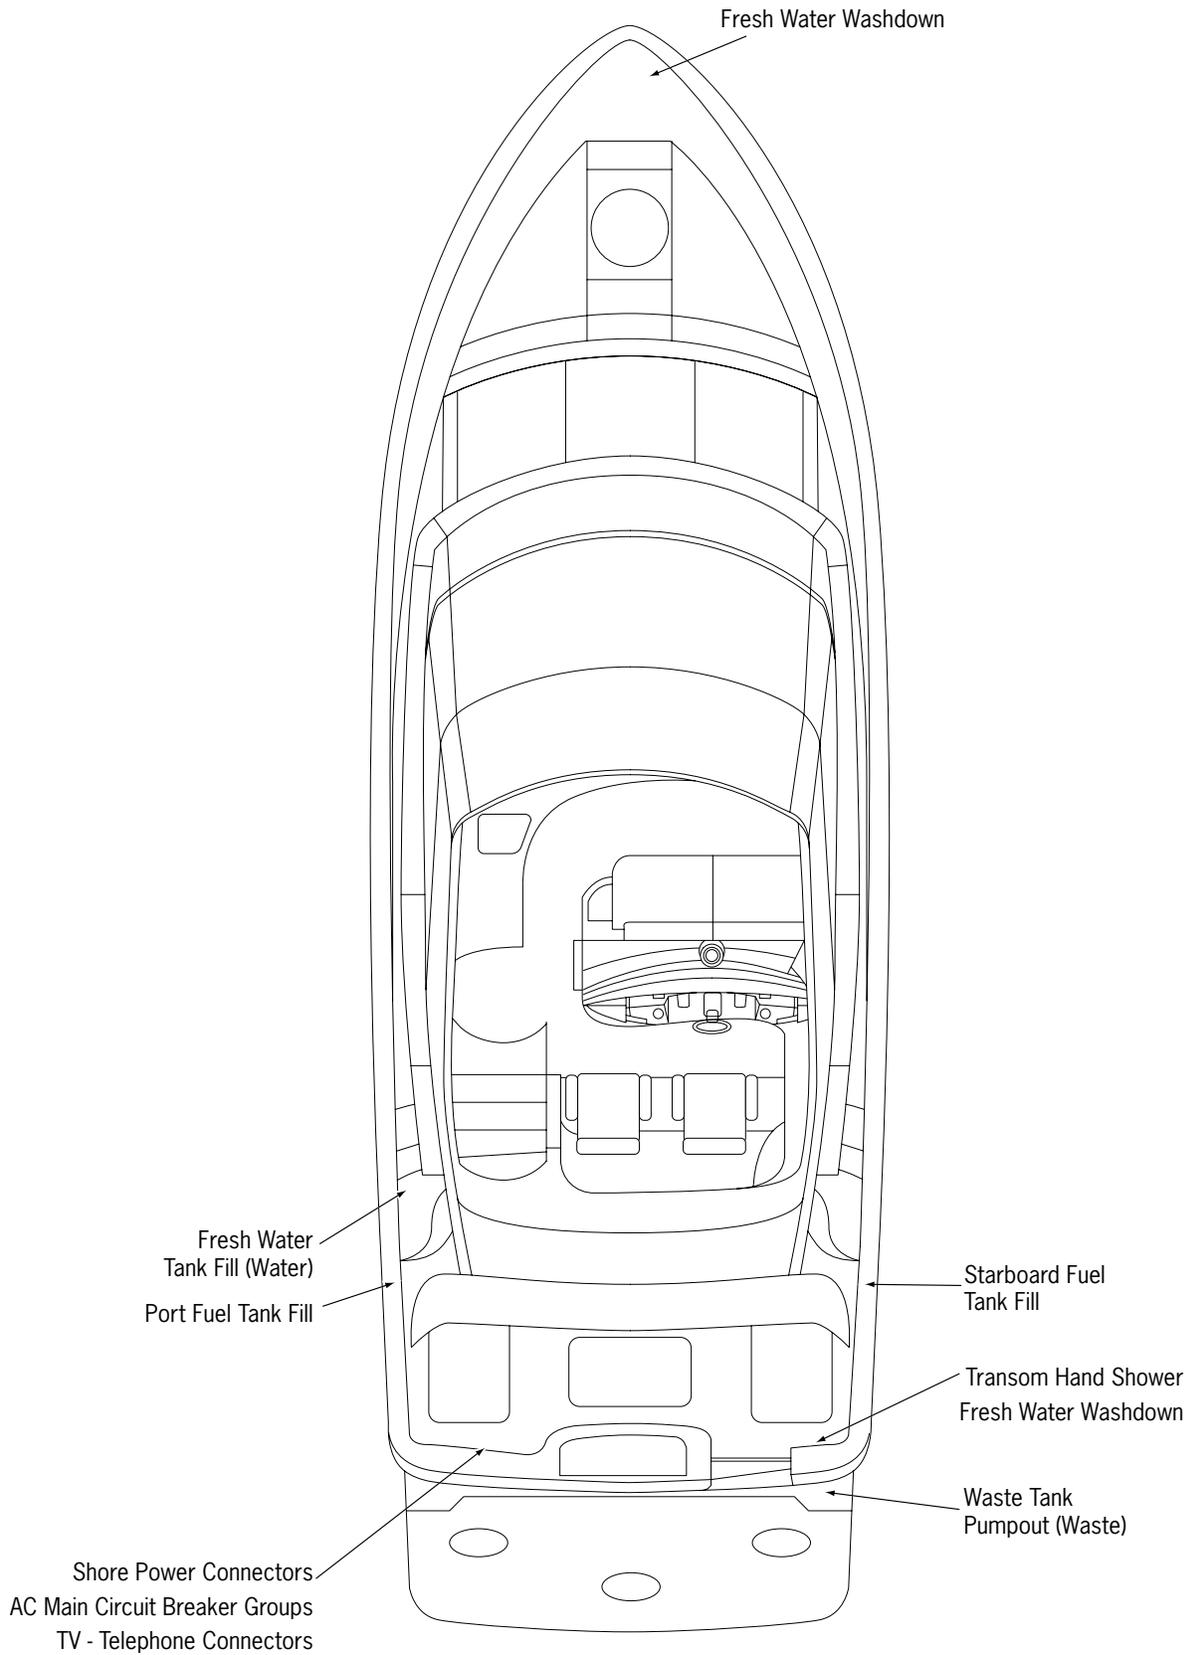


Thru-Hull Fittings

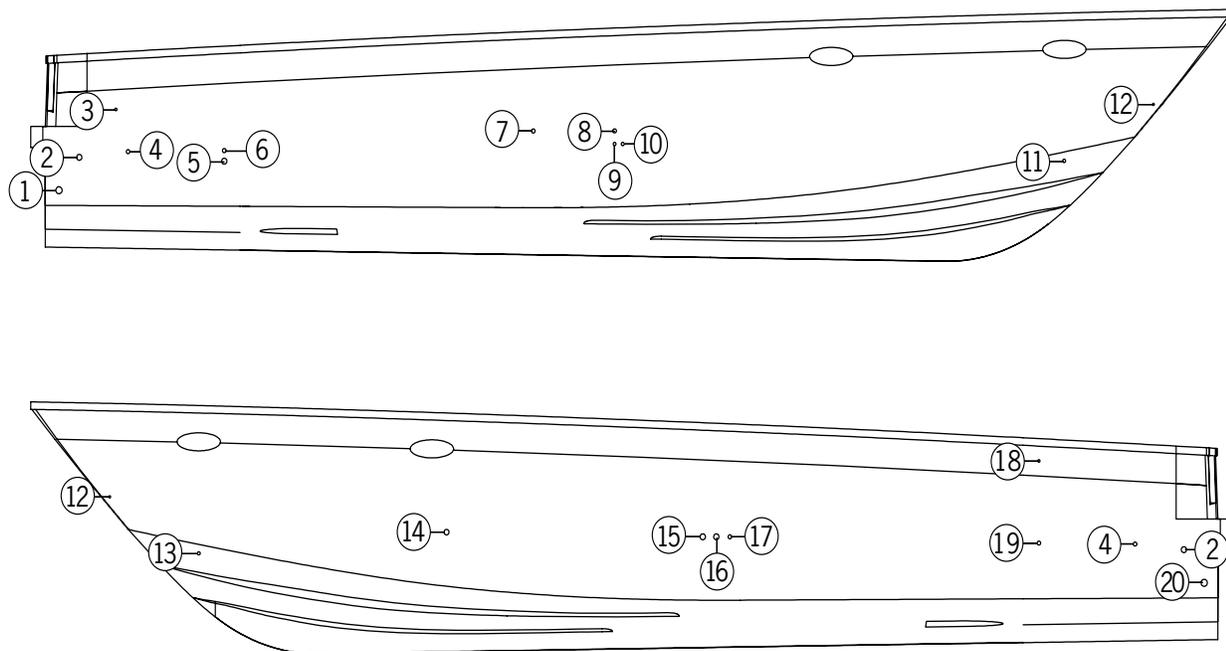


1. Starboard Propulsion Engine Exhaust
2. Generator Exhaust
3. Overboard Discharge Vented Loop
4. Rod Holder Drain
5. Manual Bilge Pump Discharge
6. Aft Bilge Pump Discharge
7. Amidships Bilge Pump Discharge
8. Forward Bilge Pump Discharge
9. Sump Discharge or Grey Water Tank Vent
10. Salon Air Conditioning Condensation Drain
11. Salon Air Conditioning Unit Seawater Discharge
12. Rope Locker Drain
13. Forward Stateroom Air Conditioning Unit Seawater Discharge
14. Head Sink Drain
15. Waste Tank Vent
16. Galley Sink Drain
17. Water Heater Drain
18. Wetbar Drain
19. Fresh Water Tank Vent
20. Port Propulsion Engine Exhaust

Thru-Hull Fittings

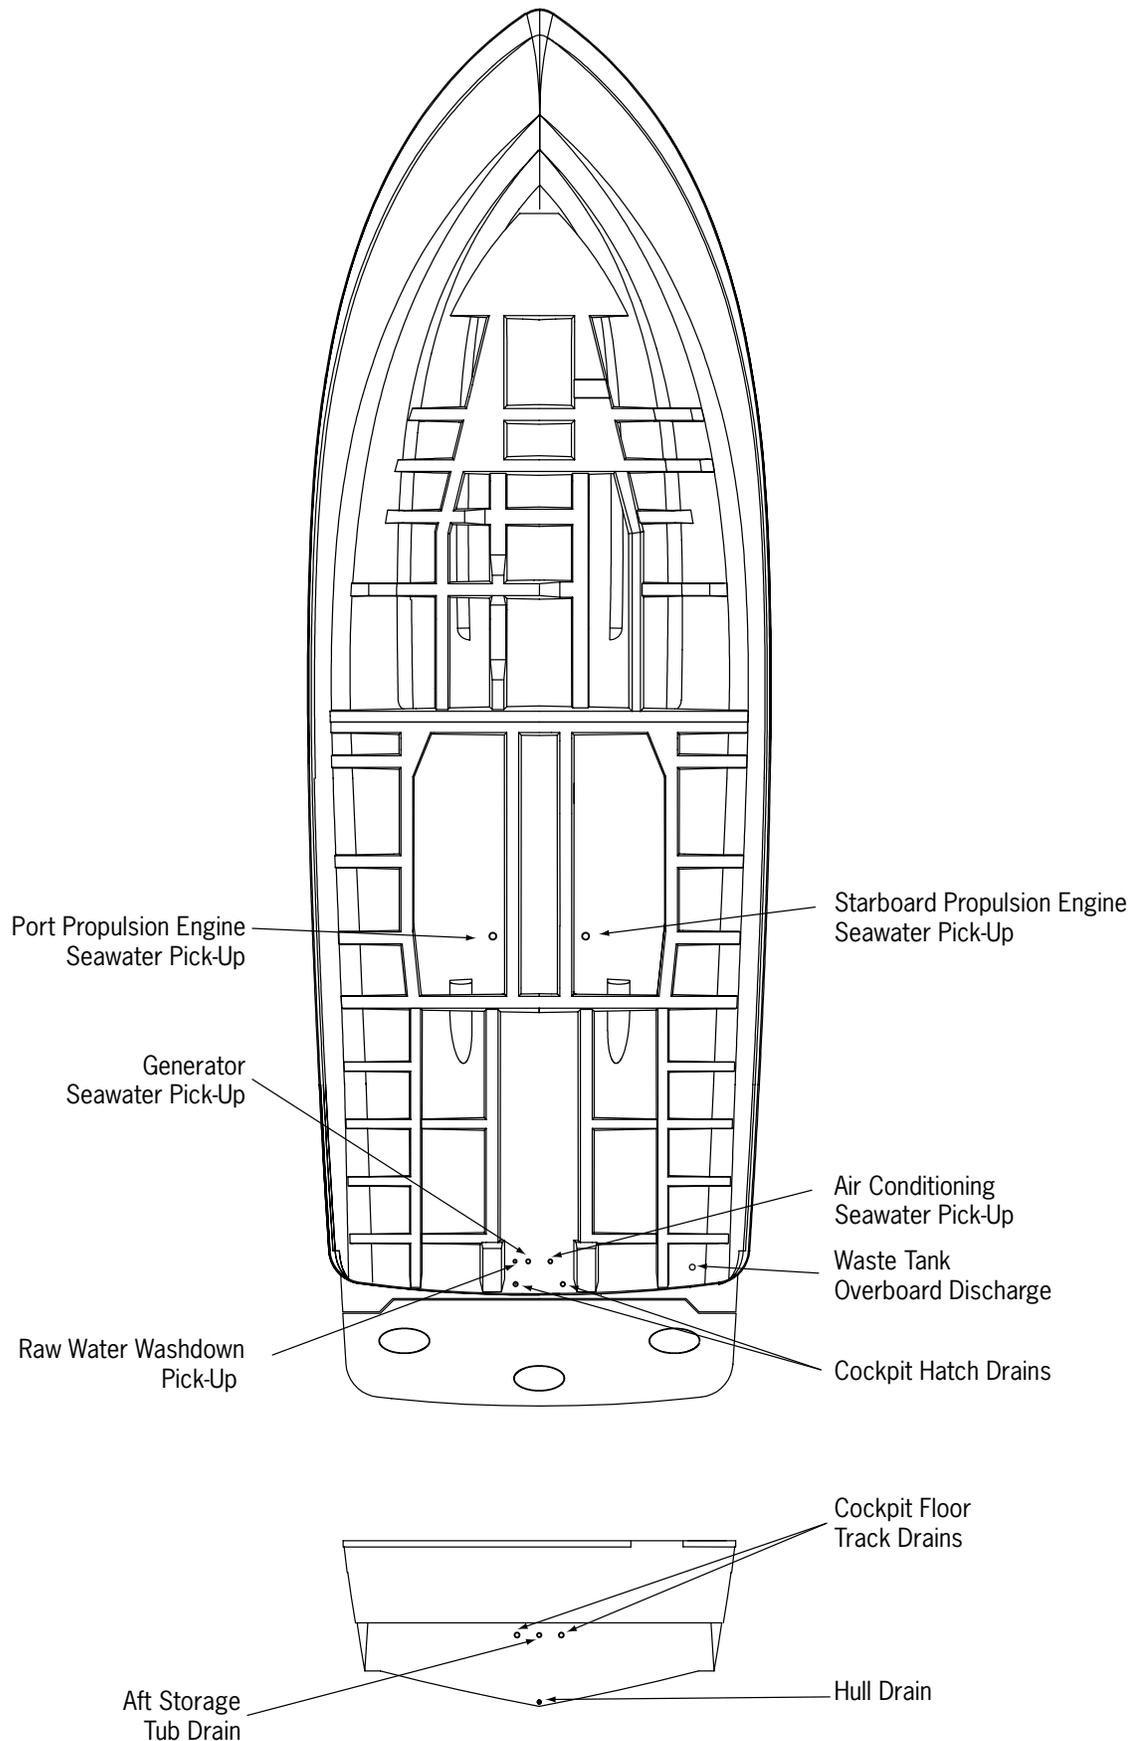

Hatches

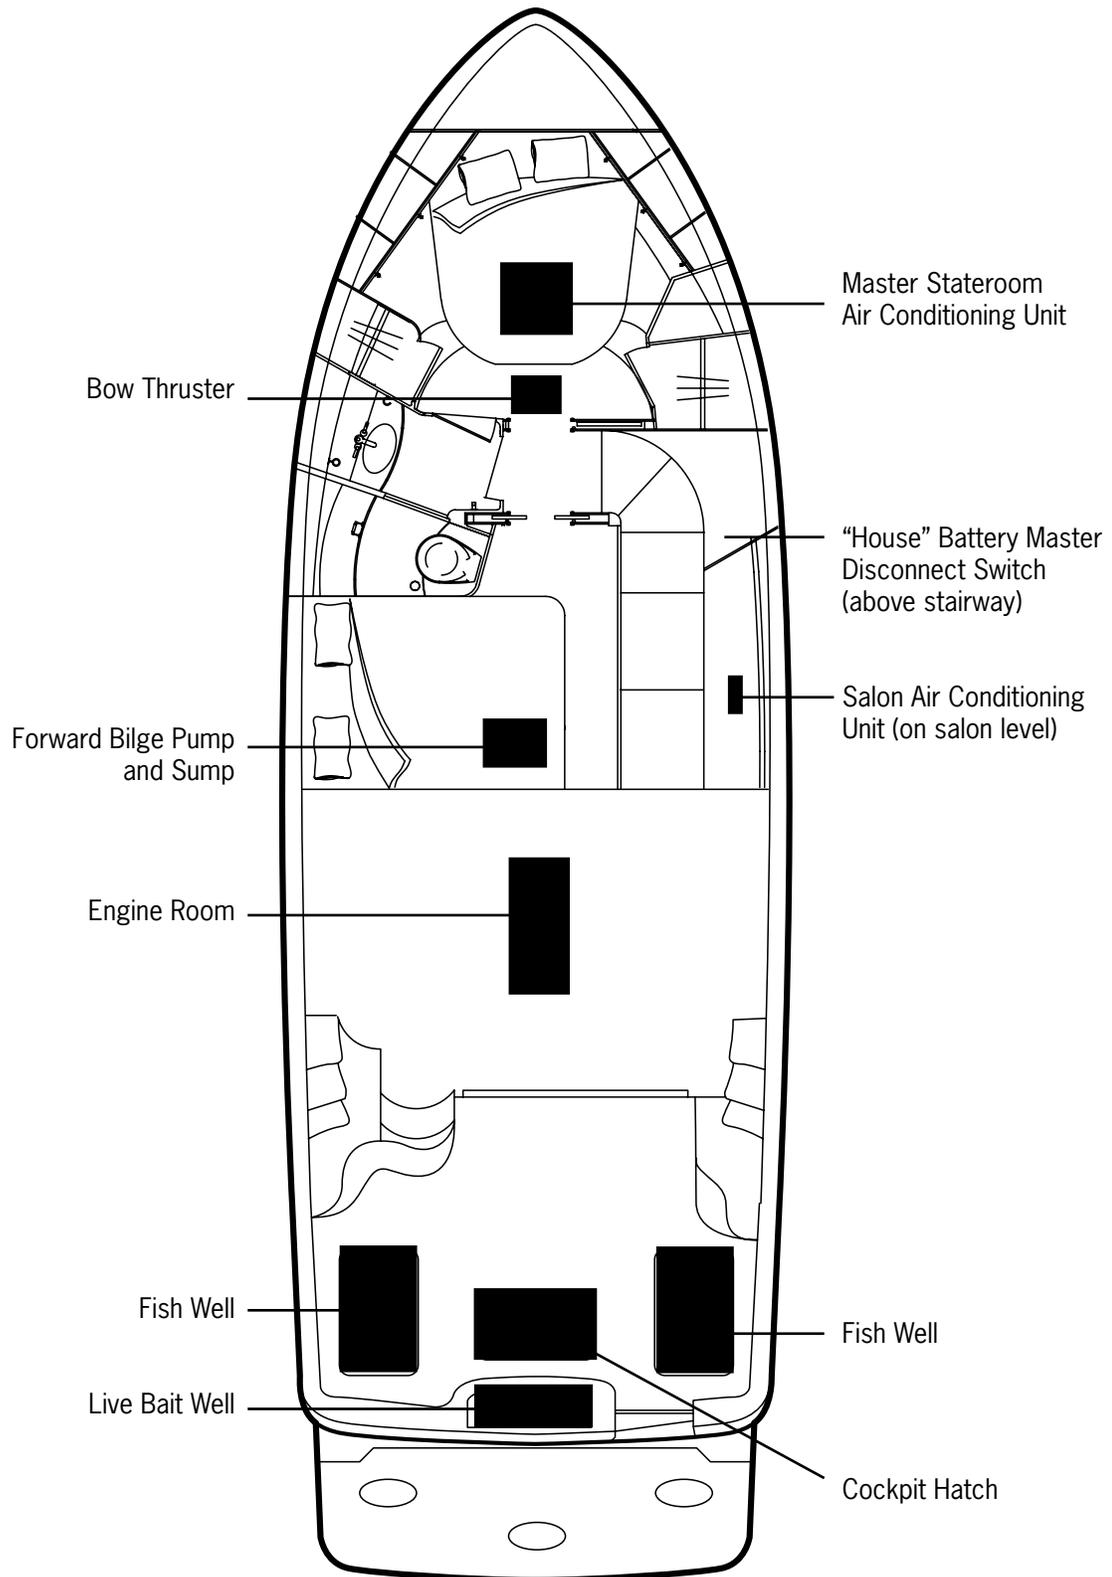

Bill of Material

Carver Limited Warranty

This page intentionally left blank.